


# TE0320 Push-Buttons S3 and S4

TE0320 is provided with 2 user buttons. A signal listed in the table below is set low (logical 0) when a push button is pressed, and vice-versa.

switch	signal	FPGA ball	FPGA pin	bank	default input	input when pressed
S3	PB1	U23	IO_L23P_1	1	logical 1	logical 0
S4	PB2	R22	IO_L25N_1	1	logical 1	logical 0


User push-buttons signal details.

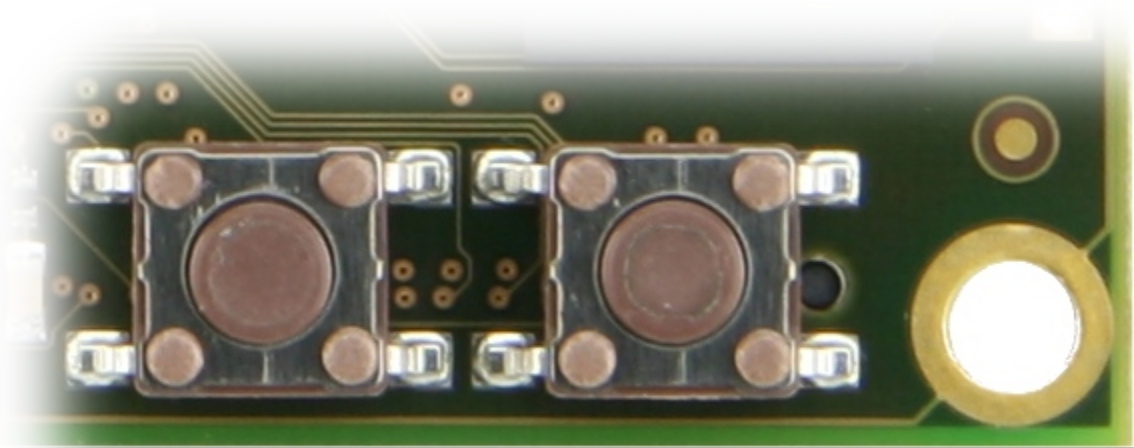

**S4 - PB2**

**S3 - PB1**

Push buttons PB1 and PB2.

 On some boards, PB1 and PB2 labels might be exchanged. Please take Figure above as reference.