

## USB FX2 API Commands

They could be considered the *actual* FW API: MB API Commands and SPI Flash Commands can be used only as content of a byte array defined by USB FX2 API Commands.

The first byte sent by `TE_USB_FX2_SendCommand()` should always be a USB FX2 API Command.