

GET_INTERRUPT command

This command pulls the number of received interrupts and received data (number of bytes set by SET_INTERRUPT command) from the USB FX2.

An alternate name for this USB FX2 API command could be GET_AUTORESPONSE.

Byte	Value	Description
1	0xB1	GET_INTERRUPT command ID
From 2 to 64	-	Not used

GET_INTERRUPT Command Packet Layout.

Byte	Description
1	Interrupt number If zero means that GET_INTERRUPT has not been able to retry data because the interrupt created by SET_INTERRUPT has not yet been serviced.
From 2 to size+1	Interrupt data
From size+2 to 64	Not used

GET_INTERRUPT Reply Packet Layout.