


TEM0002 Getting started

Table of Contents

- [Overview](#)
- [Power supply](#)
- [JTAG/UART](#)
- [User LED and Button](#)
- [Reference Design](#)
- [Notes](#)

Overview

TEM00002-01

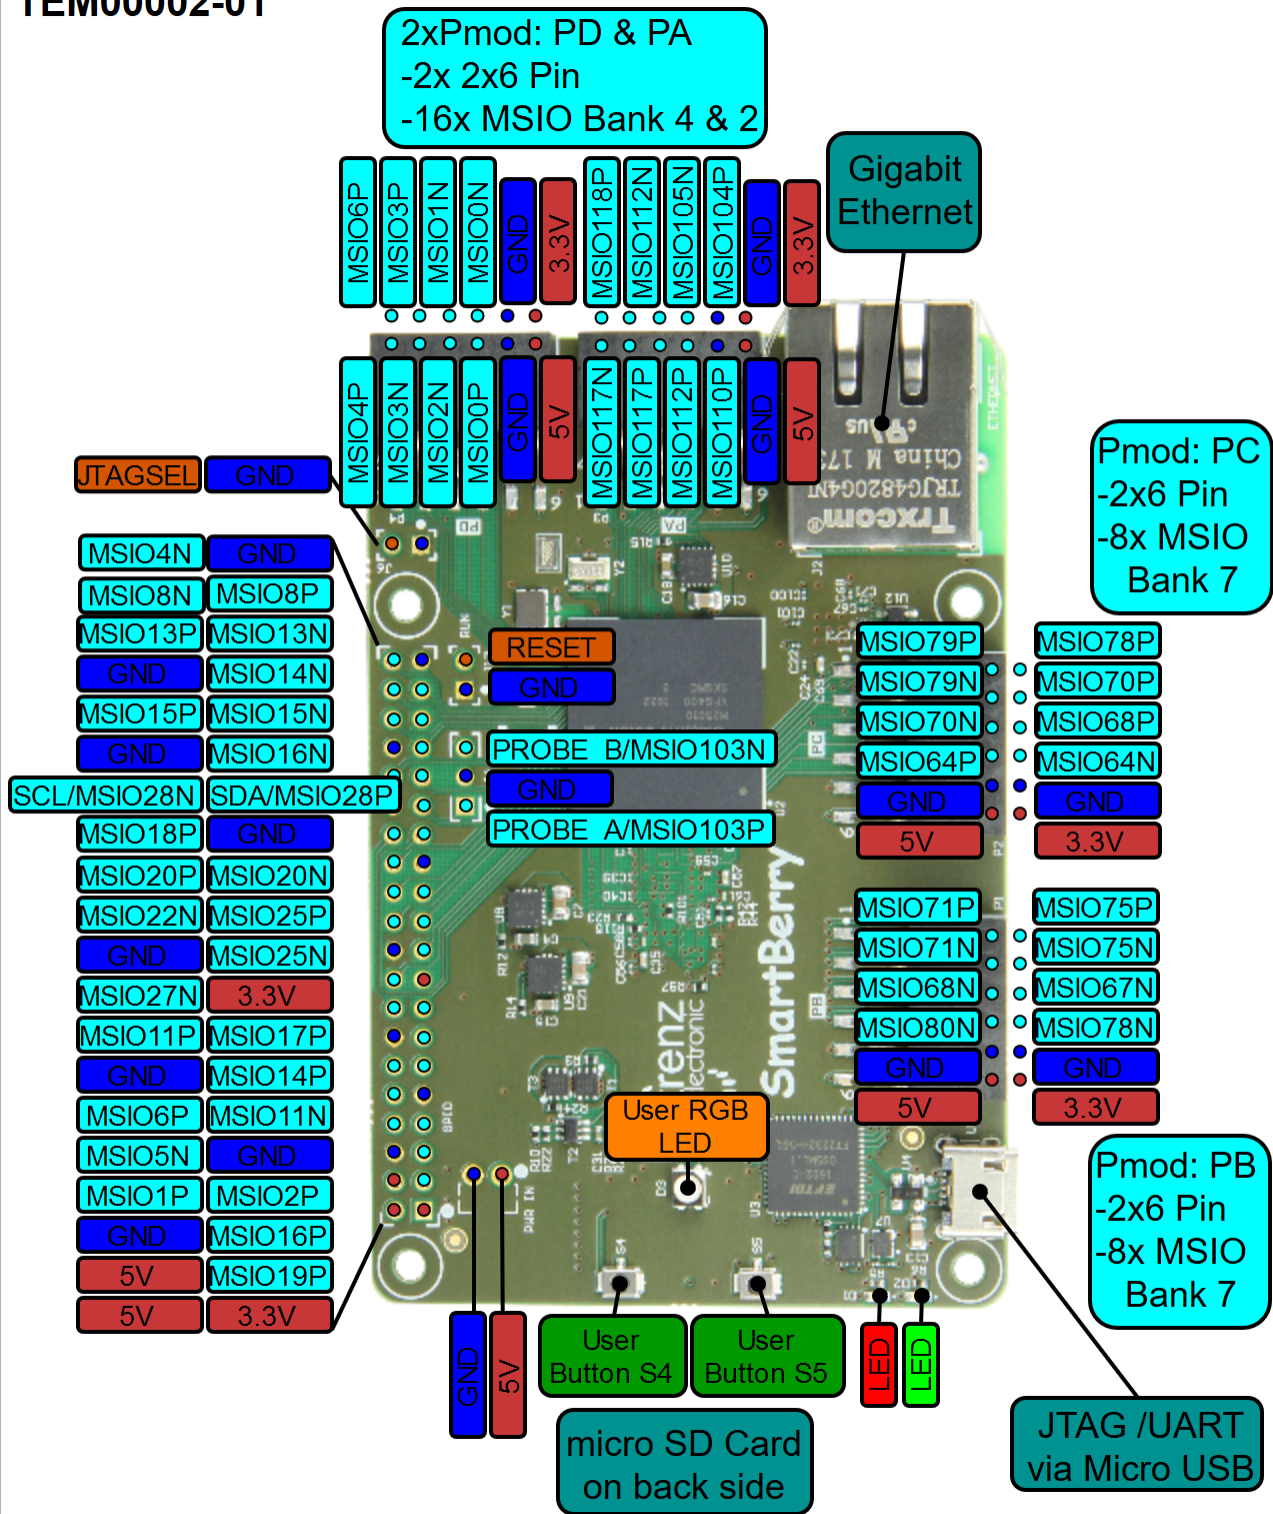

Power supply

Over Micro USB or VIN Pin (5V) possible.

JTAG/UART

JTAG (first FTDI port) and UART (second FTDI port) is over MicroUSB connector possible. External JTAG Programmer is not needed.

Reset: J13.

User LED and Button

See overview picture. Connection compare Table 9 and 10 in [TEM0002 TRM](#).

Reference Design

- [TEM0002 Reference Design Download](#)

Notes

- [TEM0002 Resources](#)