TEM0002 Webserver Demo1

1 Overview	1 Overview						
° 1.1 K	ey Features						
	evision History	ow Issues					
° 1.4 R	leguirements	01/13005					
This demo is a Webs Real Time Clock and ° 1.5 C	ervel Which thinkes S the bill Board Medes.	martFusion2 SoC AR	M Cortex-M3, Ethern	et, USB / COM-port,			
The demo is offered and the second one • 2 Design Flow	in two variants 98 new which stored to the e	ଲିଟିନି is stored into the external DDR3/L SDR	e embedded non-volat AM memory and there	ile memory (eNVM) efore volatile.			
Refer to http://thenz.co documentation. 3.1 C 3.2 D	org/tem0002-info for th connecting priver check	ne current online versi	ion of this manual and	d other available			
Key Feature	rogramming the Hard ART connection logramming a Softwa	ware design ire project					
 4 System Des Libero 42.4 SoftCoqsol 	ign - Libero mart D(ଟେନ୍ତ୍ରିନେ IDE) ଦେନିି traisoftware IDE)						
• 5 Songatos	67ga.1 Streeneal time	e operating system)					
● IWIP01. 5 .1 A	pplica (ilightweight IP)						
• LIART	5.1.1 Demo - Wei	oserver					
DDR	■ 512 Reference	Design - HelloWorld					
• 6 eNXMA Ch	ange History and Leg	al Notices					
• UsepLED a	Compent Change His	tory					
• ReabTime 🕻	dgakNotices						
° 6.3 🖸	Data Privacy						
° 6.4 🖸	ocument Warranty						
RevisionH	IStory Liability						
° 6.0 C ° 6.7 T	echnology Licenses						
0.7 C	nvironmental Protecti		Authoro	Description			
○ 6.9 R	EACH, RoHS and WI		Authors	Description			
2020-11-23	12.4	TEM0002- SmartBerry_Webser	Kilian Jahn	Added "Hello			
		ver-Demo_Libero- 12.4. 20201123-		VVorld" (into SoftConsole			
	1511 .zip Soliconsole						
• Demo							
Webserver ported from							
	Libero 11.8						
Improved its							
	User Interface						

Design Revision History

2018-02-26

Release Notes and Know Issues

11.8

Issues	Description	Workaround/Solution	To be fixed version
Webserver Demo Google search page	Search fails	Unknown	Unknown

Smartberry_Webser ver_Demo.zip

Initial release

Known Issues

Requirements

Software

Software	Version	Note
Windows 10	2004 / 19041	
Libero Release	12.4	
SoftConsole	6.2	Included in the Libero installation
Microsemi Flash Pro 5 module driver	2.10.0.0	Utilize onboard programmer and USB / comport connection. Included in the Libero installation
FTDI Driver for the TEM0002 module	2.12.28.0	
UART / COM-port terminal		Capturing the modules messages
Web browser		Optional for the Demo Webserver, an ordinary Web browser (supporting MS-HTML > 6.0)

Software

Hardware

Design supports following modules:

Module Model	Board Part Short Name	PCB Revision Support	DDR	embedded SI	RAMmbedded Fl	asiNotes
TEM0002-01- 010C	SmartBerry	REV01	1 GBit / 128 MB	64 kB	256 kB	NA

Hardware Modules

Additional hardware Requirements:

Additional Hardware	Notes
Demo host computer	Demo was created and tested on windows
Micro USB to USB Type A Cable	Power supply, JTAG: Programming the board, UART: Communication Interface to the board.
ETH cable	Hardware for the Demo Webserver.
Router / LAN to USB bridge	Hardware for the Demo Webserver.
Additional Hardware	·

Content

Content of the zip archive "TEM0002-SmartBerry_Webserver-Demo_Libero-X.y_Datum-Time":

Design Sources

Туре	Location	Notes
Libero	<zip archive=""> / Libero-X.y_Referenz- Design_XY</zip>	Libero Project containing the modules Hardware Reference Design
SoftConsole	<zip archive=""> / Softconsole-X.y- Workspace / Smartberry_Hello_World_X.y / Smartberry_Webserver_X.y / Smartberry_Webserver_DDR_X .y</zip>	SoftConsole Workspace contains the Software Projects : Hello_World and two variants of the Demo : Smartberry_Webserver
SoftConsole	<zip archive=""> / Softconsole-X.y- Workspace / microsemi- smartfusion2-smartberry-ddr .cfg</zip>	Board configuration file, needed to debug / run applications

Design sources

Download

The Trenz Electronic Reference Designs and Demos are usable with the specified Microsemi Libero / SoftConsole version. Usage of a different Microsemi Libero / SoftConsole software versions is not recommended.

Reference Designs / Demos are available via the following link:

• TEM0002_Reference Designs/Demos

The download is a ZIP compressed archive. Extract the archive before usage.

Design Flow

The Hardware and Software Reference / Demo -Designs Projects are available as a prebuild zip archive. The archive contains a **Libero Hardware Project** and a **SoftConsole Workspace** folder, they were created and tested in windows environment.

This SoftConsole Workspace contains the Software Project Hello World and the Demo Webserver, the demo is offered in two variants. The **board configuration file** "microsemi-smartfusion2-smartberry-ddr. cfg" is required for the usage of the Software projects via the IDE SoftConsole.

Launch

Executing a Reference / Demo Design on a module requires the powering of it and a JTAG or UART Connection for Programming and Communication. Often the programming is a two fold process, where the first programming configures the FPGA and the second programming flashes Software code to be executed inside the FPGA / ARM processor.

Connecting

Connect the modules micro USB connector to your host pc, this enables the powering of the module and a simultaneous JTAG and UART connection .

Only necessary for running the Demo Webserver:

The demo is configured to establish a network connection via the DHCP protocol, therefore, if a a free router port is used, no further port setup is required.

If a "direct Ethernet Connection" between Host PC and module is used, the user must know how to setup this connection type. Further down in this chapter is explained how to setup the Demo Webserver and recompile it, so that it uses a static IP.

Driver check

When the module is connected via USB cable to your demo host computer, in the Windows Device Manager appear the following tree board driver related devices:

In section Ports (COM & LPT):

FlashPro5 Port (ComX)

In section Universal Serial Bus controllers:

- USB FP5 Serial Converter A
- USB FP5 Serial Converter B

The Device Manager is accessible via "Right mouse click context menu" from the Windows Start Menu Button. When these devices are not visible, the driver installation through libero could be faulty.

Programming the Hardware design

Programming of the Hardware reference Design requires to open the FPGA Design IDE Libero



Libero GUI "Run PRGORAMM ACTION"

The Hardware Reference Design can be opened via "Project > Open Project" in the top right corner of Libero (picture above - upper green rectangle). A file dialogue opens, point the dialogue along the extracted download to the folder containing the Hardware Reference Design.

Disk :\ Path-to-the-Demo-archive \ Extracted ZIP-archive \ Libero-X.y_Referenz-Design\

Double left mouse click onto the project file "Referenz-Design_XY .prjx" to open it. The board is automatically selected and setup to be flashed by Libero.

In the upper left section of Libero, select the tab "Design Flow" (picture above - lover green rectangle) and flash it to the board via "Program Design > and double left mouse click onto "Run PROGRAM Action" (picture above - row with blue background).

Warnings should not affect the functionality of a Reference / Demo -Design.

UART connection

Before flashing any Software Project to the module, open a comport terminal to the boards comport, so that it's messages can be captured.

Programming a Software project

Open SoftConsole and press "Browse..." near the right edge. A file dialogue opens, point the dialogue along the extracted download to the folder containing the SoftConsole Workspace.

Disk :\ Path-to-the-Demo-archive \ Extracted ZIP-archive \ Softconsole-X.y-Workspace \

Confirm your selectioin by pressing "Ok", the dialogue closes, and open The SoftConsole by pressing "Launch"



SoftConsole "Select the Workspace"

Subsequently the program opens and shows the software project's who are contained inside the workspace to the left, under "Project Explorer".



SoftConsole GUI

To simply run a Project, press the triangle right to the button marked with a "R" in the picture above and select a variant of the demo.

Pressing the triangle next to the button marked with "D" let you select which variant to be executed in debug mode.

Debug controls - Resume - Pause - Stop



SoftConsole "Debug controlls"

Switch between Debug and Run perspective (upper right corner program window)



System Design - Libero

Smart Design



Block Design

Constrains

us	ser.pdc
#	Microsemi I/O Physical Design Constraints file
#	User I/O Constraints file
#	Version: v12.4 12.900.0.16
#	Family: SmartFusion2 , Die: M2S010 , Package: 400 VF
#	Date generated: Mon Nov 16 11:11:16 2020
# # #	User Locked I/O Bank Settings
# # # #	Unlocked I/O Bank Settings The I/O Bank Settings can be locked by directly editing this file or by making changes in the I/O Attribute Editor
# #	User Locked I/O settings

#

```
set_io Eth_LED1A \setminus
-pinname Y10 \
-fixed yes \setminus
-DIRECTION OUTPUT
set_io Eth_LED1B \
-pinname U12 \setminus
-fixed yes \setminus
-DIRECTION OUTPUT
set_io Eth_LED2A \setminus
-pinname V14 \
-fixed yes \setminus
-DIRECTION OUTPUT
set_io Eth_LED2B \setminus
-pinname U14 \setminus
-fixed yes \setminus
-DIRECTION OUTPUT
set_io GLED \setminus
-pinname G17 \setminus
-fixed yes \
-DIRECTION OUTPUT
set_io GPIO_5_F2M_taster_S4 \
-pinname E17 \setminus
-fixed yes \setminus
-DIRECTION INPUT
set_io GPIO_6_F2M_taster_S5 \
-pinname E16 \setminus
-fixed yes \setminus
-DIRECTION INPUT
set_io MAC_GMII_MDC \setminus
-pinname N1 \setminus
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION OUTPUT
set_io PHY_LED0 \
-pinname Ull \
-fixed yes \setminus
-DIRECTION INPUT
set_io PHY_LED1 \
-pinname T14 \setminus
-fixed yes \setminus
-DIRECTION INPUT
```

```
set_io {PHY_RD[0]} \
-pinname K5 \setminus
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION INPUT
set_io {PHY_RD[1]} \
-pinname H1 \setminus
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION INPUT
set_io {PHY_RD[2]} \
-pinname H2 \setminus
-fixed yes \
-iostd LVCMOS15 \setminus
-DIRECTION INPUT
set_io {PHY_RD[3]} \
-pinname J4 \setminus
-fixed yes \
-iostd LVCMOS15 \setminus
-DIRECTION INPUT
set_io PHY_RESETN \setminus
-pinname R13 \
-fixed yes \setminus
-DIRECTION OUTPUT
set_io PHY_RX_CTL \setminus
-pinname Kl \
-fixed yes \
-iostd LVCMOS15 \setminus
-DIRECTION INPUT
set_io {PHY_TD[0]} \setminus
-pinname L1 \
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION OUTPUT
set_io {PHY_TD[1]} \setminus
-pinname M2 \
-fixed yes \setminus
-iostd LVCMOS15 \setminus
```

set_io PHY_MDIO \
-pinname N2 \
-fixed yes \
-iostd LVCMOS15 \
-DIRECTION INOUT

```
-DIRECTION OUTPUT
set_io {PHY_TD[2]} \
-pinname M1 \setminus
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION OUTPUT
set_io {PHY_TD[3]} \
-pinname M3 \setminus
-fixed yes \
-iostd LVCMOS15 \setminus
-DIRECTION OUTPUT
set_io PHY_TX_CTL \setminus
-pinname K3 \setminus
-fixed yes \
-iostd LVCMOS15 \setminus
-DIRECTION OUTPUT
set_io RGB_B \setminus
-pinname H6 \
-fixed yes \setminus
-DIRECTION OUTPUT
set_io RGB_G \
-pinname F6 \setminus
-fixed yes \
-DIRECTION OUTPUT
set_io RGB_R \setminus
-pinname H5 \setminus
-fixed yes \
-DIRECTION OUTPUT
set_io RLED \setminus
-pinname G16 \setminus
-fixed yes \setminus
-DIRECTION OUTPUT
set_io RXC \setminus
-pinname J2 \
-fixed yes \setminus
-iostd LVCMOS15 \
-DIRECTION INPUT
set_io TXC \setminus
-pinname K7 \setminus
-fixed yes \setminus
-iostd LVCMOS15 \
```

-DIRECTION OUTPUT

```
# Dedicated Peripheral I/O Settings
# Unlocked I/O settings
# The I/Os in this section are unplaced or placed but are not locked
# the other listed attributes have been applied
#
#Ports using Dedicated Pins
#
set_io DEVRST_N \
-pinname U17 \
-DIRECTION INPUT
```

Software Design - SoftConsole

Application

Demo - Webserver_...

The demo projects "Smartberry_Webserver_X.y" and "Smartberry_Webserver_DDR_X.y" are identical variants of the demo, they only differ in their memory location:

- Smartberry_Webserver_X.y Application code is stored to the FPGA's embedded non-volatile memory (eNVM)
- Smartberry_Webserver_DDR_X.y Application code is stored to the FPGA's external volatile memory (DDR3/L SDRAM) and lost during power down

UART output:



COM-port Terminal Webserver "Welcome / IP -message"

Static IP configuration

SmartberrySoftconsole-6.2 - Smartb	erry_Webserver_6.2/main.c - Microsemi SoftConsole v6.2.0.251
<u>File Edit Source Refactor Naviga</u>	te Se <u>a</u> rch <u>P</u> roject <u>R</u> un <u>W</u> indow <u>H</u> elp
* 🗑 🕈 🔛 🍋 🐘 😵	··□ ≥ ≥ ≥ ≥ ≥ + ∞ - ℃ - ⊗ - ☆ - ○ - � - ≥ /
Project Explorer 🙁 🗖 🗖	🗈 main.c 🕱 🖻 netif.h
□ 🕏 🔻	264 (void) param;
 Smartberry_Webserver_6.2 Smartberry_Webserver_DDR_6.2 	 /* Create and configure the EMAC interface. */ /#ifdef NET_USE_DMCP IPA_ADDR(&xipAddr, 0, 0, 0, 0); IPA_ADDR(&xipAddr, 19, 100, 100); 279
IP Address	<pre>271 print+("\r DHCP Service is 272 printf("\n\r***********************************</pre>
II Address	273 #else
&	IP4_ADDR(&xIpAddr, 192, 168, 100, 165); IP4_ADDR(&xGateway, 192, 168, 100, 100);
Gateway	276 printf("\r Static IP is us 277 printf("\n\r 278 printf("\n\r 279 #endif

SoftConsole "main.c - Set IP"

To disengaging the DHCP mode one has to setup up an IP and Gateway Address in the code unit "main. c" roughly at line 270. Alternativly, the demo hosts IP Address can be changed.

Furthermore the corresponding compiler flag needs to be deleted in the project setting. To do so, in the "Project Explorer" tab, right mouse click onto the project and select Properties in the appearing menu.



SoftConsole "Static IP- Change Defines""

In the left section of the properties window select "C/C++ Build > Settings" in the right section select the tab "Tool Settings > GNU ARM Cross C Compiler > Preprocessor" under "Defined symbols (-D)" delete the compiler flag "NET_USE_DHCP" and press "Apply". Confirm the following dialogue and press "Cancel".

Lastly, the project needs to be recompiled. In the top menu of the SoftConsole select "Project > Build ALL / Build Project".

Warnings should not affect the demo. can be ignored.

Reference Design - HelloWorld_...

Hello World example as endless loop instead of one console output. Each loop lights up each LED. The user buttons responds with a message at any time.

UART output:

💽 SmarTTY - Raw Terminal	×
Connected to COM9 (115200 bps) 🤹 🗙 📸 🛃 🦹 • Baud rate: 115200 🔹	
TEM0002: "Hello world!" - Loop: 1	^
Cycle - LED - red Cycle - LED - green Cycle - RGB LED - red Cycle - RGB LED - green Cycle - RGB LED - blue Cycle - RGB LED - blue Cycle - Eth LED - orange Cycle - Eth LED - green TEM0002: User button S4	
TEM0002: User button S5	

COM-port Terminal "Hello World loop"

Appx. A: Change History and Legal Notices

Document Change History

To get content of older revision got to "Change History" of this page and select older document revision number.

Date	Document Revision	Authors	Description
			 Download Link update
Error	Error	Error	
renderi	renderi	renderi	
ng	ng	ng	
macro	macro	macro	
'page-	'page-	'page-	
info'	info'	info'	
Ambiguo	Ambiguo	Ambiguo	
us	us	us	
method	method	method	
overload	overload	overload	
ing for	ing for	ing for	
method	method	method	
jdk.	jdk.	jdk.	
proxy27	proxy27	proxy27	

9.\$Proxy	9.\$Proxy	9.\$Proxy
4022#ha	4022#ha	4022#ha
sConten	sConten	sConten
tLevelPe	tLevelPe	tLevelPe
rmission	rmission	rmission
Cannot	Cannot	Cannot
resolve	resolve	resolve
which	which	which
method	method	method
to	to	to
invoke	invoke	invoke
for [null,	for [null,	for [null,
class	class	class
java.	java.	java.
lang.	lang.	lang.
String,	String,	String,
class	class	class
com.	com.	com.
atlassian	atlassian	atlassian
confluen	confluen	confluen
ce.	ce.	ce.
pages.	pages.	pages.
Page]	Page]	Page]
due to	due to	due to
overlapp	overlapp	overlapp
ing	ing	ing
prototyp	prototyp	prototyp
es	es	es
between	between	between
:	:	:
[interfac	[interfac	[interfac
e com.	e com.	e com.
atlassian	atlassian	atlassian
	· ·	.
confluen	confluen	confluen
ce.user.	ce.user.	ce.user.
Conflue	Conflue	Conflue
	1	

	ncellser		ncellser		ncellser	
	class		class		class	
	iava		iava		iava	
	Jana		Jana		Jana	
	String		String		String	
	olooo		olooo		olooo	
	CIASS		CIASS		CIASS	
	com.		com.		com.	
	atlassian		atlassian		atlassian	
	confluen		confluen		confluen	
	ce.core.		ce.core.		ce.core.	
	Content		Content		Content	
	EntityOb		EntityOb		EntityOb	
	ject]		ject]		ject]	
	[interfac		[interfac		[interfac	
	e com.		e com.		e com.	
	atlassian		atlassian		atlassian	
	.user.		.user.		.user.	
	User,		User,		User,	
	class		class		class	
	java.		java.		java.	
	lang.		lang.		lang.	
	String,		String,		String,	
	class		class		class	
	com.		com.		com.	
	atlassian		atlassian		atlassian	
	confluen		confluen		confluen	
	ce.core.		ce.core.		ce.core.	
	Content		Content		Content	
	EntitvOb		EntityOb		EntityOb	
	iect]		iectl		iectl	
	Joori]00(]]00(]	
)]			
2021-01-29		v.45		John Hartfie	əl	 Link updates table of content update
2020-11-24		v.41		Kilian Jahn		Libero12.4 release
		all				

Error	
renderi	
ng	
macro	
'page-	
info'	
Ambiguo	
us	
method	
overload	
ing for	
method	
idk.	
proxv27	
9 \$Proxy	
4022#ha	
sConten	
tl evelPe	
rmission	
Cannot	
resolve	
which	
method	
to	
invoke	
for Inull.	
class	
iava.	
lang.	
String,	
class	
com.	
atlassian	
confluen	
ce.	
	. 1

pages. Page] due to overlapp ing prototyp es between [interfac e com. atlassian confluen ce.user. Conflue nceUser , class java. lang. String, class com. atlassian confluen ce.core. Content EntityOb ject] [interfac e com. atlassian .user. User, class java. lang. String,



Document change history.

Legal Notices

Data Privacy

Please also note our data protection declaration at https://www.trenz-electronic.de/en/Data-protection-Privacy

Document Warranty

The material contained in this document is provided "as is" and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

REACH, RoHS and WEEE

REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of REACH. The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no SVHC (Substances of Very High Concern) on the Candidate List are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the European Chemicals Agency (ECHA).

RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Error rendering macro 'page-info'

Ambiguous method overloading for method jdk.

proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user. ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core. ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]