

# SET\_INTERRUPT command

This command sets address and number of bytes to read from I2C bus when interrupt request is received.

An alternate name for this USB FX2 API command could be SET\_AUTORESPONSE.

Byte	Value	Description
1	0xB0	SET_INTERRUPT command ID
2	Address	I2C Address MB_I2C_ADRESS=0x3F
3	size	Number of bytes to write (max 32)
From 4 to 64	-	Not used

**SET\_INTERRUPT Command Packet Layout.**

Reply packet doesn't contain any usable information.