

TE081x and TE080x Starterkit montage instruction

Starter Kit Basic

Main Power Enclosure Location




Power Button, Reset Button, HDD LED and Power LED Enclosure Location




Starter Kit Cable Connection

Starter Kit will be shipped with all cable connected.


ATX Power, Enclosure USB

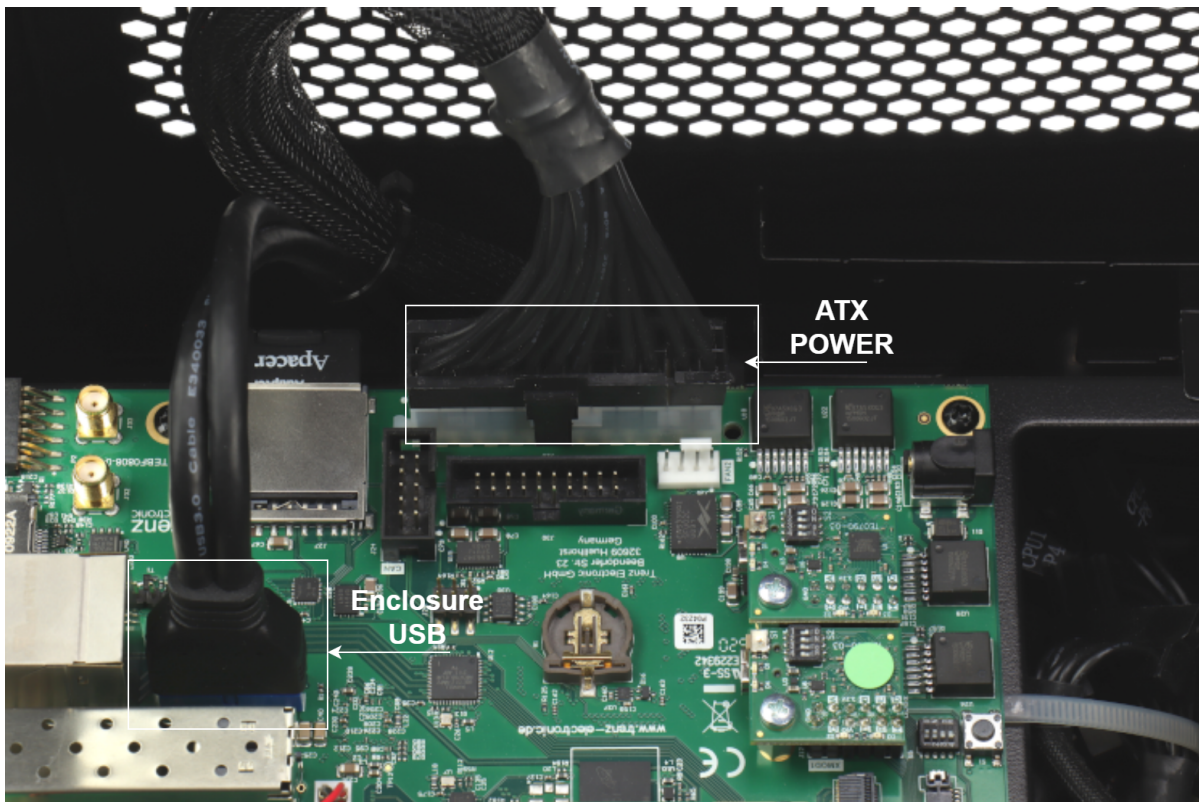


Module, FMC Fan, XMODs, Enclosure USB

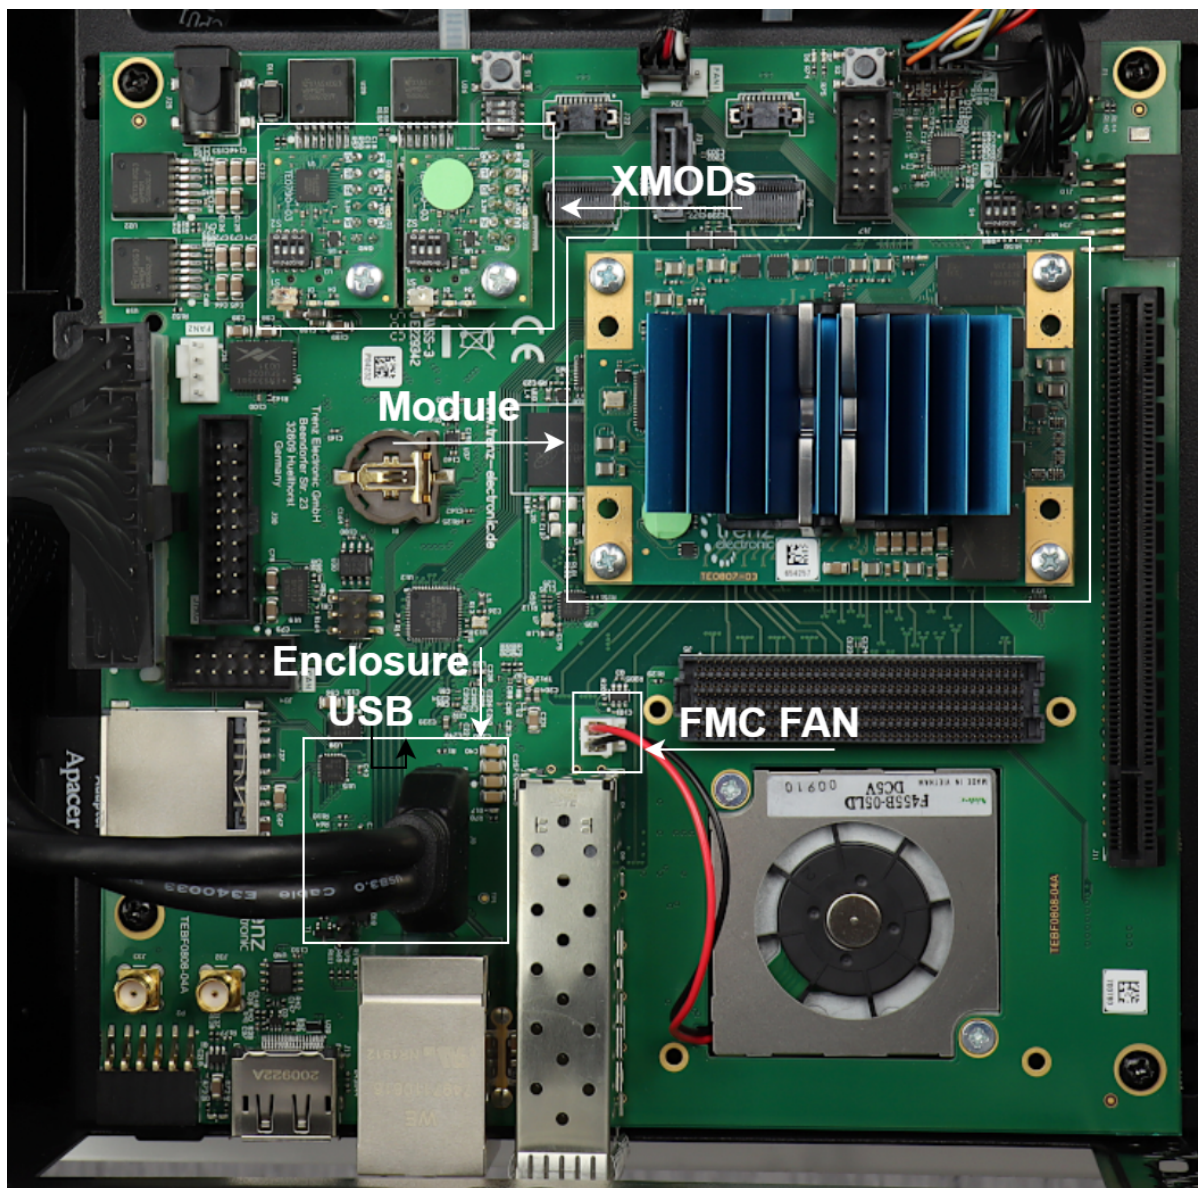

Enclosure FAN1, HD AUDIO, HDD LED and RESET SW

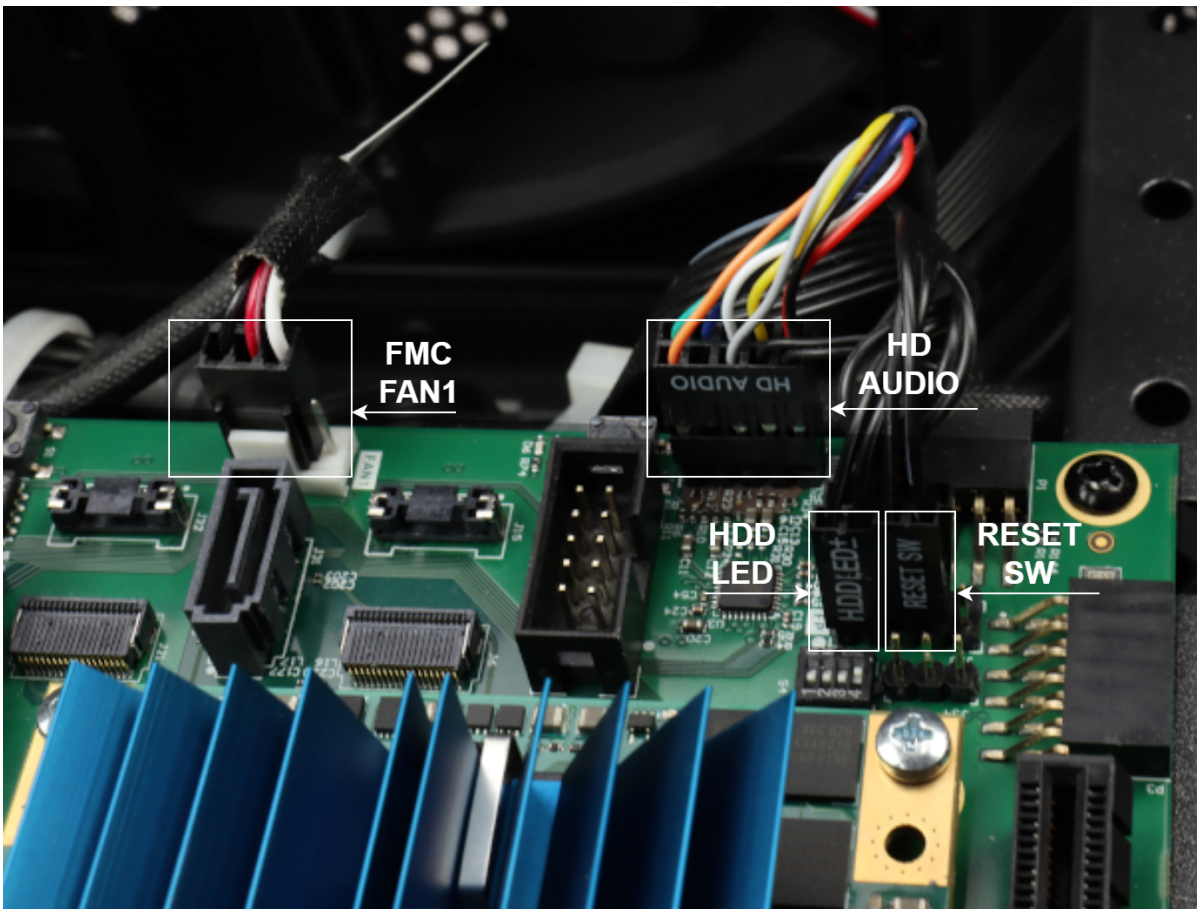

Enclosure POWER SW, POWER LED-, POWER LED+

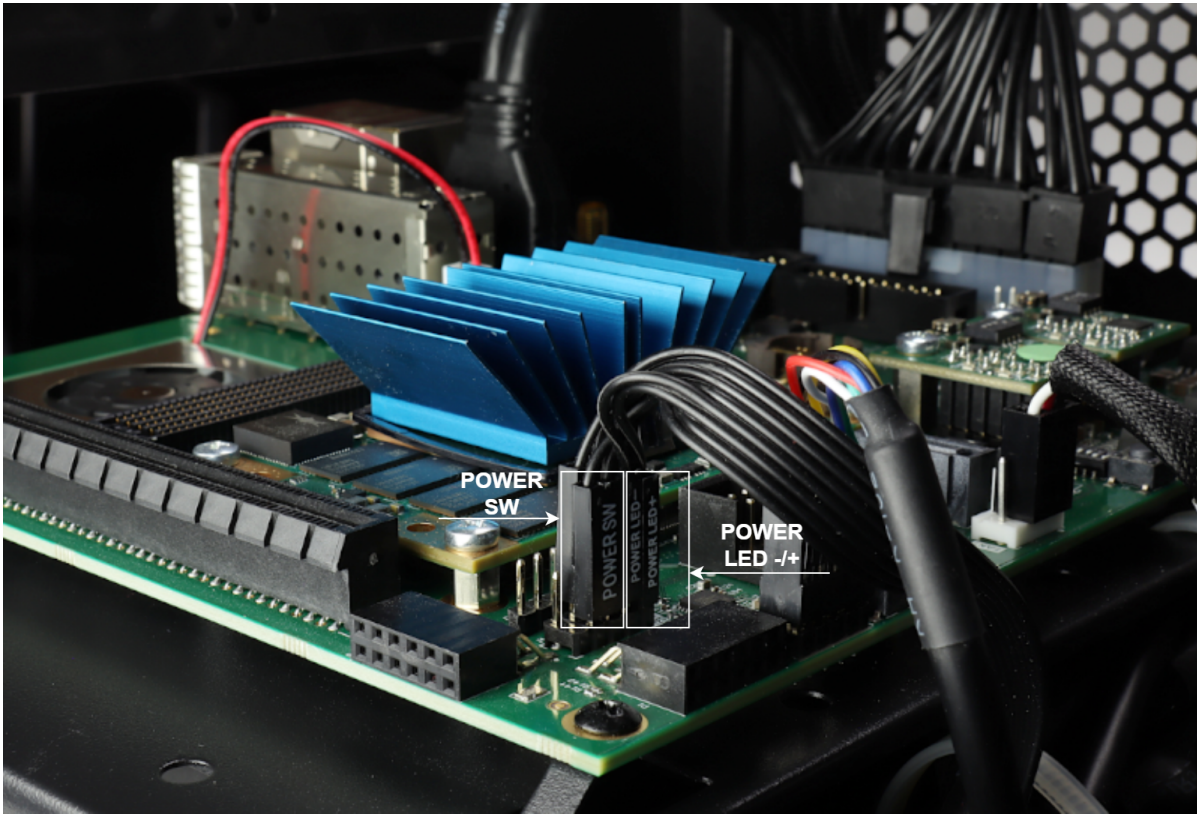

Support

- For support, please go to <http://forum.trenz-electronic.de/> or contact support@trenz-electronic.de