

TEM0001 TRM

[Download PDF version of this document.](#)

Table of Contents

- [Overview](#)
 - [Key Features](#)
 - [Block Diagram](#)
 - [Main Components](#)
 - [Initial Delivery State](#)
- [Boot Process](#)
- [Signals, Interfaces and Pins](#)
 - [I/Os on Pin Headers and Connectors](#)
 - [FPGA I/O banks](#)
 - [JTAG Interface](#)
 - [QSPI Interface](#)
- [On-board Peripherals](#)
 - [Quad SPI Flash Memory](#)
 - [SDRAM](#)
 - [FTDI FT2232H IC](#)
 - [System Clock Oscillator](#)
 - [On-board LEDs](#)
 - [Push Buttons](#)
 - [Connectors](#)
- [Power and Power-On Sequence](#)
 - [Power Supply](#)
 - [Power Consumption](#)
 - [Power-On Sequence](#)
- [Technical Specifications](#)
 - [Absolute Maximum Ratings](#)
 - [Recommended Operating Conditions](#)
 - [Physical Dimensions](#)
- [Revision History](#)
 - [Hardware Revision History](#)
 - [Document Change History](#)
- [Disclaimer](#)
 - [Data Privacy](#)
 - [Document Warranty](#)
 - [Limitation of Liability](#)
 - [Copyright Notice](#)
 - [Technology Licenses](#)
 - [Environmental Protection](#)
 - [REACH, RoHS and WEEE](#)

Overview

The Trenz Electronic TEM0001 is a low cost small-sized FPGA module integrating a Microsemi SmartFusion2 FPGA SoC and 8 MByte Flash memory for configuration and operation.

Key Features

- Microsemi SmartFusion2 SoC FPGA
- 8 MByte SDRAM
- 8 MByte QSPI Flash memory
- 25 MHz system clock and 32.768 KHz auxiliary clock
- JTAG and UART over Micro USB connector
- 1x 3-pin header for Live Probes
- 1x PMOD header providing 8 I/O
- 2x 14-pin headers (2,54 mm pitch) providing 23 I/O

- 9 user LEDs
- 1 user push button
- 3.3V single power supply with on-board voltage regulators
- Size 61.5 x 25 mm

Additional assembly options are available for cost or performance optimization upon request.

Block Diagram

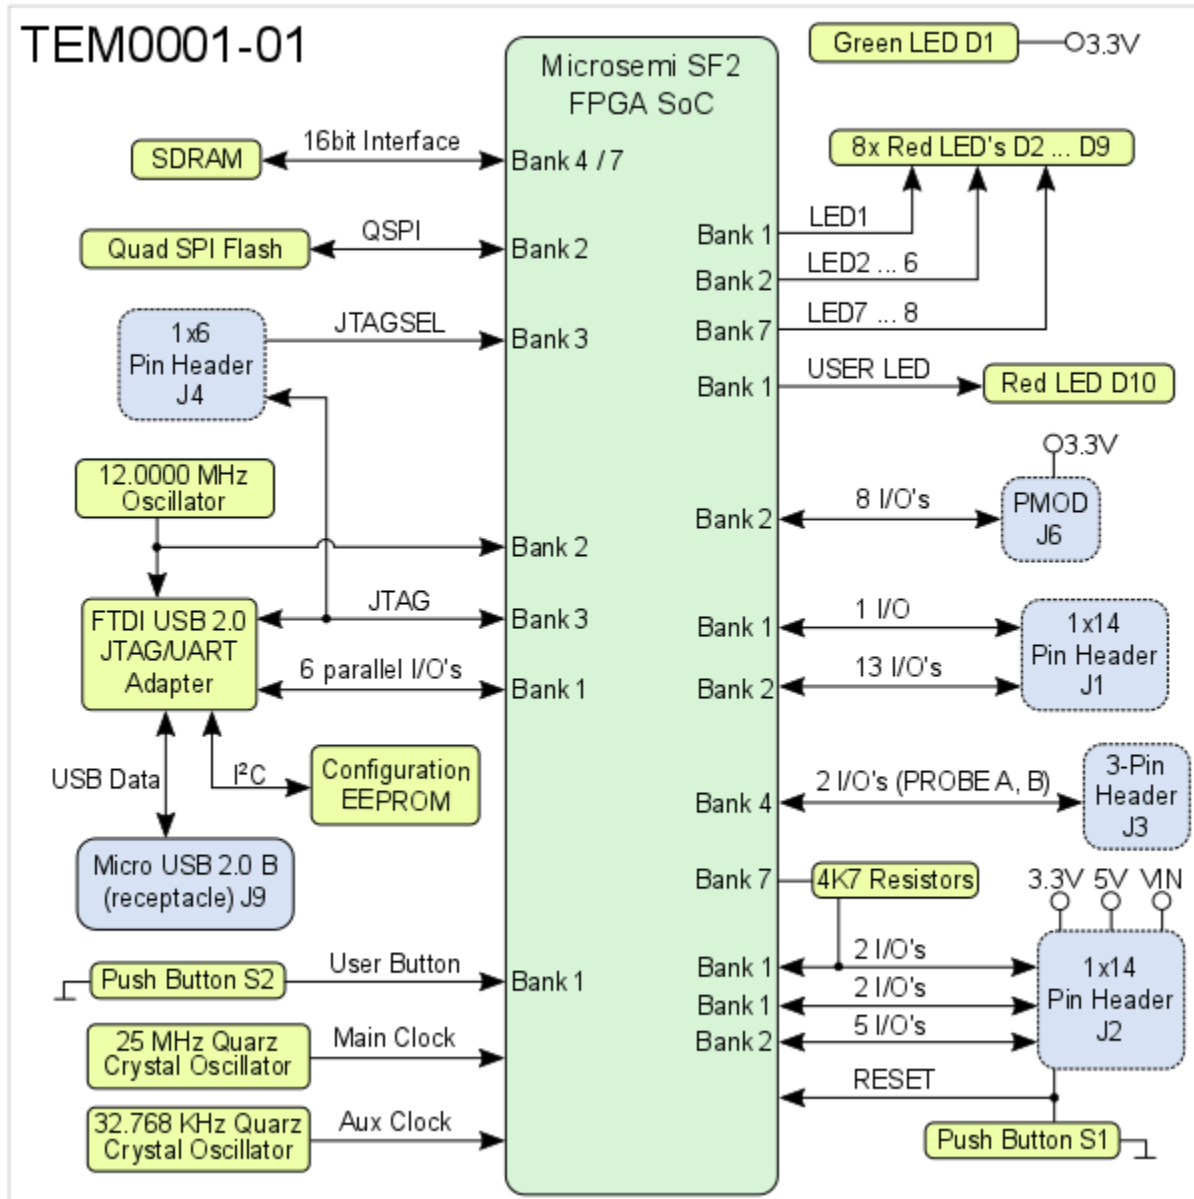


Figure 1: TEM0001-01 block diagram

Main Components

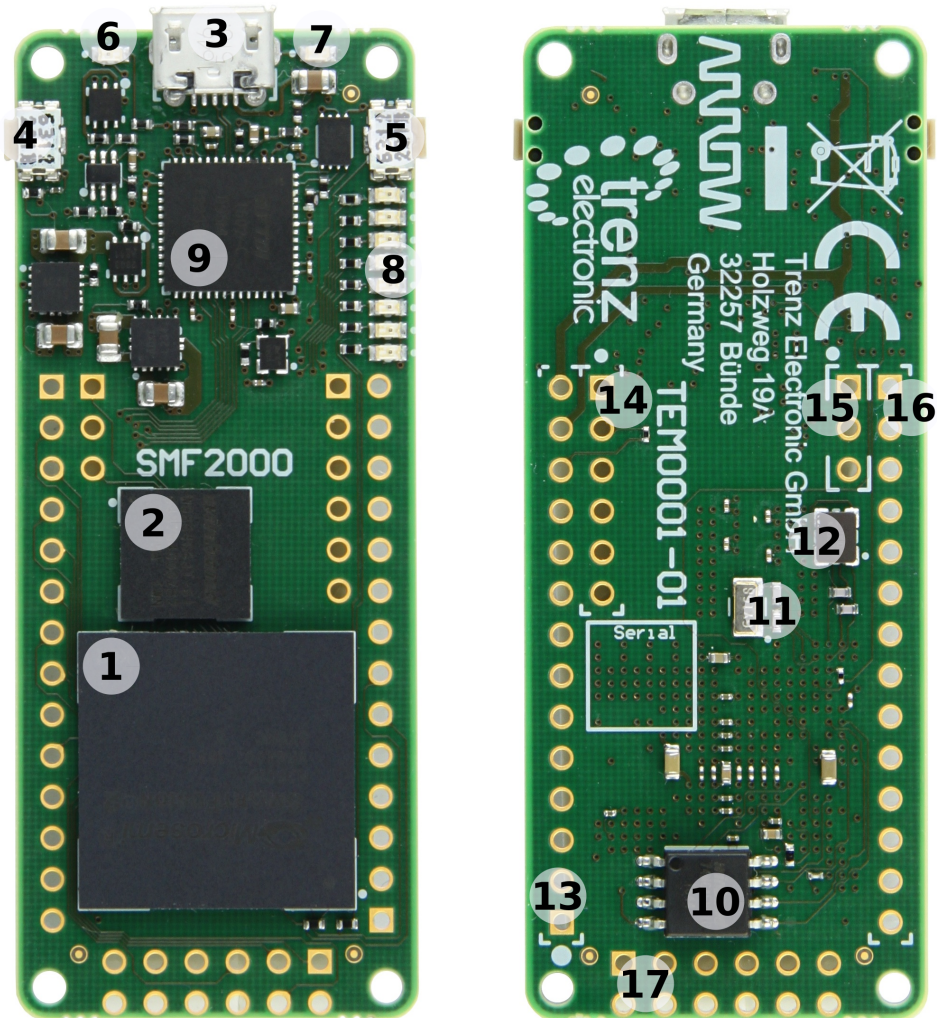


Figure 2: TEM0001-01 FPGA module

1. Microsemi SmartFusion2 FPGA SoC, U5
2. 8 Mbyte SDRAM 166MHz, U2
3. Micro USB2 B socket (receptacle), J9
4. Switch button (reset), S1
5. Switch button (user), S2
6. Red LED (user), D10
7. Green LED (indicating supply voltage), D1
8. 8x red LEDs (user), D2 - D9
9. FTDI USB2 to JTAG/UART interface, U3
10. 8 Mbyte QSPI Flash memory, U1
11. 32.768 KHz auxiliary crystal, Y1
12. 25 MHz main crystal, Y2
13. 1x14 pin header (2.54mm pitch), J2
14. 1x6 pin header (2.54mm pitch), J4
15. 3-pin header (2.54mm pitch), J3

- 16. 1x14 pin header (2.54mm pitch), J1
- 17. 2x6 Pmod connector, J6

Initial Delivery State

| Storage device name | Content | Notes |
|---------------------|------------|--|
| SPI Flash OTP area | empty | - |
| SPI Flash | empty | - |
| FTDI EEPROM, U9 | Programmed | FlashPro identification, should not be changed by customer |

Table 1: Initial delivery state of programmable devices on the module

Boot Process

There is no bootmode selection Microchip SmartFusion2 SoC boots always from internal configuration flash, optionally software code for the Cortex-M or soft CPU can be placed to eNVM.

Signals, Interfaces and Pins

I/Os on Pin Headers and Connectors

I/O signals of the FPGA SoC's I/O banks connected to the board's pin headers and connectors:

| Bank | Connector Designator | I/O Signal Count | Bank Voltage | Notes |
|------|----------------------|------------------|--------------|--|
| 1 | J1 | 1 I/O's | 3.3V | - |
| 1 | J2 | 4 I/O's | 3.3V | 2 I/O's of bank 1 can be pulled-up to 3.3V (4K7 resistors) with 2 I/O's of Bank 7 or pins can be shared. |
| 2 | J1 | 13 I/O's | 3.3V | - |
| 2 | J2 | 5 I/O's | 3.3V | - |
| 2 | J6 | 8 /O's | 3.3V | Pmod Connector. |
| 3 | J4 | 5 I/O's | 3.3V | JTAG interface. |
| 4 | J3 | 2 I/O's | 3.3V | I/O's (PROBE A, B) are dedicated to live probes. |
| 7 | J2 | 2 I/O's | 3.3V | Those 2 I/O's are dedicated to pull-up 2 I/O's of bank 1 or pins can be shared. |

Table 2: General overview of single ended I/O signals connected to pin headers and connectors

FPGA I/O banks

| Bank | VCCIO | I/O's Count | Available on Connectors | Notes |
|------|-------|-------------|-------------------------|---|
| 1 | 3.3V | 14 | 5 | 6 I/O's connected to FTDI chip, 1 I/O used for user button S2, 2 I/O's connected to red user LEDs D2 and D10. |
| 2 | 3.3V | 37 | 26 | 6 I/O's user for QSPI Flash, 5 I/O's connected to red user LEDs D3 ... D7. |
| 3 | 3.3V | 5 | 5 | Bank 3 is dedicated to JTAG interface. |

| | | | | |
|---|------|----|---|---|
| 4 | 3.3V | 24 | 2 | 2 I/O's are dedicated to live probes, all other I/O's are used as memory interface. |
| 7 | 3.3V | 22 | 2 | 2 I/O's available on header J2, 2 I/O's connected to red user LEDs D8 and D9, all other I/O's are used as memory interface. |

Table 3: General overview of FPGA I/O banks

JTAG Interface

JTAG access to the FPGA SoC device U5 is provided through Micro USB2 B connector J9. The JTAG interface is implemented with FTDI FT2232H USB2 to JTAG/UART bridge IC U3.

Optionally 1x6 male pin header J4 can be fitted on board for access to the JTAG interface on board. The pin assignment of header J4 is shown on table below:

| JTAG Signal | Pin on Header J4 | Note |
|-------------|------------------|---------------------------------------|
| TCK | 3 | - |
| TDI | 5 | - |
| TDO | 4 | - |
| TMS | 6 | - |
| JTAGSEL | 2 | can be left open for normal operation |

Table 4: optional JTAG header

QSPI Interface

The QSPI interface of the FPGA device is routed to and used by the on-module QSPI flash IC U1:

| SD IO Signal Schematic Name | FPGA I/O | Flash IC U1 Pin | Note |
|-----------------------------|-----------------|-----------------|------------------|
| F_CS | Bank 2, pin K15 | 1 | QSPI chip select |
| F_CLK | Bank 2, pin P18 | 6 | QSPI clock |
| F_DI | Bank 2, pin P19 | 5 | QSPI data |
| F_DO | Bank 2, pin K16 | 2 | QSPI data |
| F_D2 | Bank 2, pin J18 | 3 | QSPI data |
| F_D3 | Bank 2, pin N19 | 7 | QSPI data |

Table 5: QSPI interface signals

Note: On-board SPI Flash is connected to regular FPGA I/O pins, access to it is only possible when using custom SPI flash IP core or via MSS subsystem SPI when it is connected via fabric to those pins. There is no automatic boot from this flash.

On-board Peripherals

Quad SPI Flash Memory

On-module QSPI flash memory (U7) is provided by Winbond Serial Flash Memory W74M64FV with 64 MBit (8 MByte) storage capacity.

SDRAM

The TEM0001 FPGA module is equipped with a Winbond W9864G6JT 64 MBit (8 MByte) SDRAM chip U2.

FTDI FT2232H IC

FTDI FT2232H Channel A works as JTAG interface compatible to Libero tools. Channel B is connected to FPGA pins with direct access to MSS UART peripheral.

The configuration of FTDI FT2232H is pre-programmed to the EEPROM U9 to make it work as FlashPro5 interface for Libero tools.

System Clock Oscillator

The FPGA SoC module has following reference clocking signals provided by on-board oscillators:

| Clock Source | Schematic Name | Frequency | Clock Input Destination |
|-------------------------------|----------------|-------------|---|
| MEMS Oscillator, U7 | CLK12M | 12.0000 MHz | FTDI FT2232 U3, pin 3; FPGA SoC bank 2, pin N16 |
| Crystal Oscillator, Y1 | - | 32.768 KHz | FPGA SoC U5 auxiliary clock, pins W17/Y17 |
| Quartz Crystal Oscillator, Y2 | - | 25.000 MHz | FPGA SoC U5 main clock, pins W18/Y18 |

Table 6: Clock sources overview

On-board LEDs

There are 10 LEDs fitted on the FPGA module board. The LEDs are user configurable to indicate for example any system status.

| LED | Color | Signal Schematic Name | FPGA | Notes |
|-----|-------|-----------------------|------|--------------------------------------|
| D1 | Green | - | - | Indicating 3.3V board supply voltage |
| D2 | Red | LED1 | E18 | user |
| D3 | Red | LED2 | R17 | user |
| D4 | Red | LED3 | R18 | user |
| D5 | Red | LED4 | T18 | user |
| D6 | Red | LED5 | U18 | user |
| D7 | Red | LED6 | R16 | user |
| D8 | Red | LED7 | E1 | user |
| D9 | Red | LED8 | D2 | user |
| D10 | Red | USER_LED | G17 | user |

Table 7: LEDs of the module

Push Buttons

The TEM0001 FPGA module is equipped with two push buttons S1 and S2:

| Button | Signal Schematic Name | FPGA | Notes |
|--------|-----------------------|------|--------------------------------|
| S1 | USER_BTN | B19 | user configurable |
| S2 | RESET | U17 | system reset (reconfiguration) |

Table 8: Push buttons of the module

Connectors

All connectors are for 100mil headers, all connector locations are in 100mil (2.54mm) grid. The module's PCB provides footprints to mount and solder optional pin headers, if those are not factory-fitted on module.

Power and Power-On Sequence

To power-up a module, power supply with minimum current capability of 1A is recommended.

Power Supply

The FPGA module can be power-supplied through Micro USB2 connector J9 with supply voltage 'USB-VBUS' or alternative through pin header J2 with supply voltage 'VIN'.

The TEM0001 module needs one single power supply of 5.0V nominal.

There are following dependencies how the initial voltage of the extern power supply is distributed to the on-board DCDC converters:

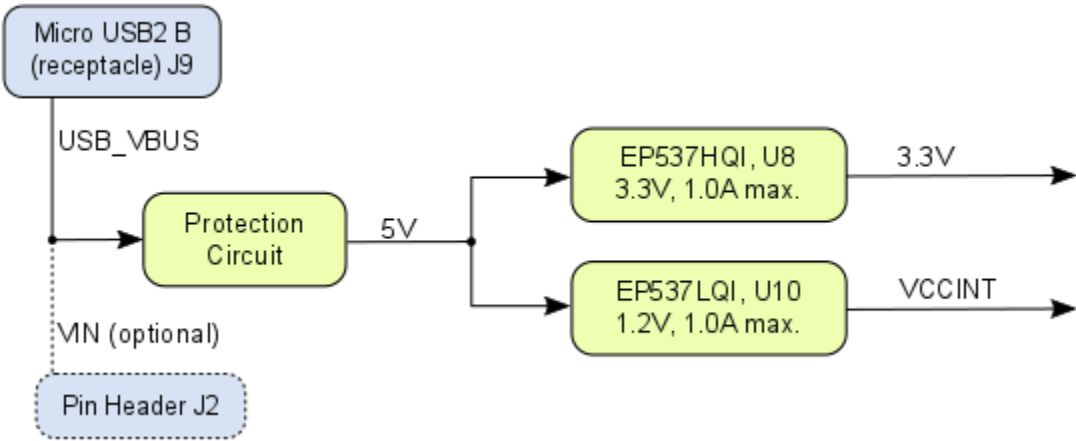


Figure 3: Power Distribution Diagram

Power Consumption

| FPGA | Design | Typical Power, 25C ambient |
|---|----------------|----------------------------|
| Mircosemi SmartFusion2 FPGA SoC M2S010-VFG400 | Not configured | TBD* |

Table 9: Module power consumption

*TBD - To Be Determined.

Actual power consumption depends on the FPGA design and ambient temperature.

Power-On Sequence

There is no specific or special power-on sequence, just one single power source is needed.

Technical Specifications

Absolute Maximum Ratings

| Parameter | Min | Max | Units | Reference document |
|-------------------------------------|------|------|-------|--|
| VIN supply voltage (5.0V nominal) | -0.3 | 6.0 | V | EP53A7HQI / EP53A7LQI datasheet |
| I/O Input voltage for FPGA I/O bank | -0.3 | 3.63 | V | Microsemi datasheet DS0128 |
| Storage Temperature | -40 | +90 | °C | LED R6C-AL1M2VY/3T datasheet |

Table 10: Absolute maximum ratings

Recommended Operating Conditions

| Parameter | Min | Max | Units | Reference document |
|-------------------------------------|------|------|-------|---|
| VIN supply voltage (5.0V nominal) | 4.75 | 5.25 | V | same as USB-VBUS specification |
| I/O Input voltage for FPGA I/O bank | 0 | 3.45 | V | Microsemi datasheet DS0128 |
| Operating temperature range | 0 | +70 | °C | Winbond datasheet W9864G6GT |

Table 11: Recommended operating conditions



Please check Microsemi datasheet [DS0128](#) for complete list of absolute maximum and recommended operating ratings for the FPGA device.

Physical Dimensions

Please note that two different units are used on the figures below, SI system millimeters (mm) and imperial system thousandths of an inch(mil). This is because of the 100mil pin headers used, see also explanation below. To convert mils to millimeters and vice versa use formula 100mil's = 2,54mm.

- Board size: PCB 25mm × 61,5mm. Notice that some parts the are hanging slightly over the edge of the PCB like the the Micro USB2 B connector, which determine the total physical dimensions of the carrier board. Please download the assembly diagram for exact numbers.
- PCB thickness: ca. 1.65mm
- Highest part on the PCB without fitted headers and connectors is the Micro USB2 B connector, which has an approximately hight of 3 mm. Please download the step model for exact numbers.

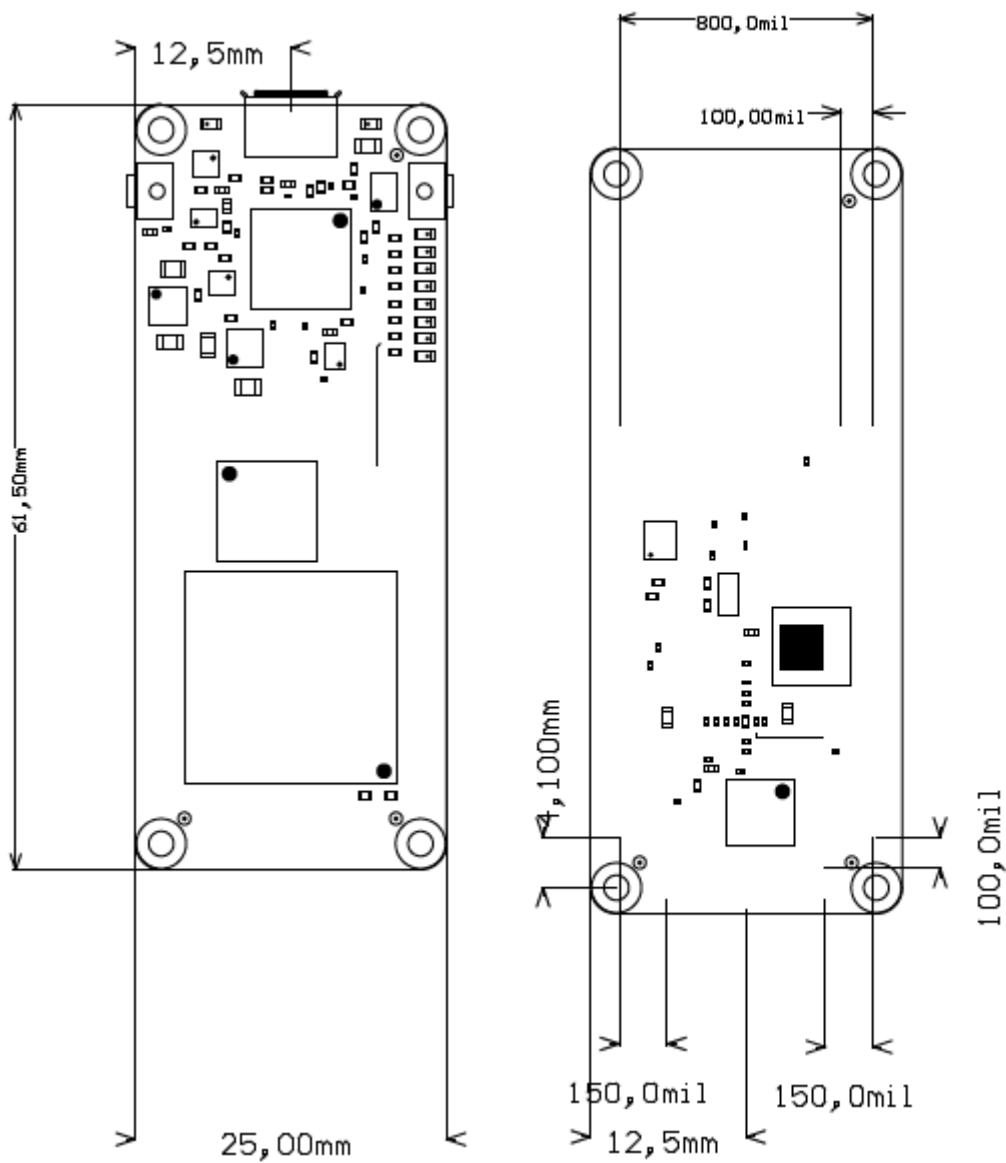


Figure 4: Module physical dimensions drawing

Revision History

Hardware Revision History

| Date | Revision | Notes | PCN | Documentation Link |
|------|----------|--|-----|----------------------------|
| - | 01 | <ul style="list-style-type: none"> First Production Release | - | TEM0001-01 |

Table 12: Module hardware revision history

Hardware revision number is printed on the PCB board together with the module model number separated by the dash.

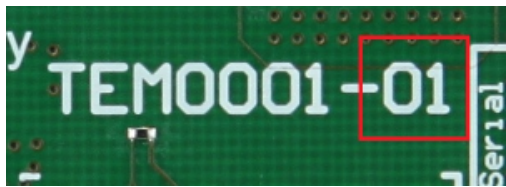


Figure 5: Module hardware revision number

Document Change History

| Date | Revision | Contributors | Description |
|------|----------|--------------|-------------|
|------|----------|--------------|-------------|

| | | | |
|--|--|--|--|
| <p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p> | <p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p> <p> Unknown macro: 'metadata'</p> | <p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p> | <ul style="list-style-type: none"> fixed typographical and other mistakes |
| 11 Dec 2018 | v.33 | Antti Lukats | <ul style="list-style-type: none"> change documentation |
| 2018-04-17 | v.31 | Ali Naseri | <ul style="list-style-type: none"> initial release |

Table 13: Document change history

Disclaimer

Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

Document Warranty

The material contained in this document is provided "as is" and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

REACH, RoHS and WEEE

REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#). The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#) are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#).

RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Error rendering macro 'page-info'

Ambiguous method overloading for method `jdk.proxy241.$Proxy3496#hasContentLevelPermission`. Cannot resolve which method to invoke for `[null, class java.lang.String, class com.atlassian.confluence.pages.Page]` due to overlapping prototypes between: `[interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]` `[interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]`