

# TE0726 Zynqberry Demo3

## Table of contents

- 1 [Table of contents](#)
- 2 [Overview](#)
  - 2.1 [Key Features](#)
  - 2.2 [Revision History](#)
  - 2.3 [Release Notes and Know Issues](#)
  - 2.4 [Requirements](#)
    - 2.4.1 [Software](#)
    - 2.4.2 [Hardware](#)
  - 2.5 [Content](#)
    - 2.5.1 [Design Sources](#)
    - 2.5.2 [Additional Sources](#)
    - 2.5.3 [Prebuilt](#)
    - 2.5.4 [Download](#)
- 3 [Design Flow](#)
- 4 [Launch](#)
  - 4.1 [Programming](#)
    - 4.1.1 [Get prebuilt boot binaries](#)
    - 4.1.2 [QSPI](#)
    - 4.1.3 [SD](#)
    - 4.1.4 [JTAG](#)
  - 4.2 [Usage](#)
    - 4.2.1 [Linux](#)
- 5 [System Design - Vivado](#)
  - 5.1 [Block Design](#)
    - 5.1.1 [PS Interfaces](#)
  - 5.2 [Constraints](#)
    - 5.2.1 [Basic module constraints](#)
    - 5.2.2 [Design specific constraint](#)
- 6 [Software Design - Vitis](#)
  - 6.1 [Application](#)
    - 6.1.1 [zynq\\_fsbl](#)
    - 6.1.2 [zynq\\_fsbl\\_flash](#)
    - 6.1.3 [hello\\_te0726](#)
    - 6.1.4 [u-boot](#)
- 7 [Software Design - PetaLinux](#)
  - 7.1 [Config](#)
  - 7.2 [U-Boot](#)
  - 7.3 [Device Tree](#)
  - 7.4 [Kernel](#)
  - 7.5 [Rootfs](#)
  - 7.6 [Applications](#)
    - 7.6.1 [startup](#)
    - 7.6.2 [rpicam](#)
    - 7.6.3 [fbgrab](#)
    - 7.6.4 [webfwu](#)
  - 7.7 [Kernel Modules](#)
    - 7.7.1 [te-audio-codec](#)
- 8 [Additional Software](#)
- 9 [Appx. A: Change History and Legal Notices](#)
  - 9.1 [Document Change History](#)
  - 9.2 [Legal Notices](#)
  - 9.3 [Data Privacy](#)
  - 9.4 [Document Warranty](#)
  - 9.5 [Limitation of Liability](#)
  - 9.6 [Copyright Notice](#)
  - 9.7 [Technology Licenses](#)
  - 9.8 [Environmental Protection](#)
  - 9.9 [REACH, RoHS and WEEE](#)

## Overview

Zynq PS Design with Linux Example with video and audio configuration.

Refer to <http://trenz.org/te0726-info> for the current online version of this manual and other available documentation.

## Key Features

- Vitis/Vivado 2019.2
- RPI Camera 1.3 or 2.1
- VIDEO/AUDIO (plus video/audio player)
- HDMI
- PetaLinux
- SD
- ETH
- USB
- I2C
- Special FSBL for QSPI programming

## Revision History

Date	Vivado	Project Built	Authors	Description
2020-03-25	2019.2	TE0726-zynqberrydemo3_noprebuilt-vivado_2019.2-build_8_20200325082001.zip TE0726-zynqberrydemo3-vivado_2019.2-build_8_20200325081946.zip	Mohsen Chamanbaz/John Hartfiel	<ul style="list-style-type: none"><li>• script update</li></ul>
2020-02-20	2019.2	TE0726-zynqberrydemo3_noprebuilt-vivado_2019.2-build_5_20200214101637.zip TE0726-zynqberrydemo3-vivado_2019.2-build_5_20200214101624.zip	Mohsen Chamanbaz	<ul style="list-style-type: none"><li>• update with Vivado 2019.2</li></ul>
2019-12-19	2018.3	te0726-zynqberrydemo3-vivado_2018.3-build_10_20200114090815.zip te0726-zynqberrydemo3_noprebuilt-vivado_2018.3-build_10_20200114090645.zip	Mohsen Chamanbaz	<ul style="list-style-type: none"><li>• update with Vivado 2018.3</li></ul>
2019-02-12	2018.2	te0726-zynqberrydemo3-vivado_2018.2-build_04_20190212141216.zip te0726-zynqberrydemo3_noprebuilt-vivado_2018.2-build_04_20190212141236.zip	Oleksandr Kiyenko	<ul style="list-style-type: none"><li>• add missing fgrab in petalinux template</li></ul>
2018-12-05	2018.2	te0726-zynqberrydemo3-vivado_2018.2-build_03_20181128113130.zip te0726-zynqberrydemo3_noprebuilt-vivado_2018.2-build_03_20181128113146.zip	Oleksandr Kiyenko	<ul style="list-style-type: none"><li>• initial release</li></ul>

### Design Revision History

## Release Notes and Know Issues

Issues	Description	Workaround	To be fixed version
Flash Programming failed with 19.2	Depending on Flash content Flash programming failed with provided fsbl_flash (Xilinx <a href="#">AR# 70548</a> ) 2019.2 version	<ul style="list-style-type: none"><li>• Option1:<ul style="list-style-type: none"><li>◦ In case Flash is empty, use fsbl_flash on programming GUI</li><li>◦ In case Flash is programmed use normal fsbl on programming GUI</li></ul></li><li>• Option2: use in both case fsbl_flash on programming GUI and Vivado LabTools 2018.3</li></ul>	---

### Known Issues

# Requirements

## Software

Software	Version	Note
Vitis	2019.2	needed, Vivado ist included into Vitis installlation
PetaLinux	2019.2	needed

### Software

## Hardware

Basic description of TE Board Part Files is available on [TE Board Part Files](#).

Complete List is available on <design name>/board\_files/\*\_board\_files.csv

Design supports following modules:

Module Model	Board Part Short Name	PCB Revision Support	DDR	QSPI Flash	Others	Notes
<del>te0726-04</del>	01	REV01	64MB LPDDR2	16MB		not included, user modifications are needed
<del>te0726-03r</del>	r	REV02, REV03	128MB DDR3L	16MB		not included, user modifications are needed
te0726-03m	m	REV02, REV03	512MB DDR3L	16MB		
te0726-03-07s-1c	7s	REV03	512MB DDR3L	16MB		

### Hardware Modules

Design supports following carriers:

Carrier Model	Notes
---	

### Hardware Carrier

Additional HW Requirements:

Additional Hardware	Notes
USB Power	Use USB2.0 or higher for power supply via USB
USB Cable	Connect to USB2 or better USB3 Hub for proper power supply over USB
Headphones	--
Raspberry Pi Camera Rev 1.3 or Camera Rev 2.1	Betaimplemenetation of REV2.1(not complete stable)
Monitor	DELL Model Number: U2412Mc

HDMI Cable	--
------------	----

#### Additional Hardware

## Content

For general structure and of the reference design, see [Project Delivery - AMD devices](#)

## Design Sources

Type	Location	Notes
Vivado	<design name>/block_design <design name>/constraints <design name>/ip_lib	Vivado Project will be generated by TE Scripts
Vitis	<design name>/sw_lib	Additional Software Template for Vitis and apps_list.csv with settings automatically for Vitis app generation
PetaLinux	<design name>/os/petalinux	PetaLinux template with current configuration

#### Design sources

## Additional Sources

Type	Location	Notes
init.sh	<design name>/misc/init_script	Additional Initialization Script for Linux

#### Additional design sources

## Prebuilt

File	File-Extension	Description
BIF-File	*.bif	File with description to generate Bin-File
BIN-File	*.bin	Flash Configuration File with Boot-Image (Zynq-FPGAs)
BIT-File	*.bit	FPGA (PL Part) Configuration File
DebugProbes-File	*.ltx	Definition File for Vivado/Vivado Labtools Debugging Interface
Diverse Reports	---	Report files in different formats
Hardware-Platform-Specification-Files	*.xsa	Exported Vivado Hardware Specification for Vitis and PetaLinux
LabTools Project-File	*.lpr	Vivado Labtools Project File
OS-Image	*.ub	Image with Linux Kernel (On Petalinux optional with Devicetree and RAM-Disk)
Software-Application-File	*.elf	Software Application for Zynq or MicroBlaze Processor Systems

#### Prebuilt files (only on ZIP with prebuilt content)

## Download

Reference Design is only usable with the specified Vivado/SDK/PetaLinux/SDx version. Do never use different Versions of Xilinx Software for the same Project.

Reference Design is available on:

- [TE0726 "Zynqberry Demo3" Reference Design](#)

## Design Flow



Reference Design is available with and without prebuilt files. It's recommended to use TE prebuilt files for first lunch.

Trenz Electronic provides a tcl based built environment based on Xilinx Design Flow.

See also:

- [AMD Development Tools#XilinxSoftware-BasicUserGuides](#)
- [Vivado Projects - TE Reference Design](#)
- [Project Delivery](#).

The Trenz Electronic FPGA Reference Designs are TCL-script based project. Command files for execution will be generated with "\_create\_win\_setup.cmd" on Windows OS and "\_create\_linux\_setup.sh" on Linux OS.

TE Scripts are only needed to generate the vivado project, all other additional steps are optional and can also be executed by Xilinx Vivado/SDK GUI. For currently Scripts limitations on Win and Linux OS see: [Project Delivery Currently limitations of functionality](#)

1. \_create\_win\_setup.cmd/\_create\_linux\_setup.sh and follow instructions on shell:

```

C:\WINDOWS\system32\cmd.exe
B:\Design\cores\2017.4\design\TE0726\test_board>setlocal
-----Set design paths-----
-- Run Design with: _create_win_setup
-- Use Design Path: B:\Design\cores\2017.4\design\TE0726\test_board\
-----TE Reference Design-----
-- (c) Go to CMD-File Generation (Manual setup)
-- (d) Go to Documentation (Web Documentation)
-- (x) Exit Batch (nothing is done!)
-- (0) Create minimum setup of CMD-Files and exit Batch
-- (1) Create maximum setup of CMD-Files and exit Batch
-----
select (ex.:\'0\' for min setup):

```

2. Press 0 and enter to start "Module Selection Guide"
3. (optional Win OS) Generate Virtual Drive or use short directory for the reference design (for example x:\<design name>)
4. Create Project (follow instruction of the product selection guide), settings file will be configured automatically during this process
  - a. (optional for manual changes) Select correct device and Xilinx install path on "design\_basic\_settings.cmd" and create Vivado project with "vivado\_create\_project\_guimode.cmd"
 

Note: Select correct one, see [TE Board Part Files](#)
5. Create HDF and export to prebuilt folder
  - a. Run on Vivado TCL: TE::hw\_build\_design -export\_prebuilt
 

Note: Script generate design and export files into \prebuilt\hardware\<short dir>. Use GUI is the same, except file export to prebuilt folder
6. Create Linux (uboot.elf and image.ub) with exported XSA
  - a. XSA is exported to "prebuilt\hardware\<short name>"
 

Note: HW Export from Vivado GUI create another path as default workspace.  
Create Linux images on VM, see [PetaLinux KICKstart](#)

    - i. Use TE Template from /os/petalinux
    - ii. For 128MB and 64MB only: Netboot Offset must be reduced manually, see [TE0726 Zynqberry Demo3#Config](#)
7. Add Linux files (uboot.elf and image.ub) to prebuilt folder
  - a. "prebuilt\os\petalinux\<DDR size>" or "prebuilt\os\petalinux\<short name>"
 

Notes: Scripts select "prebuilt\os\petalinux\<short name>", if exist, otherwise "prebuilt\os\petalinux\<DDR size>"
8. Generate Programming Files with Vitis

- a. Run on Vivado TCL: `TE::sw_run_vitis -all`  
 Note: Scripts generate applications and bootable files, which are defined in "sw\_lib\apps\_list.csv"
- b. (alternative) Start Vitis with Vivado GUI or start with TE Scripts on Vivado TCL: `TE::sw_run_vitis`  
 Note: TCL scripts generate also platform project, this must be done manually in case GUI is used. See [Vitis](#)

## Launch

## Programming



Check Module and Carrier TRMs for proper HW configuration before you try any design.

Xilinx documentation for programming and debugging: [Vivado/SDK/SDSoC-Xilinx Software Programming and Debugging](#)

## Get prebuilt boot binaries

1. `_create_win_setup.cmd/_create_linux_setup.sh` and follow instructions on shell
2. Press 0 and enter to start "Module Selection Guide"
  - a. Select assembly version
  - b. Validate selection
  - c. Select Create and open delivery binary folder
 Note: Folder (`<project folder>/_binaries_<Artikel Name>`) with subfolder (`boot_<app name>`) for different applications will be generated

## QSPI

1. Connect JTAG and power module (TE0726 can be powered via JTAG USB or external)
2. Open Vivado Project with "vivado\_open\_existing\_project\_gui\_mode.cmd" or if not created, create with "vivado\_create\_project\_gui\_mode.cmd"
3. Type on Vivado TCL Console: `TE::pr_program_flash -swapp u-boot`  
 Note: To program with SDK/Vivado GUI, use special FSBL (`zynqmp_fsbl_flash`) on setup  
 optional `"TE::pr_program_flash -swapp hello_te0726"` possible
4. Build Image.ub in Petalinux
5. Copy the Petalinux image.ub on SD-Card
  - For correct prebuilt file location, see `<design_name>/prebuilt/readme_file_location.txt`
6. Copy `init.sh` on SD-Card
  - Location : `<design-name>/misc/sd/`
7. Insert SD-Card

## SD

Xilinx Zynq devices in CLG225 package do not support SD Card boot directly from ROM bootloader. Use QSPI for primary boot and SD for secondary boot (u-boot)

## JTAG

Not used on this Example.

## Usage

1. Prepare HW like described in section [TE0726 Zynqberry Demo3#Programming](#)
2. Connect UART USB (most cases same as JTAG)
3. Insert SD Card with image.ub
4. Power On PCB  
 Note: 1. Zynq Boot ROM loads FSBL from QSPI into OCM, 2. FSBL loads U-boot from QSPI into DDR, 3. U-boot load Linux from SD into DDR

## Linux

1. Open Serial Console (e.g. putty)
  - a. Speed: 115200
  - b. COM Port: Win OS, see device manager, Linux OS see `dmesg |grep tty` (UART is \*USB1)
2. Linux Console:

Note: Wait until Linux boot finished For Linux Login use:


  - a. User Name: root
  - b. Password: root

Note: Wait until Linux boot finished For Linux Login use:

  - i. User Name: root
  - ii. Password: root
3. You can use a Linux shell now.
  - a. I2C 1 Bus type: `i2cdetect -y -r 5`  
Bus 0...5 possible
  - b. ETH0 works with `udhcpd`
  - c. USB: insert USB device
4. Start Video with "`play <video file>`"
  - a. "play" is alias to `ffmpeg` with some parameters for video and audio, type "alias" to see configuration
  - b. for videos with higher resolution, disable audio on `ffmpeg` configuration
5. Start Audio with "`aplay <audio files>`"
6. Take image from camera (must be enabled with `init.sh` scripts):
  - a. write image to webserver: `fbgrab -d /dev/fb1 /srv/www/camera.png`
  - b. Display image on host PC: `http://<ZynqBerry IP>/camera.png`

## System Design - Vivado

## Block Design

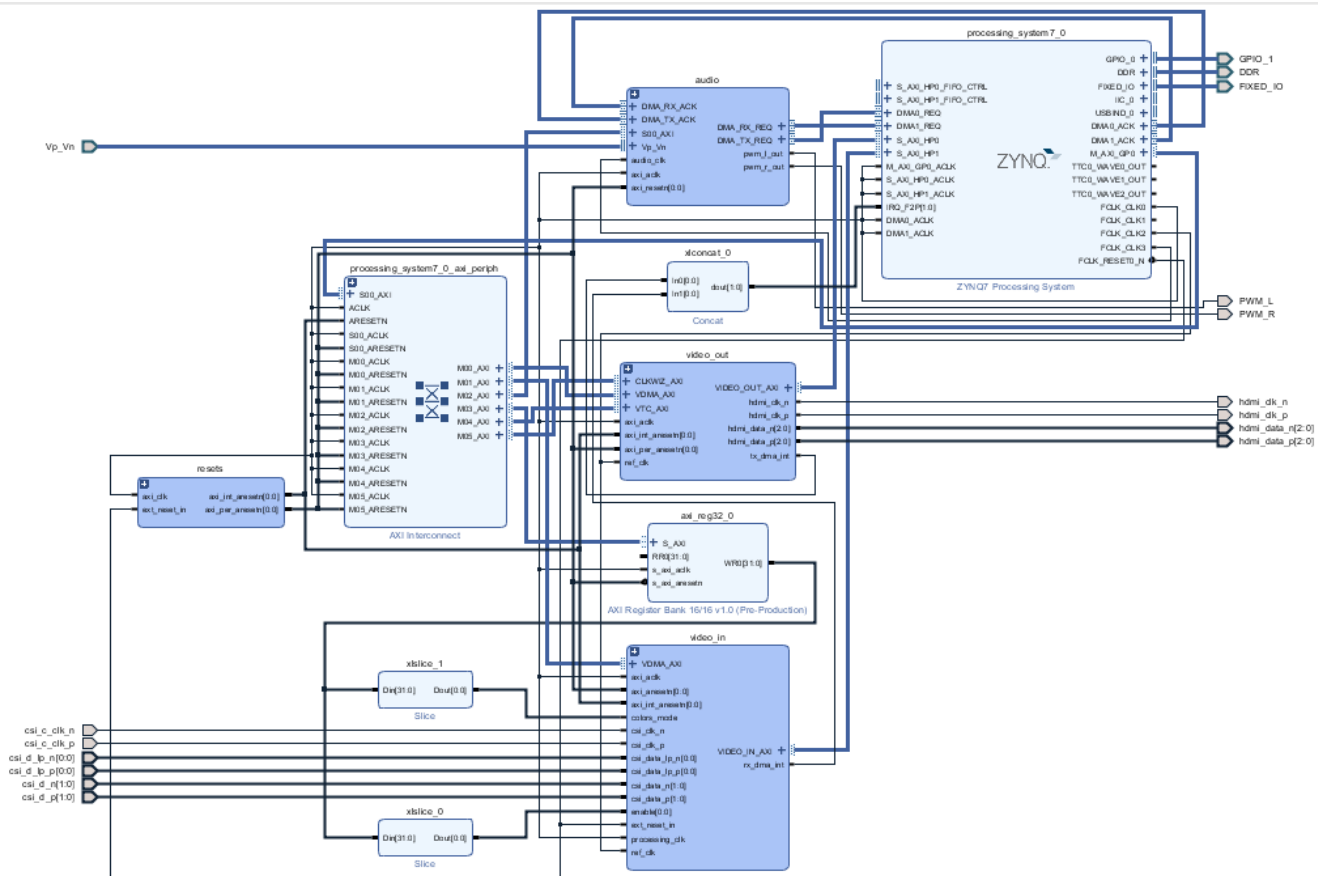

Block Design

PS Interfaces

Activated interfaces:

Type	Note
DDR	---
QSPI	MIO
USB0	MIO, ETH over USB
SD1	MIO
UART1	MIO
I2C0	EMIO
I2C1	MIO
GPIO	MIO / EMIO
USB RST	MIO
TTC0..1	MIO
WDT	MIO
AXI HP0..1	
DMA0..1	

PS Interfaces

Constraints

Basic module constraints

**\_i\_bitgen\_common.xdc**

```
#
# Common BITGEN related settings for TE0726
#
set_property BITSTREAM.GENERAL.COMPRESS TRUE [current_design]
set_property CONFIG_VOLTAGE 3.3 [current_design]
set_property CFGBVS VCCO [current_design]

set_property BITSTREAM.CONFIG.UNUSEDPIN PULLUP [current_design]
```

Design specific constraint



## \_i\_common.xdc

```
#
#
#
set_property BITSTREAM.CONFIG.UNUSEDPIN PULLUP [current_design]
```

## \_i\_te0726.xdc

```
#set_property IOSTANDARD LVCMOS33 [get_ports spdif_tx_o]
#set_property PACKAGE_PIN K15 [get_ports spdif_tx_o]

set_property IOSTANDARD LVCMOS33 [get_ports {GPIO_1_tri_io[*]}]
# GPIO Pins
# GPIO2
set_property PACKAGE_PIN K15 [get_ports {GPIO_1_tri_io[0]}]
# GPIO3
set_property PACKAGE_PIN J14 [get_ports {GPIO_1_tri_io[1]}]
# GPIO4
set_property PACKAGE_PIN H12 [get_ports {GPIO_1_tri_io[2]}]
# GPIO5
set_property PACKAGE_PIN N14 [get_ports {GPIO_1_tri_io[3]}]
# GPIO6
set_property PACKAGE_PIN R15 [get_ports {GPIO_1_tri_io[4]}]
# GPIO7
set_property PACKAGE_PIN L14 [get_ports {GPIO_1_tri_io[5]}]
# GPIO8
set_property PACKAGE_PIN L15 [get_ports {GPIO_1_tri_io[6]}]
# GPIO9
set_property PACKAGE_PIN J13 [get_ports {GPIO_1_tri_io[7]}]
# GPIO10
set_property PACKAGE_PIN H14 [get_ports {GPIO_1_tri_io[8]}]
# GPIO11
set_property PACKAGE_PIN J15 [get_ports {GPIO_1_tri_io[9]}]
# GPIO12
set_property PACKAGE_PIN M15 [get_ports {GPIO_1_tri_io[10]}]
# GPIO13
set_property PACKAGE_PIN R13 [get_ports {GPIO_1_tri_io[11]}]
# GPIO16
set_property PACKAGE_PIN L13 [get_ports {GPIO_1_tri_io[12]}]
# GPIO17
set_property PACKAGE_PIN G11 [get_ports {GPIO_1_tri_io[13]}]
# GPIO18
set_property PACKAGE_PIN H11 [get_ports {GPIO_1_tri_io[14]}]
# GPIO19
set_property PACKAGE_PIN R12 [get_ports {GPIO_1_tri_io[15]}]
# GPIO20
set_property PACKAGE_PIN M14 [get_ports {GPIO_1_tri_io[16]}]
# GPIO21
set_property PACKAGE_PIN P15 [get_ports {GPIO_1_tri_io[17]}]
# GPIO22
set_property PACKAGE_PIN H13 [get_ports {GPIO_1_tri_io[18]}]
# GPIO23
set_property PACKAGE_PIN J11 [get_ports {GPIO_1_tri_io[19]}]
# GPIO24
set_property PACKAGE_PIN K11 [get_ports {GPIO_1_tri_io[20]}]
# GPIO25
```

```

set_property PACKAGE_PIN K13 [get_ports {GPIO_1_tri_io[21]}]
# GPIO26
set_property PACKAGE_PIN L12 [get_ports {GPIO_1_tri_io[22]}]
# GPIO27
set_property PACKAGE_PIN G12 [get_ports {GPIO_1_tri_io[23]}]

## DSI_D0_N
#set_property PACKAGE_PIN F13 [get_ports {GPIO_1_tri_io[24]}]
## DSI_D0_P
#set_property PACKAGE_PIN F14 [get_ports {GPIO_1_tri_io[25]}]
## DSI_D1_N
#set_property PACKAGE_PIN F12 [get_ports {GPIO_1_tri_io[26]}]
## DSI_D1_P
#set_property PACKAGE_PIN E13 [get_ports {GPIO_1_tri_io[27]}]
## DSI_C_N
#set_property PACKAGE_PIN E11 [get_ports {GPIO_1_tri_io[28]}]
## DSI_C_P
#set_property PACKAGE_PIN E12 [get_ports {GPIO_1_tri_io[29]}]

## CSI_D0_N
#set_property PACKAGE_PIN M11 [get_ports {GPIO_1_tri_io[30]}]
## CSI_D0_P
#set_property PACKAGE_PIN M10 [get_ports {GPIO_1_tri_io[31]}]
## CSI_D1_N
#set_property PACKAGE_PIN P14 [get_ports {GPIO_1_tri_io[32]}]
## CSI_D2_P
#set_property PACKAGE_PIN P13 [get_ports {GPIO_1_tri_io[33]}]
## CSI_C_N
#set_property PACKAGE_PIN N12 [get_ports {GPIO_1_tri_io[34]}]
## CSI_C_P
#set_property PACKAGE_PIN N11 [get_ports {GPIO_1_tri_io[35]}]
## PWM_R
##set_property PACKAGE_PIN N8 [get_ports {GPIO_1_tri_io[36]}]
## PWM_L
##set_property PACKAGE_PIN N7 [get_ports {GPIO_1_tri_io[37]}]

# PWM_R
set_property PACKAGE_PIN N8 [get_ports PWM_R]
# PWM_L
set_property PACKAGE_PIN N7 [get_ports PWM_L]
set_property IOSTANDARD LVCMOS33 [get_ports PWM_*]

```

#### **\_i\_hdmi.xdc**

```

set_property IOSTANDARD TMDS_33 [get_ports hdmi_clk_p]
set_property PACKAGE_PIN R7 [get_ports hdmi_clk_p]

set_property IOSTANDARD TMDS_33 [get_ports {hdmi_data_p[*]}]
set_property PACKAGE_PIN P8 [get_ports {hdmi_data_p[0]}]
set_property PACKAGE_PIN P10 [get_ports {hdmi_data_p[1]}]
set_property PACKAGE_PIN P11 [get_ports {hdmi_data_p[2]}]

```

### i\_csi.xdc

```
set_property PACKAGE_PIN N11 [get_ports csi_c_clk_p]
set_property IOSTANDARD LVDS_25 [get_ports csi_c_clk_p]
set_property PACKAGE_PIN M9 [get_ports {csi_d_lp_n[0]}]
set_property IOSTANDARD HSUL_12 [get_ports {csi_d_lp_n[0]}]
set_property PACKAGE_PIN N9 [get_ports {csi_d_lp_p[0]}]
set_property IOSTANDARD HSUL_12 [get_ports {csi_d_lp_p[0]}]
set_property PACKAGE_PIN M10 [get_ports {csi_d_p[0]}]
set_property IOSTANDARD LVDS_25 [get_ports {csi_d_p[0]}]
set_property PACKAGE_PIN P13 [get_ports {csi_d_p[1]}]
set_property IOSTANDARD LVDS_25 [get_ports {csi_d_p[1]}]
set_property INTERNAL_VREF 0.6 [get_iobanks 34]
set_property PULLDOWN true [get_ports {csi_d_lp_p[0]}]
set_property PULLDOWN true [get_ports {csi_d_lp_n[0]}]
# RPI Camera 1
create_clock -period 6.250 -name csi_clk -add [get_ports csi_c_clk_p]
# RPI Camera 2.1
#create_clock -period 1.875 -name csi_clk -add [get_ports csi_c_clk_p]
```

### i\_timing.xdc

```
set_property ASYNC_REG true [get_cells {zsys_i/audio/axi_i2s_adi_0/U0/ctrl/tx_sync/out_data_reg[4]}]
set_property ASYNC_REG true [get_cells {zsys_i/audio/axi_i2s_adi_0/U0/ctrl/SDATA_O_reg[0]}]
set_false_path -from [get_clocks clk_fpga_0] -to [get_clocks clk_fpga_3]
set_false_path -from [get_clocks clk_fpga_3] -to [get_clocks clk_fpga_0]

set_false_path -from [get_pins {zsys_i/axi_reg32_0/U0/axi_reg32_v1_0_S_AXI_inst/slv_reg16_reg[1]/C}] -to
[get_pins zsys_i/video_in/axis_raw_demosaic_0/U0/colors_mode_i_reg/D]
set_false_path -from [get_pins zsys_i/video_in/csi_to_axis_0/U0/lane_align_inst/err_req_reg/C] -to [get_pins
zsys_i/video_in/csi2_d_phy_rx_0/U0/clock_upd_req_reg/D]

set_false_path -from [get_pins {zsys_i/video_in/axi_vdma_0/U0/I_PRMRY_DATAMOVER/GEN_S2MM_FULL.
I_S2MM_FULL_WRAPPER/GEN_INCLUDE_REALIGNER.I_S2MM_REALIGNER/GEN_INCLUDE_SCATTER.I_S2MM_SCATTER
/sig_max_first_increment_reg[2]/C}] -to [get_pins zsys_i/video_in/axi_vdma_0/U0/I_PRMRY_DATAMOVER/GEN_S2MM_FULL.
I_S2MM_FULL_WRAPPER/GEN_INCLUDE_REALIGNER.I_S2MM_REALIGNER/GEN_INCLUDE_SCATTER.I_S2MM_SCATTER/sig_btt_eq_0_reg
/D]
set_false_path -from [get_pins {zsys_i/video_in/axi_vdma_0/U0/I_PRMRY_DATAMOVER/GEN_S2MM_FULL.
I_S2MM_FULL_WRAPPER/GEN_INCLUDE_REALIGNER.I_S2MM_REALIGNER/GEN_INCLUDE_SCATTER.I_S2MM_SCATTER
/sig_btt_cntr_dup_reg[1]/C}] -to [get_pins zsys_i/video_in/axi_vdma_0/U0/I_PRMRY_DATAMOVER/GEN_S2MM_FULL.
I_S2MM_FULL_WRAPPER/GEN_INCLUDE_REALIGNER.I_S2MM_REALIGNER/GEN_INCLUDE_SCATTER.I_S2MM_SCATTER/sig_btt_eq_0_reg
/D]
```

## Software Design - Vitis

For SDK project creation, follow instructions from:

Vitis

## Application

SDK template in ./sw\_lib/sw\_apps/ available.

### zynq\_fsbl

TE modified 2019.2 FSBL

General:

- Modified Files: main.c, fsbl\_hooks.h/.c (search for 'TE Mod' on source code)
- Add Files: te\_fsbl\_hooks.h/.c (for hooks and board)\n\
- General Changes:
  - Display FSBL Banner and Device ID

Module Specific:

- Add Files: all TE Files start with te\_\*
  - enable VTC and VDMA cores for debian desktop

### zynq\_fsbl\_flash

TE modified 2019.2 FSBL

General:

- Modified Files: main.c
- General Changes:
  - Display FSBL Banner
  - Set FSBL Boot Mode to JTAG
  - Disable Memory initialisation

### hello\_te0726

Hello TE0726 is a Xilinx Hello World example as an endless loop instead of one console output and TE FSBL screen on HDMI Monitor.

### u-boot

U-Boot.elf is generated with PetaLinux. Vitis is used to generate Boot.bin.

## Software Design - PetaLinux

For PetaLinux installation and project creation, follow instructions from:

- [PetaLinux KICKstart](#)

## Config

Start with **petalinux-config** or **petalinux-config --get-hw-description**

For 64MB variant only:

- CONFIG\_SUBSYSTEM\_NETBOOT\_OFFSET = 0x2000000

For 128MB variant only:

- CONFIG\_SUBSYSTEM\_NETBOOT\_OFFSET = 0x4000000

## U-Boot

Start with **petalinux-config -c u-boot**

Changes:

- CONFIG\_ENV\_IS\_NOWHERE=y
- # CONFIG\_ENV\_IS\_IN\_SPI\_FLASH is not set

## Device Tree

```
/include/ "system-conf.dtsi"
/ {
};

/ {
    #address-cells = <1>;
    #size-cells = <1>;

    reserved-memory {
        #address-cells = <1>;
        #size-cells = <1>;
        ranges;
        hdmi_fb_reserved_region@1FC00000 {
            compatible = "removed-dma-pool";
            no-map;
            // 512M (M modules)
            reg = <0x1FC00000 0x400000>;
            // 128M (R modules)
            //reg = <0x7C000000 0x400000>;
        };
        camera_fb_reserved_region@1F800000 {
            compatible = "removed-dma-pool";
            no-map;
            // 512M (M modules)
            reg = <0x1F800000 0x400000>;
            // 128M (R modules)
            //reg = <0x78000000 0x400000>;
        };
    };

    hdmi_fb: framebuffer@0x1FC00000 {           // HDMI out
        compatible = "simple-framebuffer";
        // 512M (M modules)
        reg = <0x1FC00000 (1280 * 720 * 4)>;    // 720p
        // 128M (R modules)
        //reg = <0x7C000000 (1280 * 720 * 4)>;  // 720p
        width = <1280>;                        // 720p
        height = <720>;                        // 720p
        stride = <(1280 * 4)>;                  // 720p
        format = "a8b8g8r8";
        status = "okay";
    };

    camera_fb: framebuffer@0x1F800000 {       // CAMERA in
```

```

        compatible = "simple-framebuffer";
        // 512M (M modules)
        reg = <0x1F800000 (1280 * 720 * 4)>; // 720p
        // 128M (R modules)
        //reg = <0x78000000 (1280 * 720 * 4)>; // 720p
        width = <1280>; // 720p
        height = <720>; // 720p
        stride = <(1280 * 4)>; // 720p
        format = "a8b8g8r8";
    };

    vcc_3V3: fixedregulator@0 {
        compatible = "regulator-fixed";
        regulator-name = "vccaux-supply";
        regulator-min-microvolt = <3300000>;
        regulator-max-microvolt = <3300000>;
        regulator-always-on;
    };
};

&qspi {
    #address-cells = <1>;
    #size-cells = <0>;
    status = "okay";
    flash0: flash@0 {
        compatible = "jedec,spi-nor";
        reg = <0x0>;
        #address-cells = <1>;
        #size-cells = <1>;
        spi-max-frequency = <50000000>;
        partition@0x00000000 {
            label = "boot";
            reg = <0x00000000 0x00500000>;
        };
        partition@0x00500000 {
            label = "bootenv";
            reg = <0x00500000 0x00020000>;
        };
        partition@0x00520000 {
            label = "kernel";
            reg = <0x00520000 0x00a80000>;
        };
        partition@0x00fa0000 {
            label = "spare";
            reg = <0x00fa0000 0x00000000>;
        };
    };
};

/*
 * We need to disable Linux VDMA driver as VDMA
 * already configured in FSBL
 */
&video_in_axi_vdma_0 {
    status = "disabled";
};

&video_out_axi_vdma_0 {
    status = "disabled";
};

```

```

&video_out_v_tc_0 {
    //xilinx-vtc: probe of 43c20000.v_tc failed with error -2
    status = "disabled";
};

&gpio0 {
    interrupt-controller;
    #interrupt-cells = <2>;
};

&i2c1 {
    #address-cells = <1>;
    #size-cells = <0>;

    i2cmux0: i2cmux@70 {
        compatible = "nxp,pca9544";
        #address-cells = <1>;
        #size-cells = <0>;
        reg = <0x70>;

        i2c1@0 {
            #address-cells = <1>;
            #size-cells = <0>;
            reg = <0>;

            id_eeprom@50 {
                compatible = "atmel,24c32";
                reg = <0x50>;
            };
        };

        i2c1@1 { // Display Interface Connector
            #address-cells = <1>;
            #size-cells = <0>;
            reg = <1>;
        };

        i2c1@2 { // HDMI Interface Connector
            #address-cells = <1>;
            #size-cells = <0>;
            reg = <2>;
        };

        i2c1@3 { // Camera Interface Connector
            #address-cells = <1>;
            #size-cells = <0>;
            reg = <3>;
        };
    };
};

/{
    usb_phy0: usb_phy@0 {
        compatible = "ulpi-phy";
        #phy-cells = <0>;
        reg = <0xe0002000 0x1000>;
        view-port = <0x0170>;
        drv-vbus;
    };
};

```

```

&usb0 {
    usb-phy = <&usb_phy0>;
} ;

/*
 * Sound configuration
 */

/{
    // Custom driver based on spdif-transmitter
    te_audio: dummy_codec_te {
        compatible = "te,te-audio";
        #sound-dai-cells = <0>;
    };

    // Simple Audio Card from AXI_I2S and custom XADC audio input and
    // PWM audio output cores
    sound {
        compatible = "simple-audio-card";
        simple-audio-card,name = "TE0726-PWM-Audio";
        simple-audio-card,format = "i2s";
        simple-audio-card,widgets =
            "Microphone", "In Jack",
            "Line", "Line In Jack",
            "Line", "Line Out Jack",
            "Headphone", "Out Jack";

        simple-audio-card,routing =
            "Out Jack", "te-out",
            "te-in", "In Jack";

        simple-audio-card,cpu {
            sound-dai = <&audio_axi_i2s_adi_0>;
        };
        simple-audio-card,codec {
            sound-dai = <&te_audio>;
        };
    };
};

&audio_axi_i2s_adi_0 {
    compatible = "adi,axi-i2s-1.00.a";
    reg = <0x43c00000 0x1000>;
    clocks = <&clkc 15>, <&clkc 18>; // FCLK_CLK0, FCLK_CLK3
    clock-names = "axi", "ref";
    dmas = <&dmac_s 0 &dmac_s 1>;
    dma-names = "tx", "rx";
    #sound-dai-cells = <0>;
};

/*
 * We need to disable Linux XADC driver to use XADC for audio recording
 */
&adc {
    status = "disabled";
};

```



## Kernel

Start with **petalinux-config -c kernel**

Changes:

- CONFIG\_XILINX\_GMII2RGMII=y
- CONFIG\_USB\_USBNET=y
- CONFIG\_USB\_NET\_AX8817X=y
- CONFIG\_USB\_NET\_AX88179\_178A=y
- CONFIG\_USB\_NET\_CDCETHER=y
- # CONFIG\_USB\_NET\_CDC\_EEM is not set
- CONFIG\_USB\_NET\_CDC\_NCM=y
- # CONFIG\_USB\_NET\_HUAWEI\_CDC\_NCM is not set
- # CONFIG\_USB\_NET\_CDC\_MBIM is not set
- # CONFIG\_USB\_NET\_DM9601 is not set
- # CONFIG\_USB\_NET\_SR9700 is not set
- # CONFIG\_USB\_NET\_SR9800 is not set
- # CONFIG\_USB\_NET\_SMSC75XX is not set
- CONFIG\_USB\_NET\_SMSC95XX=y
- # CONFIG\_USB\_NET\_GL620A is not set
- CONFIG\_USB\_NET\_NET1080=y
- # CONFIG\_USB\_NET\_PLUSB is not set
- # CONFIG\_USB\_NET\_MCS7830 is not set
- # CONFIG\_USB\_NET\_RNDIS\_HOST is not set
- CONFIG\_USB\_NET\_CDC\_SUBSET\_ENABLE=y
- CONFIG\_USB\_NET\_CDC\_SUBSET=y
- # CONFIG\_USB\_ALI\_M5632 is not set
- # CONFIG\_USB\_AN2720 is not set
- CONFIG\_USB\_BELKIN=y
- CONFIG\_USB\_ARMLINUX=y
- # CONFIG\_USB\_EPSON2888 is not set
- # CONFIG\_USB\_KC2190 is not set
- CONFIG\_USB\_NET\_ZAURUS=y
- # CONFIG\_USB\_NET\_CX82310\_ETH is not set
- # CONFIG\_USB\_NET\_KALMIA is not set
- # CONFIG\_USB\_NET\_QMI\_WWAN is not set
- # CONFIG\_USB\_NET\_INT51X1 is not set
- # CONFIG\_USB\_SIERRA\_NET is not set
- # CONFIG\_USB\_VL600 is not set
- # CONFIG\_USB\_NET\_CH9200 is not set
- CONFIG\_USBIP\_CORE=y
- # CONFIG\_USBIP\_VHCI\_HCD is not set
- # CONFIG\_USBIP\_HOST is not set
- # CONFIG\_USBIP\_VUDC is not set
- # CONFIG\_USBIP\_DEBUG is not set
- CONFIG\_FB\_SIMPLE=y
- CONFIG\_SND\_SIMPLE\_CARD\_UTILS=y
- CONFIG\_SND\_SIMPLE\_CARD=y
- # CONFIG\_FRAMEBUFFER\_CONSOLE is not set

## Rootfs

Start with **petalinux-config -c rootfs**

Activate:

- i2c-tools
- alsa-plugins
- alsa-lib-dev
- libasound
- alsa-conf-base
- alsa-conf
- alsa-utils
- alsa-utils-aplay
- busybox-httpd

# Applications

## startup

Script App to load init.sh from SD Card if available.  
See: \os\petalinux\project-spec\meta-user\recipes-apps\startup\files

## rpicam

Application used to enable and configure Raspbery Pi camera module  
See: \os\petalinux\project-spec\meta-user\recipes-apps\rpicam\files

## fbgrab

Application used to take screenshot from camera  
See: \os\petalinux\project-spec\meta-user\recipes-apps\fbgrab

## webfwu

Webserver application accembles for Zynq access. Need busybox-httpd  
See: \os\petalinux\project-spec\meta-user\recipes-apps\webfwu\files

# Kernel Modules

## te-audio-codec

Simple module stub to use audio interface.  
See: \os\petalinux\project-spec\meta-user\recipes-modules\te-audio-codec\files

# Additional Software

No additional software is needed.

# Appx. A: Change History and Legal Notices

## Document Change History

To get content of older revision go to "Change History" of this page and select older document revision number.

Date	Document Revision	Authors	Description
------	-------------------	---------	-------------

<p><b>Error rendering macro 'page-info'</b></p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<p><b>Error rendering macro 'page-info'</b></p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<p><b>Error rendering macro 'page-info'</b></p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<ul style="list-style-type: none"> <li>• typo</li> <li>• Programming issue note</li> </ul>
2020-03-25	v.14	John Hartfiel	<ul style="list-style-type: none"> <li>• script update</li> </ul>
2020-02-20	v.13	Mohsen Chamanbaz	<ul style="list-style-type: none"> <li>• Vivado 2019.2 release</li> </ul>
2020-01-14	v.11	Mohsen Chamanbaz	<ul style="list-style-type: none"> <li>• Vivado 2018.3 release</li> </ul>
2019-02-12	v.10	John Hartfiel	<ul style="list-style-type: none"> <li>• design linux source update</li> </ul>

2018-12-05	v.7	John Hartfiel	<ul style="list-style-type: none"> <li>Vivado 2018.2 release</li> </ul>
--	all	<div> <p><b>Error rendering macro 'page-info'</b></p> <p>Ambiguous method overloading for method jdk.proxy241.\$Proxy3496#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p> </div>	--

Document change history.

## Legal Notices

## Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

## Document Warranty

The material contained in this document is provided "as is" and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

## Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

## Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

## Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

## Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

## REACH, RoHS and WEEE

### REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#). The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#) are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#).

### RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

### WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

**Error rendering macro 'page-info'**

Ambiguous method overloading for method `jdk.proxy241.$Proxy3496#hasContentLevelPermission`. Cannot resolve which method to invoke for `[null, class java.lang.String, class com.atlassian.confluence.pages.Page]` due to overlapping prototypes between: `[interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]` `[interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]`