

TE0714 TRM

[Download PDF version of this document.](#)

Table of Contents

- [Overview](#)
 - [Key Features](#)
 - [Block Diagram](#)
 - [Main Components](#)
 - [Initial Delivery State](#)
 - [Control Signals](#)
- [Signals, Interfaces and Pins](#)
 - [JTAG Interface](#)
 - [Board to Board \(B2B\) I/Os](#)
- [On-board Peripherals](#)
 - [Quad SPI Flash](#)
 - [On-board LED](#)
 - [Clock](#)
- [Power and Power-On Sequence](#)
 - [Power Consumption](#)
 - [Power Distribution Dependencies](#)
 - [Power-On Sequence](#)
 - [Power Rails](#)
 - [Bank Voltages](#)
- [Board to Board Connectors](#)
 - [Connector Speed Ratings](#)
 - [Current Rating](#)
 - [Connector Mechanical Ratings](#)
 - [Manufacturer Documentation](#)
- [Technical Specifications](#)
 - [Absolute Maximum Ratings](#)
 - [Recommended Operating Conditions](#)
 - [Physical Dimensions](#)
- [Variants Currently In Production](#)
- [Revision History](#)
 - [Hardware Revision History](#)
 - [Document Change History](#)
- [Disclaimer](#)
 - [Data Privacy](#)
 - [Document Warranty](#)
 - [Limitation of Liability](#)
 - [Copyright Notice](#)
 - [Technology Licenses](#)
 - [Environmental Protection](#)
 - [REACH, RoHS and WEEE](#)

Overview

The Trenz Electronic TE0714 is an industrial-grade SoM (System on Module) based on Xilinx Artix-7, 16 MByte Flash memory and powerful switching mode power supplies for all on-board voltages. A large number of configurable I/O's is provided via rugged high-speed stacking strips. TE0714 is the smallest module with transceiver (3 x 4 cm).

Refer to <http://trenz.org/te0714-info> for the current online version of this manual and other available documentation.

Key Features


- Xilinx Artix-7 FPGA (A15T, A35T, A50T)
- Rugged for shock and high vibration

- 16 MByte QSPI Flash memory
- Differential MEMS oscillator for MGT clocking
- MEMS oscillator for PL clocks (Optional)
- Plug-on module with 2 x 100-pin high-speed hermaphroditic strips
 - 138 FPGA I/O's (Max 68 differential)
 - 5 IO's (QSPI or user I/O's)
 - XADC analog input
 - 4 GTP (high-performance transceiver) lanes
 - GT reference clock inputs
 - Optimized I/O and power pins for good signal integrity
- On-board high-efficiency DC-DC converters
- Power supply for all on-board components
- eFUSE bit-stream encryption (AES)
- One user configurable LED

Different configurations for cost and performance optimization available upon request. Available options are:


- FPGA Type (A15T, A35T, A50T), temperature grade
- GT clock frequency (or none if not implemented)
- PL clock frequency and precision (or none if not implemented)
- Config and B14 bank Voltage: 1.8V or 3.3V
- SPI Flash type (or none if not implemented)
- LED Color (or none if not implemented)
- PUDC Pin strapping (pull high or pull down)
- GT power enable pin strapping (default power enabled or disabled)

Block Diagram

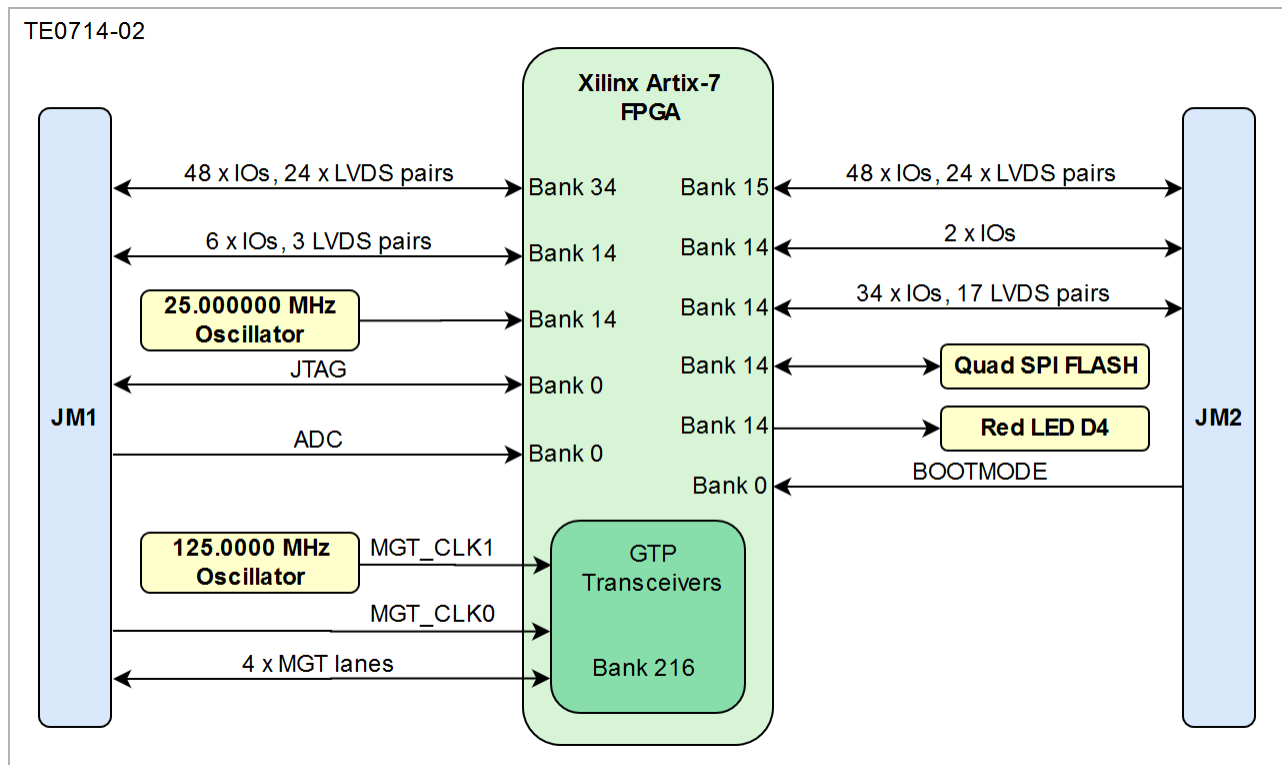

TE0714 block diagram

Main Components

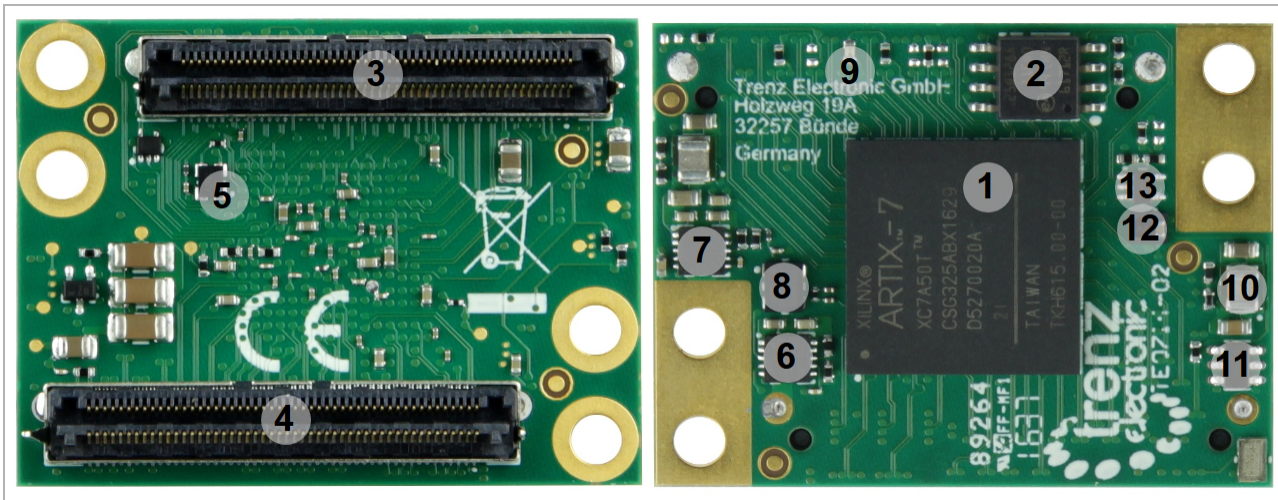

TE0714 main components

1. Xilinx Artix-7 FPGA (XC7A series), U4
2. 16 MByte SPI Flash, U7
3. B2B connector Samtec Razor Beam™ LSHM-150, JM2
4. B2B connector Samtec Razor Beam™ LSHM-150, JM1
5. 25 MHz oscillator, U8
6. Single output low-dropout linear regulator (1.2V_MGT), U6
7. Single output low-dropout linear regulator (1.0V_MGT), U5
8. Low-jitter precision LVDS 125 MHz oscillator (GT Clock), U2
9. Red indication LED, D4
10. Step-down DC-DC converter (1.0V), U1
11. PFET load switch with configurable slew rate (3.3V), Q1
12. Low-power step-down DC-DC converter (1.8V), U3
13. Voltage detector for circuit initialization and timing supervision, U23

Initial Delivery State

Storage device name	Content	Notes
SPI Flash OTP Area	Empty, not programmed	Except serial number programmed by flash vendor
SPI Flash Quad Enable bit	Programmed	
SPI Flash main array	demo design	
eFUSE USER	Not programmed	
eFUSE Security	Not programmed	


Initial delivery state of programmable devices on the module.

Control Signals

Boot process is controlled by signals on the board to board (B2B) connector.

Signal	Direction	Signal State	Description
BOOTMODE	input	high or open	Master SPI, x4 Mode
		low or ground	Slave SelectMAP
PROG_B	input	pulsed low	Clear FPGA configuration (falling edge) and initiate a new configuration sequenz (next rising edge).
DONE	output	high	Completion of configuration sequence.

Boot signals.



SPI FPGA pins D02 and D03 have no pull-ups on the module, so with PUDC=High option, those pins are floating if there are no pull-ups on baseboard. As those pins have SPI RESET function when Quad mode is not enabled, it is mandatory to either add pull-ups on user baseboard or program the Quad Enable bit in Flash nonvolatile status register.

Signals, Interfaces and Pins

JTAG Interface

JTAG access to the Xilinx Artix-7 FPGA device is provided through connector JM1.

Signal Name	B2B Pin
TCK	JM1:89
TDI	JM1:85
TDO	JM1:87
TMS	JM1:91

JTAG signals.

Board to Board (B2B) I/Os

FPGA bank number and number of I/O signals connected to the B2B connector:

FPGA Bank	B2B Connector	I/O Signal Count	Voltage Level	Notes
14	JM1	6	VCCIO_0	
14	JM2	36	VCCIO_0	NB! 17 LVDS pairs possible.
15	JM2	48	VCCIO15	Supplied by the baseboard.
34	JM1	48	VCCIO34	Supplied by the baseboard.
216	JM1	16	MGT_AVCC MGT_AVTT	4 x GTP lanes.

B2B I/Os

Please refer to the [Pin-out](#) tables page for additional information.

On-board Peripherals

Quad SPI Flash

On-board SPI flash memory S25FL127S (U7) is used to store initial FPGA configuration. Besides FPGA configuration, remaining free flash memory can be used for user application storage. All four SPI data lines are connected to the FPGA allowing x1, x2 or x4 data bus widths. Maximum data rate depends on the bus width and clock frequency used.



SPI Flash QE (Quad Enable) bit must be set to high or FPGA is unable to load its configuration from flash. By default this bit is set to high at the manufacturing plant.

On-board LED

There is one LED on TE0714 module.

LED	Color	FPGA	Notes
D4	Red	K18	User programmable

LED connection.

Clock

Clock	Default Frequency	IC	FPGA	Notes
CLK25MHz	25 MHz	U8	T14	Frequency depends on the module variant. Output is compatible to 3.3V and 1.8V I/O standard of the FPGA bank.
MGT_CLK	125MHz	U2	B6/B5	Frequency depends on the module variant

Clock signals.

Power and Power-On Sequence

To power-up a module, power supply with minimum current capability of 1A is recommended.

TE0714 needs one single power supply with nominal of 3.3V.

Power Consumption


Test Condition (25 °C ambient)	VIN Current mA	Notes
TE0714-35, TEBT0714, empty design, GT not enabled	110mA	

Power Consumption

Actual power consumption depends on the FPGA design and ambient temperature.

Power Distribution Dependencies

TE0714-02

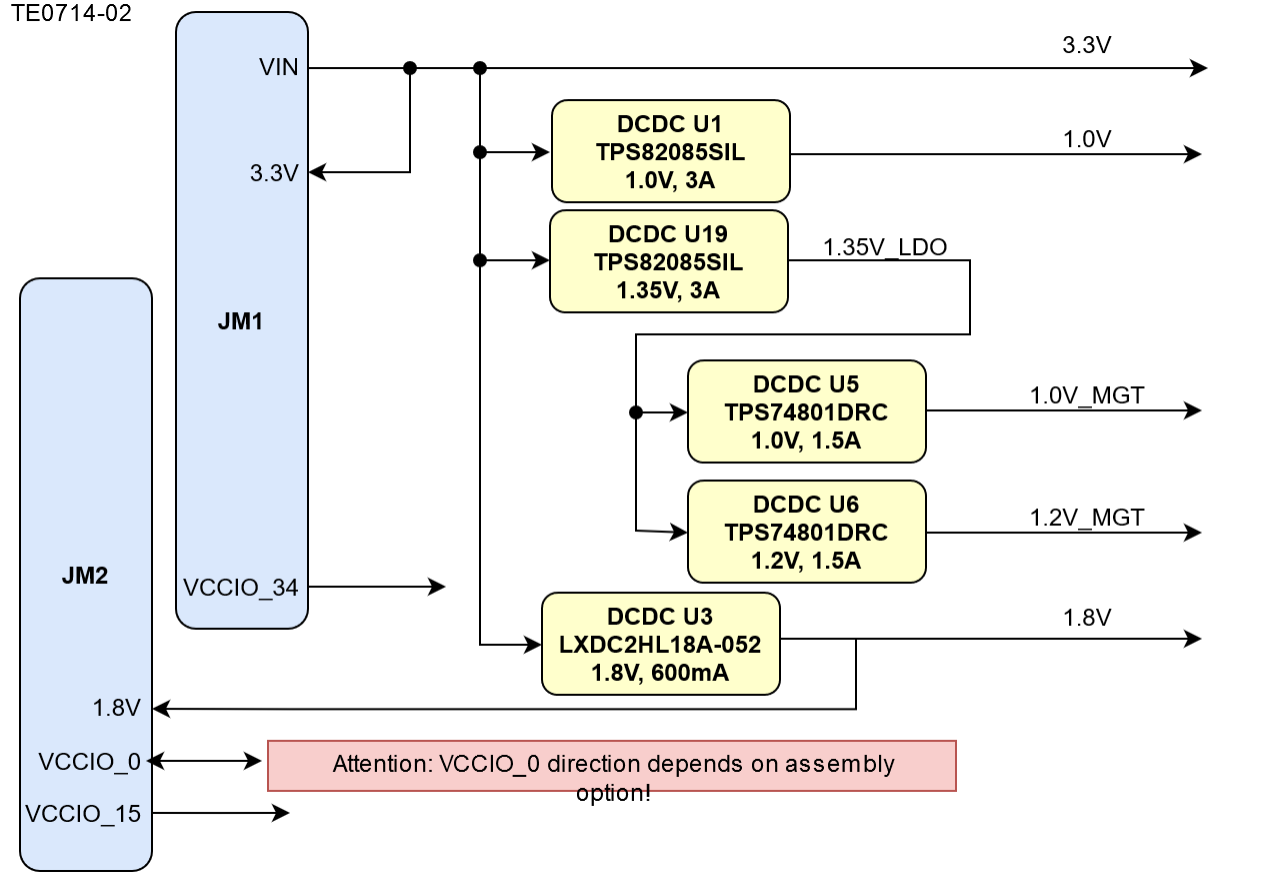


Power Distribution

Power-On Sequence

There is no specific or special power-on sequence, single power source is needed as VIN, rest of the sequence is automatic.

TE0714-02

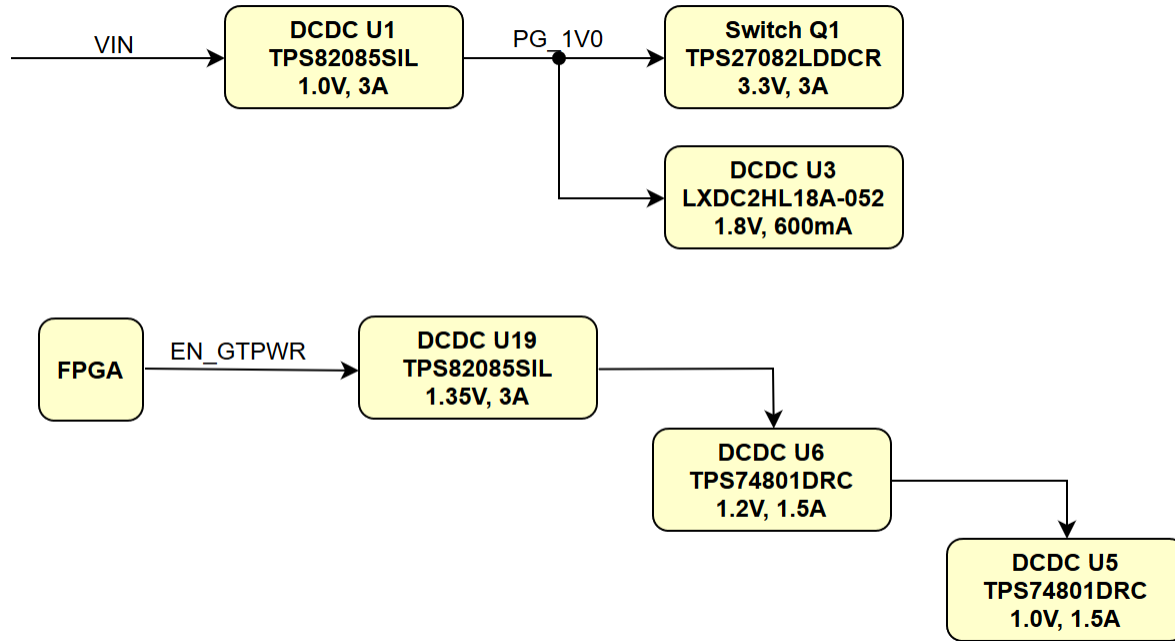

Power-On Sequence

Power Rails

Voltages on B2B-Connector	B2B JM1-Pin	B2B JM2-Pin	Direction	Note
VIN	98, 100	-	input	supply voltage
VCCIO_0	-	54	input	high range bank voltage
VCCIO_15	-	53	input	high range bank voltage
VCCIO_34	62	-	input	high range bank voltage
3.3V	84	-	output	internal 3.3V voltage level
1.8V	-	17	output	internal 1.8V voltage level

Power Rails

Bank Voltages

Bank	Voltage	Notes
0 Config and B14	1.8V or 3.3V	Depends on module assembly variant. See R21, R22 and R27 assembly option*
15	User	Supplied from baseboard via B2B connector, max 3.3V
34	User	Supplied from baseboard via B2B connector, max 3.3V

- *R21 assembled: 3.3V and B2B is output if R27 is assembled
- *R22 assembled 1.8V and B2B is output if R27 is assembled

- *R21 and R22 **not** assembled , B2B is input and carrier defines voltage pay attention on assembled flash!

Bank Voltages

Board to Board Connectors



These connectors are hermaphroditic. Odd pin numbers on the module are connected to even pin numbers on the baseboard and vice versa.

3 x 4 modules use two [Samtec Razor Beam LSHM connectors](#) on the bottom side.

- 2 x REF-189016-02 (compatible to LSHM-150-04.0-L-DV-A-S-K-TR), (100 pins, "50" per row).

When using the same type on baseboard, the mating height is 8mm. Other mating heights are possible by using connectors with a different height.

Order number	Connector on baseboard	compatible to	Mating height
23836	REF-189016-01	LSHM-150-02.5-L-DV-A-S-K-TR	6.5 mm
	LSHM-150-03.0-L-DV-A-S-K-TR	LSHM-150-03.0-L-DV-A-S-K-TR	7.0 mm
23838	REF-189016-02	LSHM-150-04.0-L-DV-A-S-K-TR	8.0 mm
	LSHM-150-06.0-L-DV-A-S-K-TR	LSHM-150-06.0-L-DV-A-S-K-TR	10.0mm

Connectors.

The module can be manufactured using other connectors upon request.

Connector Speed Ratings

The LSHM connector speed rating depends on the stacking height; please see the following table:

Stacking height	Speed rating
12 mm, Single-Ended	7.5 GHz / 15 Gbps
12 mm, Differential	6.5 GHz / 13 Gbps
5 mm, Single-Ended	11.5 GHz / 23 Gbps
5 mm, Differential	7.0 GHz / 14 Gbps

Speed rating.

Current Rating

Current rating of Samtec Razor Beam™ LSHM B2B connectors is 2.0A per pin (2 adjacent pins powered).

Connector Mechanical Ratings

- Shock: 100G, 6 ms Sine
- Vibration: 7.5G random, 2 hours per axis, 3 axes total

Manufacturer Documentation

File

Modified

PDF File hsc-report_lshm-lshm-05mm_web.pdf	18 09, 2018 by Martin Rohrmüller
PDF File lshm_dv.pdf	18 09, 2018 by Martin Rohrmüller
PDF File LSHM-1XX-XX.X-X-DV-A-X-X-TR-FOOTPRINT(1).pdf	18 09, 2018 by Martin Rohrmüller
PDF File LSHM-1XX-XX.X-XX-DV-A-X-X-TR-MKT.pdf	18 09, 2018 by Martin Rohrmüller
PDF File REF-189016-01.pdf	18 09, 2018 by Martin Rohrmüller
PDF File REF-189016-02.pdf	18 09, 2018 by Martin Rohrmüller
PDF File TC0923--2523_report_Rev_2_qua.pdf	18 09, 2018 by Martin Rohrmüller
PDF File tc0929--2611_qua(1).pdf	18 09, 2018 by Martin Rohrmüller

[Download All](#)

Technical Specifications

Absolute Maximum Ratings

Parameter	Min	Max	Units	Reference Document
VIN supply voltage	-0.1	6.0	V	-
HR I/O banks supply voltage (VCCO)	-0.5	3.6	V	Xilinx datasheet DS181
HR I/O banks input voltage	-0.4	VCCO + 0.55	V	Xilinx datasheet DS181
GTP transceivers Tx/Rx input voltage	-0.5	1.26	V	Xilinx datasheet DS181
Voltage on module JTAG pins	-0.4	VCCO_0 + 0.55	V	Xilinx datasheet DS181
Storage temperature	-40	+100	°C	-

Module absolute maximum ratings.

Recommended Operating Conditions

This TRM is generic for all variants.

Variants of modules are described here: [Article Number Information](#)

Modules with commercial temperature grade are equipped with components that cover at least the range of 0°C to 75°C

Modules with extended temperature grade are equipped with components that cover at least the range of 0°C to 85°C

Modules with industrial temperature grade are equipped with components that cover at least the range of -40°C to 85°C

The actual operating temperature range will depend on the FPGA / SoC design / usage and cooling and other variables.

Parameter	Min	Max	Units	Reference Document
VIN supply voltage	3.135	3.45	V	-
HR I/O banks supply voltage (VCCO)	1.14	3.465	V	Xilinx datasheet DS181


HR I/O banks input voltage	-0.20	VCCO + 0.20V	V	Xilinx datasheet DS181
Voltage on module JTAG pins	0	VCCO_0 + 5%	V	Xilinx datasheet DS181

Recommended Operating Conditions

Physical Dimensions

- Module size: 40 mm x 30 mm. Please download the assembly diagram for exact numbers.
- Mating height with standard connectors: 8 mm
- PCB thickness: 1.6 mm
- Highest part on PCB: approximately 2.5 mm. Please download the step model for exact numbers.

All dimensions are shown in mm. Additional sketches, drawings and schematics can be found [here](#).

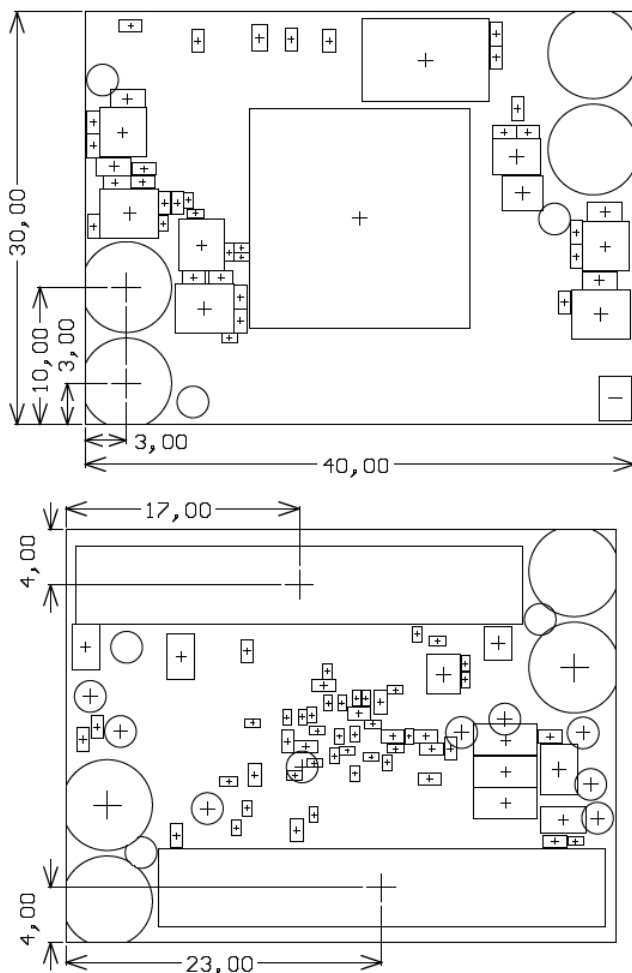


Physical dimensions drawing

Variants Currently In Production

Trenz shop TE0714 overview page

English page	German page
------------------------------	-----------------------------

Trenz Electronic Shop Overview



On REV 01 JM2 Pin 54 was connected to GND. When R27 is not populated, REV 02 is backwards compatible to REV 01. When R27 is set, check your baseboard to not connect this pin to GND. For all new baseboards JM2.54 should be used as VCCIO output (it will then be 1.8V or 3.3V depending the voltage settings on the module).

Revision History

Hardware Revision History

Date	Revision	PCN	Documentation Link	Note
2016-08-04	02	PCN-20160815	TE0714-02	VCCIO0 added to B2B
	01	-	TE0714-01	-

Hardware Revision History

Hardware revision number is printed on the PCB board next to the module model number separated by the dash.



Document Change History

Date	Revision	Authors	Description
------	----------	---------	-------------

<p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p>	<ul style="list-style-type: none"> Updated storage temperature.
2021-04-07	v59	Thomas Steffens	<ul style="list-style-type: none"> changed operating conditions
2019-03-04	v55	John Hartfiel	<ul style="list-style-type: none"> Restore and modify v. 50 Correction max IO count on key features Change history table typo correction

2019-01-07	v.50	John Hartfiel	<ul style="list-style-type: none"> • Updated to TRM version 2.2 • Style modifications
2018-09-19	v.48	Martin Rohrmüller	<ul style="list-style-type: none"> • Updated to TRM version 2.1 • Updated B2B Connectors • Style modifications
2018-09-17	v.38	Martin Rohrmüller	<ul style="list-style-type: none"> • Added power rail section • Added Rev 02 Flash PCN • Corrected table headings
2018-09-17	v.36	Martin Rohrmüller	<ul style="list-style-type: none"> • Update to TRM version 2.0 with DrawIO Figures • Added Figure Power Distribution
2018-04-04	v.35	Martin Rohrmüller	Corrected clock net designator in table.
2017-05-28	v.27	Jan Kumann	<ul style="list-style-type: none"> • Board-to-Board I/O section added. • New physical dimensions images. • Documents sections rearranged.

2017-03-20	v.26	John Hartfiel	<ul style="list-style-type: none"> Notes on Clocking section.
2017-01-27	v.25	Jan Kumann	<ul style="list-style-type: none"> New block diagram.
2016-12-01	v.17	Jan Kumann	<ul style="list-style-type: none"> Changes in the document structure, few corrections.
2016-11-18	v.14	Thorsten Trenz, Emmanuel Vassilakis	<ul style="list-style-type: none"> Hardware revision 02 specific changes.
2016-06-01	v.9	Antti Lukats	<ul style="list-style-type: none"> Initial version.

--	all	<div><p>Error rendering macro 'page-info'</p><p>Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]</p></div>	--
----	-----	--	----

Document change history

Disclaimer

Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

Document Warranty

The material contained in this document is provided "as is" and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

REACH, RoHS and WEEE

REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#). The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#) are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#).

RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Ambiguous method overloading for method `jdk.proxy279.$Proxy4022#hasContentLevelPermission`. Cannot resolve which method to invoke for `[null, class java.lang.String, class com.atlassian.confluence.pages.Page]` due to overlapping prototypes between: `[interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]` `[interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]`