

TE0720 CPLD

- 1 Overview

Overview

- 1.2 Firmware Revision and supported PCB Revision

A Lattice XO2-1200 CPLD (U19) is used as a System Management Controller. The SC is responsible for power sequencing, reset generation and zynq initial configuration (mode pin strapping). Moreover, some on-board ICs are connected to the SC that provides level shifting. The SC wakes up when the 3.3V input power rises above 2.1V (ZYNQ voltage is not needed). The SC can turn on or off all of the other supplies on the module (except in no power sequencing mode when the 1.0V and 1.8 V supplies are forced to start immediately when power is applied to the module).

System Controller (SC) was designed to allow ZYNQ PS system to access module special functions as early as possible without reducing the number of MIO pins that are fully user configurable. This early communication channel is done using MIO52 and MIO53 pins that are used also as ethernet PHY management interface for the on-board gigabit PHY. In order to simplify the boot process and reduce the number of time the PS peripherals need to be configured or re-initialized SC uses the same protocol on MIO52/MIO53 as the Gigabit PHY itself. This means that FSBL configures all peripherals to their final function, allocating MIO52 and MIO53 as ethernet MDIO interface. SC controller appears as "Virtual Ethernet PHY" on the MDIO bps of PS ethernet 0 interface. This interface is already available when Zynq PL Fabric is not configured. It would have been possible to use I2C protocol on MIO52/MIO53 but in such case some multiplexing would be needed to choose between two protocols, also it would be needed to change the peripheral mapping after first init by the FSBL. For use cases where ethernet PHY on TE0720 is not used at all, it is still possible to configure SC with design that implements I2C protocol on MIO52/MIO53 pins. For most use cases the only need to use this interface is access to MAC address info, this is normally done by u-boot loader that fetches the MAC address bytes and sets its environment variables accordingly. Linux image will then also be started so that the MAC address from EEPROM is used for ethernet 0 physical interface.

Feature Summary

- Power Management
- Reset Management
- JTAG Booting
- Boot Mode
- User IO
- LED
- MDIO Interface
- UNI/O MAC access
- Watchdog Timer
- I2C

Firmware Revision and supported PCB Revision

See Document Change History

Product Specification

Port Description

Name / opt. VHD Name	Direction	Pin	Pullup/Down	Bank Power	Description
BOOT_R / BOOTMODE_R	out	N12	NONE	3.3V	If low then the QSPI flash can not be written. (Write protect)

BOOT_R5 / BOOTMODE_R5	out	M11	DOWN	3.3V	If low then the QSPI flash will be reset. (HOLD /RESET)
CLK_125MHz	in	G13	NONE	1.8V	125MHZ Clock Output of Ethernet transceiver chip (88E1512-A0-NNP2C000) that synchronized with the 25MHZ reference clock
EN_3V3	out	A2	DOWN	3.3V	If high then the 3.3V power will be switched ON.
EN1	in	A9	UP	3.3V	User Enable. Enables the DC-DC converters and on board supplies (Active High). (B2B JM1-28)(DIP Switch on the carrier board) . Not used if NOSEQ = '1'
ETH-CLK-EN / EN_ETH_CLK	out	J14	NONE	1.8V	ETH clock enable. Enable pin for U9 oscillator chip U9 (SiT8008BI-73-18S-25.000000E) to feed a clock to Ethernet Transceiver (U8). Default is mapped to logic high '1'. Enabled as default.
ETH-MDC / mdc	in	L14	UP	1.8V	Management Data Clock reference for the Ethernet transceiver chip. This pin is connected with MIO52 of FPGA too and can be activated in Zynq7 adjustment.
ETH-MDIO / mdio	inout	K14	UP	1.8V	It is Management Data pin of Ethernet transceiver chip to transfer in and out of the device synchronously to mdc. It is connected with MIO53 of FPGA.

ETH-RST	out	E14	DOWN	1.8V	ETH PHY RESET. Reset pin of Ethernet transceiver chip. (Active low) Default is mapped to internal reset.
INIT	in	C9	UP	3.3V	INIT_B_0 pin of FPGA. (Active low). This pin must be tristate for PL configuratuion. By user or device held low until is ready to be configured.
INT1 / INT2	in	P4	UP	3.3V	MEMS Interrupt 1 of 3D accelerometer and 3D magnetometer chip U22 (LSM303DTR) (Active High)
INT2 / INT1	in	P6	UP	3.3V	MEMS Interrupt 2 of 3D accelerometer and 3D magnetometer chip U22 (LSM303DTR) (Active High)
JTAGMODE	in	B9		3.3V	JTAGENB pin of CPLD. Enable JTAG access to CPLD for Firmware update (zero: JTAG routed to module, one: CPLD access)
LED1	out	P2	NONE	3.3V	Display green LED (D2). Default mapped to MIO7
LED2	out	N3	DOWN	3.3V	Display red LED (D5). Default mapped to modeblink. In this case LED flashes depending on the boot mode (SD card slow, QSPI fast)
MEM-MAC / MAC_IO	inout	M14	UP	1.8V	Serial Clock /Data input /Output of Serial EEPROM (11AA02E48T-I /TT) U17
MEM-SHA / SHA_IO	inout	N14	UP	1.8V	SDA for CryptoAuthentic ation Chip (ATSHA204A-STUCZ-T) U10

MIO14	inout	M4	NONE	3.3V	This pin is connected to Zynq PS-MIO (B6) . (RX pin of UART0)
MIO15	inout	N4	NONE	3.3V	This pin is connected to Zynq PS-MIO (E6) . (TX pin of UART0)
MIO7	in	P11	UP	3.3V	This pin is used as GPIO.
MMC_RST	out	G14	DOWN	1.8V	eMMC reset. Reset pin of eMMC memory (MTFC16GJVEC -2M WT) U15. Default is mapped to internal reset.
MODE / BOOTMODE_IN	in	C8	UP	3.3V	Latched as BOOTMODE once at power-up, can be used later as I/O, weak pull up. Force low for boot from the SD Card. Latched at power on only, not on soft reset (B2B-JM1 pin 32)
MODE / BOOTMODE_IN2	in	M9	UP	3.3V	Latched as BOOTMODE once at power-up, can be used later as I/O, weak pull up. Force low for boot from the SD Card. Latched at power on only, not on soft reset (B2B-JM1 pin 32)
MR / POR_B	out	P12	UP	3.3V	Power-on-reset pin. This pin is connected with supply voltage monitor chip (TPS3106K33D BVR) U26 and controls the PS_POR_B pin of FPGA. (Active Low)
NetU19_B12		B12			/ currently_not_used
NetU19_B13		B13			/ currently_not_used
NetU19_B2		B2			/ currently_not_used

NetU19_B3		B3			/ currently_not_used
NetU19_B7		B7			/ currently_not_used
NetU19_C1		C1			/ currently_not_used
NetU19_C10		C10			/ currently_not_used
NetU19_C12 / Dummy	out	C12	DOWN	3.3V	
NetU19_C3		C3			/ currently_not_used
NetU19_C6		C6			/ currently_not_used
NetU19_C7		C7			/ currently_not_used
NetU19_E1		E1			/ currently_not_used
NetU19_E12		E12			/ currently_not_used
NetU19_F13		F13			/ currently_not_used
NetU19_F3		F3			/ currently_not_used
NetU19_G3		G3			/ currently_not_used
NetU19_H3		H3			/ currently_not_used
NetU19_J3		J3			/ currently_not_used
NetU19_K13		K13			/ currently_not_used
NetU19_K3		K3			/ currently_not_used
NetU19_L3		L3			/ currently_not_used
NetU19_M12		M12			/ currently_not_used
NetU19_M2		M2			/ currently_not_used
NetU19_M3		M3			/ currently_not_used
NetU19_N13		N13			/ currently_not_used
NetU19_N5		N5			/ currently_not_used
NetU19_N7		N7			/ currently_not_used
NetU19_N8		N8			/ currently_not_used

NOSEQ	inout	A3	DOWN	3.3V	Usage CPLD Variant depends. (B2B-NOSEQ pin 7) Forces the 1.0V and 1.8V DC-DC converters always ON when high. Can be used as an I/O after boot. Default mapped to PHY_LED0.
ON_1V0	out	A12	NONE	3.3V	Enable pin for 1.0 V DC-DC (Active High)
ON_1V5	out	M7	NONE	3.3V	Enable pin for 1.5 V DC-DC (Active High)
ON_1V8	out	A11	NONE	3.3V	Enable pin for 1.8 V DC-DC (Active High)
OTG-RST	out	B14	DOWN	1.8V	USB PHY reset. Reset pin for high speed USB transceiver (USB3320C-EZK) U18 (Active Low). Default is mapped to internal reset.
PG_1V0	in	A7	UP	3.3V	Power OK (POK) pin of 1.0 V DC-DC converter EN6347QI (U1). If High then the output voltage of regulator is within 10% of nominal value (OK).
PG_1V5	in	N6	UP	3.3V	Power OK (POK) pin of 1.5 V DC-DC converter EP53F8QI (U2). If High then the output voltage of regulator is Ok.
PG_1V8	in	A10	UP	3.3V	Power OK (POK) pin of 1.8 V DC-DC converter EP53F8QI (U3). If High then the output voltage of regulator is Ok.

PG_3V3 / POR	in	C11	UP	3.3V	POR Reset pin. This pin is connected with PG_3V3. As long as the VCCIO34 voltage is zero, this pin will remain low.
PGOOD	inout	B8	UP	3.3V	Power good output as default, can be used as I/O. (B2B JM1-Pin 30) Forced low until all on-board power supplies are working properly.
PHY_CONFIG	inout	C14	DOWN	1.8V	ETH PHY CONFIG. Hardware configuration pin of Ethernet transceiver (88E1512-A0-NNP2C000). Default mapped to logic low '0'. Therefore PHY address set to 0x00.
PHY_LED0	inout	F14	NONE	1.8V	LED output 0 of Ethernet transceiver chip
PHY_LED1	inout	D12	NONE	1.8V	LED output 1 of Ethernet transceiver chip
PHY_LED2	inout	C13	NONE	1.8V	LED output 2 or interrupt output pin (Active Low) of Ethernet transceiver chip
PJTAG_R	out	N10	NONE	3.3V	This pin in the schematic is connected with SPI-DQ0/M0 Pin
PROG_B	in	A13	UP	3.3V	By pulsing this pin any configuration that is currently loaded is cleared and the PL prepared to load new configuration. (Active Low) Default is mapped to logic high '1'.
PS-RST / SRST_B	out	M13	UP	1.8V	PS software reset (Active Low). Default is mapped to logic high '1'.

PUDC_B	inout	E3	DOWN	VCCIO34	Selects the enable or disable of pull-ups during configuration on the user I/O pins. (Active Low) Enables internal pull-up resistors on the select I/O pins after power-up and during configuration. Default is mapped to logic low '0'.
RESIN	in	C4	UP	3.3V	Master reset input (Active Low). Default mapping forces POR_B reset to Zynq PS
RST / RST_SENSE	in	P3	NONE	3.3V	Reset pin that is connected with PS_PORT_B (Power-on-reset) (Active Low)
RTC_INT	in	N2	UP	3.3V	Interrupt output or frequency output of RTC chip (ISL12020MIRZ) U20 (Active Low)
SCL	inout	P8	UP	3.3V	I2C clock pin of MEMS chip (LSM303DTR) U22
SDA	inout	P7	UP	3.3V	I2C data pin of MEMS chip (LSM303DTR) U22
SPK_L		M5			/ currently_not_used
SPK_R		M8			/ currently_not_used
TCK / C_TCK	out	P13	DOWN	3.3V	Zynq JTAG clock pin
TDI / C_TDI	out	P9	DOWN	3.3V	Zynq JTAG data input pin
TDO / C_TDO	in	M10	DOWN	3.3V	Zynq JTAG data output pin
TMS / C_TMS	out	N9	DOWN	3.3V	Zynq JTAG mode select pin
VCCIO34		E2			/ currently_not_used
VCCIO34		F2			/ currently_not_used
VCCIO34		H2			/ currently_not_used

VCCIO34		J2			/ currently_not_used
VCCIO34		K2			/ currently_not_used
X_TCK / M_TCK	in	B6	DOWN	3.3V	FTDI JTAG clock pin (B2B-JM1-pin 99)
X_TDI / M_TDI	in	B4	DOWN	3.3V	FTDI JTAG data input pin (B2B-JM1-pin 95)
X_TDO / M_TDO	out	A4	DOWN	3.3V	FTDI JTAG data output pin (B2B-JM1-pin 97)
X_TMS / M_TMS	in	A6	DOWN	3.3V	FTDI JTAG mode select pin (B2B-JM1-pin 93)
X1	in	F1	UP	VCCIO34	CPLD pin to the FPGA (L16). I2C clock from FPGA
X2 / XIO4	inout	C2	UP	VCCIO34	CPLD pin to the FPGA (M15). Default mapped to PHY_LED0 (ETH PHY LED0).
X3 / XIO5	inout	B1	UP	VCCIO34	CPLD pin to the FPGA (N15). Default mapped to PHY_LED1 (ETH PHY LED1).
X4 / XIO6	inout	D1	UP	VCCIO34	CPLD pin to the FPGA (P16). Default mapped to PHY_LED2 (ETH PHY LED2).
X5	out	J1	NONE	VCCIO34	CPLD pin to the FPGA (P22). I2C data to FPGA
X6		H1			/ currently_not_used
X7	in	M1	UP	VCCIO34	CPLD pin to the FPGA (N22). I2C data from FPGA
XCLK	out	K1	NONE	VCCIO34	CPLD pin to the FPGA (K19). Default mapped to CLK_125MHZ. (Clock output of ethernet transceiver chip)

- / SIG1	in	E13	NONE	1.8V	This pin is connected with VCCIO34 directly in the schematic REV03 and has no table in the schematic.
WDEN / WDEN	out	C6	NONE	3.3V	Enable pin for WDT chip BD39040MUF-CE2. High=Active, Low=Disable and WDT error is ignored.
WDIN / WDIN	out	N8	NONE	3.3V	Clock input pin for WDT chip BD39040MUF-CE2
WDOUT / WDOUT	in	M3	DOWN	3.3V	Buffer output pin for the WDEN pin of WDT chip BD39040MUF-CE2 input. Abnormal Power Source / the GND pin shortage for the WDEN pin can be recognized by monitoring this pin. This pin becomes Low when the XRSTOUT pin is low.
PG_ALL / PG_ALL	in	C12	UP	3.3V	POWER GOOD outputs and Reset Pin of WDT Chip BD39040MUF-CE2 (XRSTOUT)
X6 / X6	in	H1	NONE	1.8V	CPLD pin (H1) connected to the FPGA (K20). Input clock for hardware WDT that forwarded to WDIN pin of WDT chip.

Functional Description

To access and control the following functions it must be accessed CR registers. For more information about how to access these registers refer to [CR registers access methods](#)

JTAG

JTAG signals routed directly through the CPLD to FPGA. Access between CPLD and FPGA can be multiplexed via JTAGENB pin of CPLD (B9) (logical one for CPLD, logical zero for FPGA). This pin is connected to B2B (JM1-pin 89) directly. On the carrier board can be this pin enabled or disabled with a dip switch.

CPLD JTAGENB (B2B JM1-89)	Description
0	FPGA access
1	CPLD access

Boot Mode

Boot mode can be set either by hardware (dip-switch) on the carrier board or by Linux console. Even after booting you can change the boot mode. After changing the boot mode FPGA is restarted automatically by CPLD. To change boot mode a state machine continuously monitors the corresponding register (CR4[15:8]) that can be change via MDIO interface between CPLD and FPGA. After changing CR4[15:8] according to desired boot mode , CPLD will reset FPGA.


In the following table the corresponding commands are shown:

Change Method	Boot Mode	CPLD PGOOD Pin (B2B Pin JM1-30)	CPLD MODE Pin (B2B Pin JM1-32)	Description
Hardware	JTAG	0	0	
Hardware	---	0	1	
Hardware	SD Card	1	0	
Hardware	QSPI	1	1	

Change Method	Boot Mode	Command in Linux console	Command in FSBL	Description
Software	JTAG	phytool write eth0/0x1A/12 0x9100	XEmacPs_PhyWrite(&Emac, 0x1A, 12, 0x9100)	
Software	SD Card	phytool write eth0/0x1A/12 0x9300	XEmacPs_PhyWrite(&Emac, 0x1A, 12, 0x9300)	
Software	QSPI	phytool write eth0/0x1A/12 0x9200	XEmacPs_PhyWrite(&Emac, 0x1A, 12, 0x9200)	

Watchdog Timer

As of PCB revision 04 there is a watchdog timer chip (BD39040MUF-CE2) on the module. A state machine monitors register CR3[15:8]. If the value of the register is 0xA5, WDT is activated. First state machine assumes that WDT chip is assembled on the board, therefore it tries to activate hardware WDT at the beginning. If there is no WDT chip on the board, for example the module PCB is revision REV03 or older, software WDT will be activated. In the following is shown WDT state machine diagram:

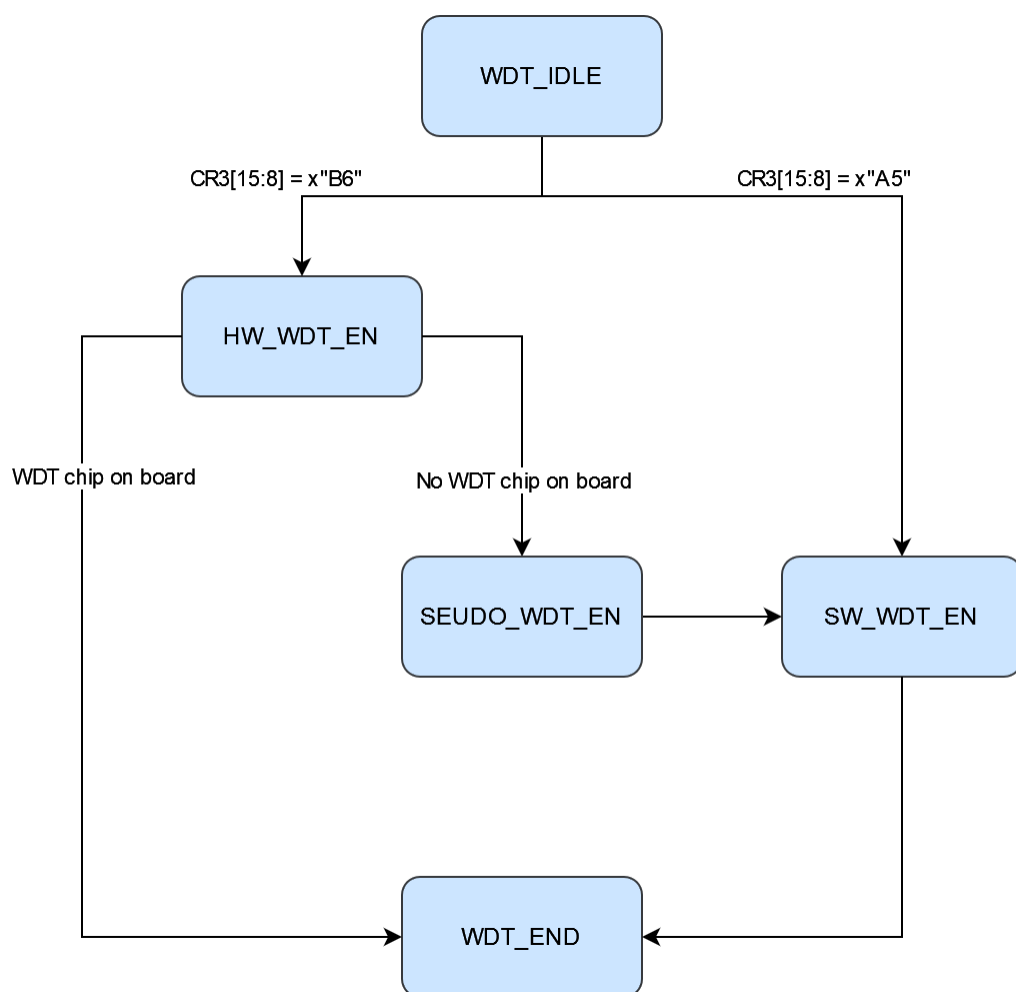


Hardware WDT

New PCB revision of TE0720 (Rev04) consists of watchdog timer chip (BD39040MUF-CE2). There are four pins between this chip and CPLD.

CPLD	Direction	WDT Chip	Description
WDEN	OUT	WDEN	WDT enable pin
WDIN	OUT	WDIN	WDT clock pin
WDOUT	IN	WDOUT	Fed back WDT enable pin to CPLD
PG_ALL	IN	PG_ALL + XRSTOUT	Power-GOOD and Reset pins

Watchdog Timer (WDT) monitors FPGA's operation by detecting the time from both rise and fall edge of WDIN. BIST is a self-test of chip to see if comparators of the WDT chip work correctly. If BIST result is abnormality, WDT does not work and XRSTOUT is kept low. Once BIST ends without any errors, XRSTOUT becomes High. WDT is activated when WDOUT=High, and both WDEN and XRSTOUT have to be High in order to get WDOUT to be High. As long as the duty of WDIN clock is kept within "Trigger open window", WDT does not detect any errors and XRSTOUT stays at High. WDIN input signal is ignored when WDOUT=Low. WDT is activated when WDOUT=High, and both WDEN and XRSTOUT have to be High in order to get WDOUT to be High.

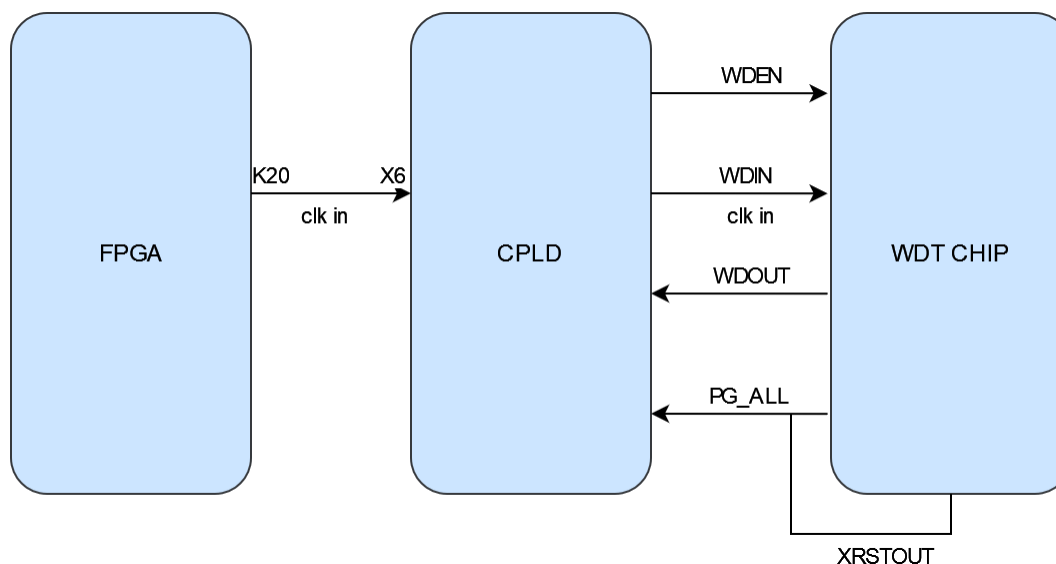

Input clock of hardware WDT is generated in FPGA (pin K20) and forwarded by X6 (CPLD pin) to WDIN pin of WDT chip. The hardware WDT will be activated, if WDT chip exists on the board and the following command in linux console be executed:

```
"phytool write eth0/0x1A/7 0xB600"
```

If WDT chip does not exist on the board by executing this command software WDT will be activated automatically. In this case input clock of WDT will be K20 pin of FPGA that connected to X6 pin of CPLD. The following table shows all cases for WDT:

WDT Chip on Board?	Command in linux console	Command in FSBL	WDT Type	Input Clock	Description
NO	phytool write eth0/0x1A/7 0xA500	XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xA500)	Software WDT	CR1(14)	
NO	phytool write eth0/0x1A/7 0xB600	XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xB600)	Software WDT	K20 pin of FPGA (X6 pin of CPLD)	Clock frequency must be less than 31.9 HZ with 50% duty cycle.
YES	phytool write eth0/0x1A/7 0xA500	XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xA500)	Software WDT	CR1(14)	
YES	phytool write eth0/0x1A/7 0xB600	XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xB600)	Hardware WDT	K20 pin of FPGA (X6 pin of CPLD)	Clock frequency must be less than 31.9 HZ with 50% duty cycle.

Software WDT

Software WDT can be activated by executing the following instruction in linux console:

```
"phytool write eth0/0x1A/7 0xA500"
```

CR[14] bit is same as a clock input pin for software WDT. If this bit after enabling software WDT will not be toggled correctly, FPGA will be reseted.

If the software WDT is activated and the generated clock is fed to WDT input clock , it will not be reset the board (WDT_RST signal low). But if the generation of this clock is stopped , the board will be reset (WDT_RST signal high) after a period of time depending on the WDT_time (CR4[7:0] register value).

To test Watchdog timer can be fed a clock signal to WDT clock input. The following shell script file generates a clock for WDT input clock. This file must be copied as init.sh to the SD card additionally. This shell script file will be executed by booting the board and generates the WDT input clock automatically. As long as 1 key and enter key is not pressed, the WDT clock will be generated and subsequently the board will not be reset. But if generation of clock signal be stopped, the board will be reset after a period of time. Note that WDT must already be activated in FSBL code.

init.sh

```
#WDT test
#!/bin/sh
echo "Starting the WDT Clock"
sleep 1
while :
do
    phytool read eth0/0x1A/5
    phytool write eth0/0x1A/5 0x4041
    sleep 0.5
    phytool read eth0/0x1A/5
    phytool write eth0/0x1A/5 0x0041
    sleep 0.5
    read -r -t 0.1 b
    echo "Press 1 to exit!"
    if (( b == 1 )) ; then
        break
    fi
done
printf "\Quit.....\n\n"
```

WDT adjustment

Watchdog timer is an added option in the CPLD code. To control and to use watchdog timer correctly , it must be written correct values in the related CR registers.

Software WDT signal / register	Related CPLD Register	Access in FSBL code	Access in Linux	Description
WDT input clock	CR1(14) CR1 = Register5	XEmacPs_PhyWrite / XEmacPs_Phyread	Phytool command	
WDT_time	CR4[7:0] CR4 = Register12	XEmacPs_PhyWrite / XEmacPs_Phyread	Phytool command	If CR4[7:0] = 0x00 WDT_time = 0x07 If CR4[7:0] != 0x00 WDT_time = CR4[7:0]

WDT_Enable	CR3[15:8] CR3 = Register7	XEmacPs_PhyWrite / XEmacPs_Phyread	Phytool command	If CR3[15:8] = 0xA5 WDT enable If CR3[15:8] != 0xA5 WDT disable
------------	------------------------------	---------------------------------------	-----------------	--

For example to access these registers in FSBL code it can be used the following instruction:

- `Status = XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xA500); if(Status != XST_SUCCESS){ return XST_FAILURE; }` To enable software WDT
- `Status = XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xB600); if(Status != XST_SUCCESS){ return XST_FAILURE; }` To enable hardware WDT
- `Status = XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0x0000); if(Status != XST_SUCCESS){ return XST_FAILURE; }` To disable hardware /software WDT
- `Status = XEmacPs_PhyWrite(&Emac, 0x1A, 12, 0x001F); if(Status != XST_SUCCESS){ return XST_FAILURE; }` To adjust desired time for WDT

Another way to access the related registers for WDT is to use phytool command. It must be added the ethtool package in Linux. To add this package it must be chosen in petalinux configuration for rootfs this option. The path in petalinux rootfs is: **Filesystem packages/console/network/ethtool**

The phytool instruntion format is :

- Phytool read device/addr/register
- Phytool write device/addr/register <value>

To write desired value in the related WDT registers for example can be written the following instructions in Linux console:

- `phytool write eth0/0x1A/7 0xA500` Software WDT enable
- `phytool write eth0/0x1A/7 0xB600` Hardware WDT enable
- `phytool write eth0/0x1A/7 0x0000` Software/ Hardware WDT disable
- `phytool write eth0/0x1A/12 0x001F` Adjusted software WDT time. It depends on the period of the CPLD clock.
- `phytool write eth0/0x1A/5 0x4000` To set the WDT input clock of software WDT high
- `phytool write eth0/0x1A/5 0x0000` To set the WDT input clock of software WDT low

Reset

Zynq will be reset, when it occurs one of the following conditions:

Reset name	Reset reason	related reset pin / signal	Active
Reset	Reset push button	RESIN	LOW
Extra Reset	Reset command in software	CR1(15)	HIGH
WDT reset	Overflowing the WDT counter and no existence WDT input clock (For more information refer to Watchdog Timer)	WD_RST	HIGH

Extra Reset

The board can also be reset through software.

Extra reset	related register	Access in FSBL code	Access in Linux	Description
Enable register	CR3[15:8] CR3 = Register7	XEmacPs_PhyWrite / XEmacPs_Phyread	Phytool command	If CR3[15:8] = 0xE5 Extra reset enable If CR3[15:8] /= 0xE5 Extra reset disable
Reset bit	CR1(15)	---	Phytool command	If CR1(15) = '1' Reset the board

For example the following instructions can reset the board:

- phytool write eth0/0x1A/7 0xE500 Extra reset enable
- phytool write eth0/0x1A/5 0x8000 Reset the board

It can be activated this option in FSBL code too:

- `Status = XEmacPs_PhyWrite(&Emac, 0x1A, 7, 0xE500); if(Status != XST_SUCCESS){ return XST_FAILURE; }`

Serial EEPROM

The seial EEPROM (U17) is used to save MAC address. The MAC_IO pin of EEPROM uses UNI/O interface to communicate with CPLD. The connection between EEPROM chip and CPLD depends on the value of XIO4.

XIO4[3:0]	MAC_IO
0011	'0'
else	Connected to internal MAC read block

CryptoAuthentication

The CryptoAuthentication chip (U10) is a high-security hardware authentication device that allows use in many application same as checking user password. This device can communicate with 1MHZ I2C interface, single-wire interface or UART.

XIO4[3:0]	Value XIO5	SHA_IO
0010	'0'	'0'
else		'Z'

UART

CR2[7:4]	MIO14 (RX)	Description
1001	XIO5_in	XIO5_in is equal to XIO5 if VCCIO34 voltage equal to 1.8V.
else	'Z'	
CR2[11:8]	MIO15 (TX)	Description
1001	XIO6_in	XIO6_in is equal to XIO6 if VCCIO34 voltage equal to 1.8V.


else

'Z'

I2C to GPIO block

This subsystem provides 32-bit (4 x 8-bit) of general purpose parallel input and output (I/O) expansion for the I2C bus protocol. Address of this module is 0x20. This module contains four 8-bit registers for reading (GPIO_input[7:0] to GPIO_input[31:24]) and four registers for writing (GPIO_output[7:0] to GPIO_output[31:24]) separately with 0x00 to 0x03 address. These registers can be accessed with I2C commands in linux console or with i2c functions in FSBL code. To access these registers the following commands in linux console can be used:

- To see the i2c bus addresses :
`i2cdetect -y -r 1`
- To read register of i2c to GPIO module:
`i2cget -y 1 0x20 <register address>`
- To write data in a register of i2c to GPIO module:
`i2cset -y 1 0x20 <register address> <data>`

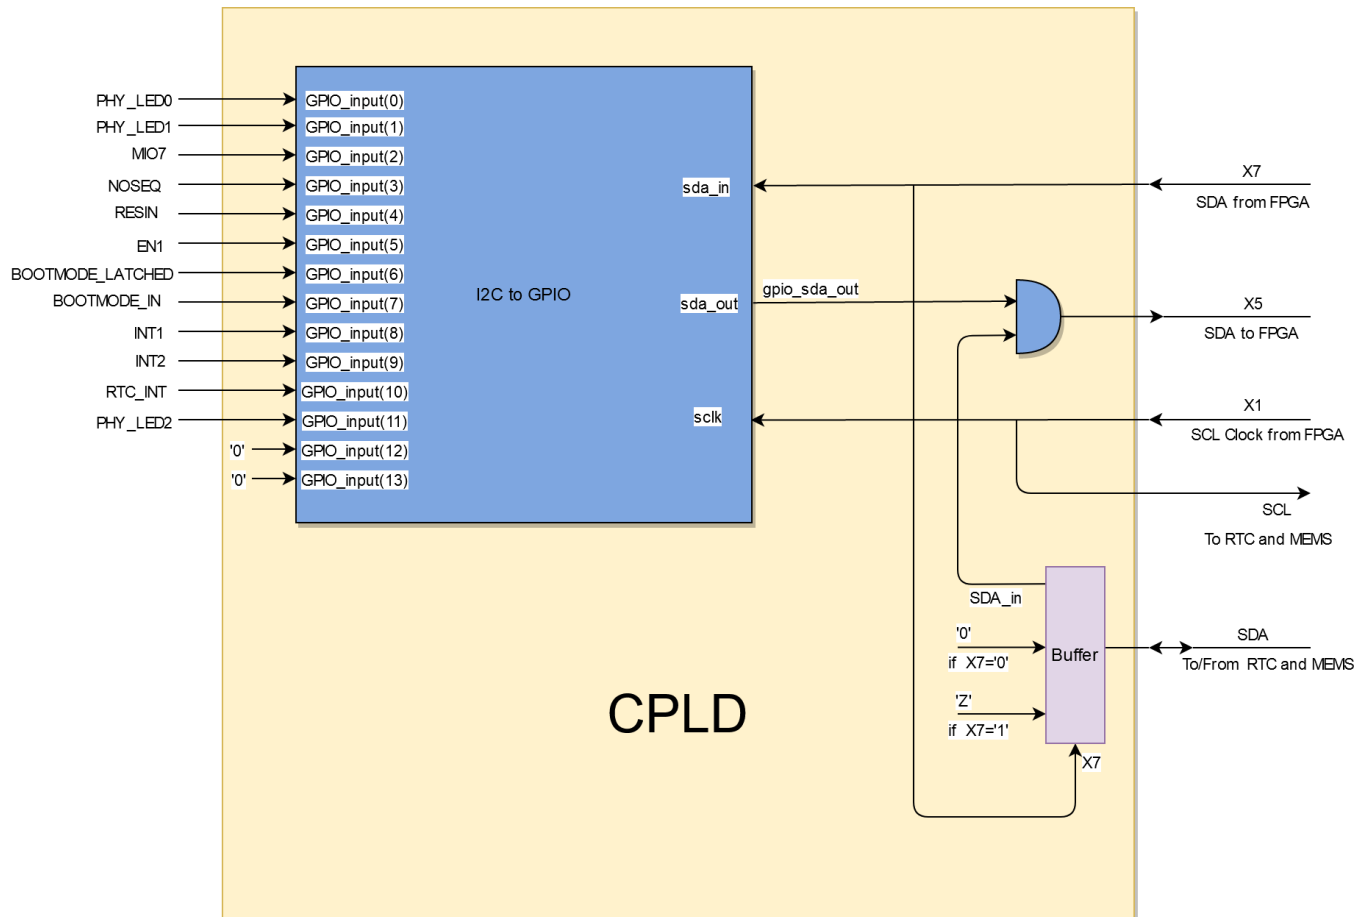

I2C to GPIO

The MIO7 pin is connected to third bit of GPIO input of the I2C to GPIO subsystem (GPIO_input(2)). To test the I2C to GPIO the MIO7 state can be changed and the value of the first register (register address 0x00) can be monitored. The initial value of this register depends on the CPLD firmware and can be variable. In the following example the initial value of this register is equal to 0x39. That means that initial value of MIO7 is zero. Now set MIO7 to one and read the value of the first register with address 0x00 again. It should be equal to 0x3D. LED1 (Green LED) glows, if MIO7 is set high:

- To read the first register of the subsystem:
 - `i2cget -y 1 0x20 0x00` For example here is equal to 0x39. Here 0x20 is device address and 0x00 is register address.
- To set MIO7 to one:
 - `cd /sys/class/gpio/`
 - `echo 913 > export`
 - `echo out > gpio913/direction`
 - `echo 1 > gpio913/value`
- To read the first register of the subsystem again:
 - `i2cget -y 1 0x20 0x00` It should be equal to 0x3D.

```
root@petalinux:~# i2cdetect -y -r 1
 0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- --
20: 20 -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- --
40: -- -- -- -- -- -- -- -- -- -- -- -- --
50: -- -- -- -- -- 57 -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- -- -- -- -- -- --
70: -- -- -- -- -- -- -- -- -- -- -- -- --
root@petalinux:~# i2cget -y 1 0x20 0x00
0x39
root@petalinux:~# cd /sys/class/gpio/
root@petalinux:/sys/class/gpio# echo 913 > export
root@petalinux:/sys/class/gpio# echo out > gpio913/direction
root@petalinux:/sys/class/gpio# echo 1 > gpio913/value
root@petalinux:/sys/class/gpio# i2cget -y 1 0x20 0x00
0x3d
root@petalinux:/sys/class/gpio#
```

Example

The subsystem I2C to GPIO port mapping is according the following table:

I2C to GPIO	Pin name	CPLD Pin	Direction	FPGA Pin	Description
sda_in	X7	M1	from FPGA	N22	
sda_out	X5	J1	to FPGA	P22	If X7 is Low, this pin will be disconnected.
sclk	X1	F1	from FPGA	L16	
SDA	SDA	P7	To/From RTC and MEMS	--	I2C data pin of ISL12020MRZ RTC chip / I2C data pin of MEMS chip (LSM303DTR) U22


SCL	SCL	P8	To RTC and MEMS	--	I2C clock pin of ISL12020MRZ RTC chip / I2C clock pin of MEMS chip (LSM303DTR) U22
GPIO_input	Mapping the GPIO_input bits to various ports or signals				
GPIO_output	Not used				

GPIO input bit mapping:

GPIO_input bit	Connected to:
0	PHY_LED0
1	PHY_LED1
2	MIO7
3	NOSEQ
4	RESIN_g
5	EN1_g
6	BOOTMODE_LATCHED
7	BOOTMODE_IN
8	INT1
9	INT2
10	RTC_INT
11	PHY_LED2
12	'0'
13	'0'

UNI/O MAC read block

UNI/O bus is a low speed serial interface for embedded systems that requires only one logic signal SCIO (Serial Clock, Data Input/Output). By using Manchester encoding techniques, the clock and data are combined into a single, serial bit stream (SCIO), where the clock signal is extracted by the receiver to correctly decode the timing and value of each bit. The serial EEPROM (U17) interface is UNI/O. The UNI/O bus uses a master/slave configuration. In this system the serial EEPROM chip is slave and a UNI/O subsystem in CPLD works as master. Both master and slave can operate as transmitter or receiver, but the master device determines which mode is active. The UNI/O MAC read block in CPLD reads the MAC address from serial EEPROM chip during power-on.

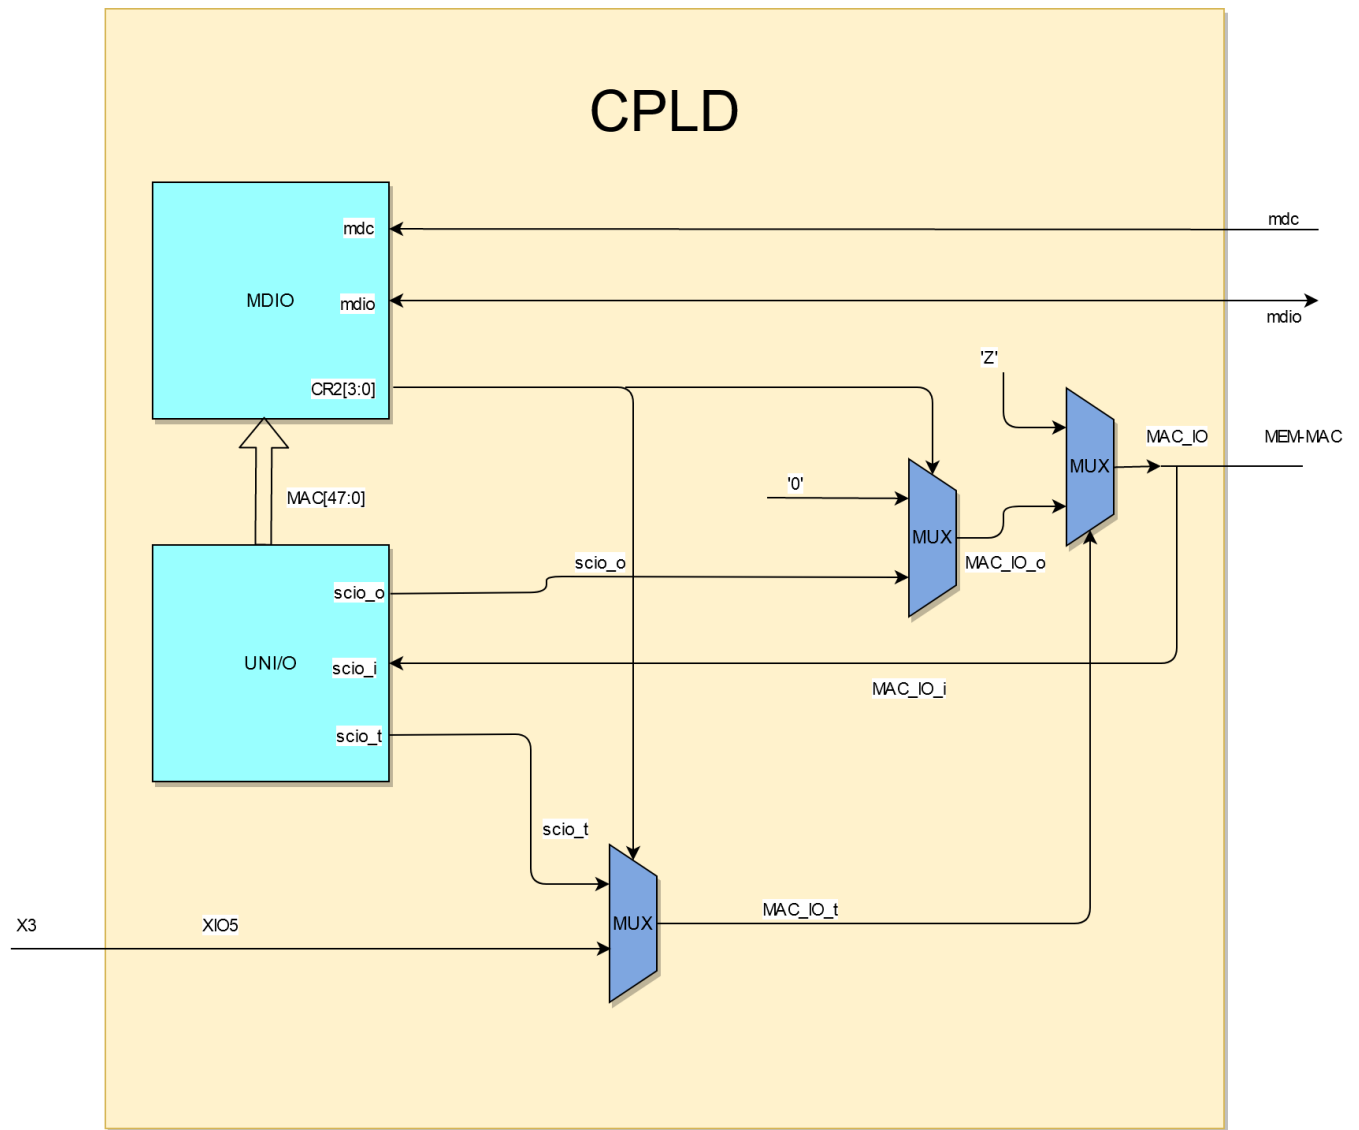

UNI/O

uio_sm_cnt[8:5]	uio_io_data
0000	MIO7
0001	RTC_INT
0010	INT1
0100	INT2
0011	PHY_LED0
0100	PHY_LED1
0101	PHY_LED2
0110	BOOTMODE_IN

0111	MIO14
1000	MIO15
1001	XIO4
1010	XIO5
1011	XIO6
1100	WD_HIT
1101	'0'
1110	'0'

Multiplexing uio data output between uio-id and uio-io:

uio_sm_cnt[2:1]	uio_sm_cnt(4)	uio_unidir
01	-	'0'
10	'0'	uio_id_data
10	'1'	uio_io_data

SC Pins to B2B

Name	B2B	Mode	Default function	Alternative	Description
EN1	JM1-Pin 28	input, weak pull-up	Power Enable	IO	High enables the DC-DC converters and on-board supplies. Not used if NOSEQ=1
MODE	JM1-Pin 32	input, weak pull-up	Boot mode	SDA or IO	Force low for boot from the SD Card. Latched at power on only, not on soft reset!
NOSEQ	JM1-Pin 7	input, weak pull-down	Power sequencing Control	Output	Forces the 1.0V and 1.8V DC-DC converters always ON when high. Can be used as an I/O after boot.
PGOOD	JM1-Pin 30	output, open drain	Power good	SCL or IO	Forced low until all on-board power supplies are working properly. Attention: During CPLD programming, this pins is high impedance.

RESIN	JM2-Pin 18	input, weak pull-up	Reset input	IO	Active Low Reset input, default mapping forces POR_B reset to Zynq PS
-------	------------	---------------------	-------------	----	---

SC Pins to FPGA

Schematic net name	Pin Name	Default function	Direction	SC pin	FPGA pin	Description
XCLK	XCLK	ETH PHY Clock to FPGA	to FPGA	K1	K19	
X7	X7	I2C Data from FPGA	from FPGA	M1	N22	SDA from EMIO I2Cx
X5	X5	I2C Data to FPGA	to FPGA	J1	P22	SDA to EMIO I2Cx
X4	XIO6	ETH PHY LED2 (PHY_LED2)	to FPGA	D1	P16	
X3	XIO5	ETH PHY LED1 (PHY_LED1)	to FPGA	B1	N15	RTC, MEMS Interrupt or PHY LED1
X2	XIO4	ETH PHY LED0 (PHY_LED0)	to FPGA	C2	M15	
X1	X1	I2C Clock from FPGA	from FPGA	F1	L16	SCL from EMIO I2Cx
PUDC_B	PUDC_B	Enables internal pull-up resistors on the IOs	to FPGA	E3	K16	normally not used tied to fixed level by SC



NOSEQ Pin

This is a dedicated input that forces the module's 1.0V and 1.8V supplies to be enabled if high. This pin has a weak pull-down on the module. If left open the module will power up in normal power sequencing enabled mode. This pin is 3.3V tolerant. This pin is also connected to the System Management Controller. The SC can read the status of this pin (it can be detected if the module is in power sequencing enabled mode). The SC can also use this pin as output after normal power on sequence.

No Sequencing mode

If the module is powered from a single 3.3V supply and power sequencing is disabled, then NOSEQ pin should be powered from the main 3.3V input. That is VIN, 3.3Vin and NOSEQ should all be tied together to the input 3.3V power rail. Sequencing mode should not be used if VIN is not 3.3V.

Normal mode

For normal operation leave NOSEQ open or pull down with a resistor.

Normal mode with user function on NOSEQ

NOSEQ can be used as an output after boot. NOSEQ must be low when 3.3V power is applied to the module. Common usage is an LED connected between NOSEQ and GND. The mapping of NOSEQ pin can be changed by CR1 register. The CR1 register is control register of MDIO slave interface that its content can be changed with FSBL code, uboot command or in linux console directly.

SC MDIO Interface

Most registers and functions are available via ETH PHY Management interface (MIO pins 52 and 53).

Address

Addr	R/W	Register name	Description
0	RO		
1	RO		
2	RO	ID1	PHY Identifier Register 1
3	RO	ID2	PHY Identifier Register 2
4	RW	--- (register4)	register4 = CR5[15:14] & BOOTMODE_GEN & PUDC & CR5[10:8] & CPLD_REVISION BOOTMODE_GEN, PUDC and CPLD_REVISION are generic parameters. CR5[9:8] = boot mode CR5[10] = CPLD boot mode flag (if active '1' boot mode adjustment via linux console) CR5[15:14] = WDT status
5	RW	CR1 (register5)	Control Register 1: LED's
6	RW	CR2 (register6)	Control Register 2; XIO Control
7	RW	CR3 (register7)	Control Register 3; Reset, Interrupt
8	RO	SR1 (register8)	Status Register
9	RO	MACHi (register9)	Highest bytes of primary MAC Address
0xA	RO	MACmi (register10)	Middle bytes of primary MAC Address
0xB	RO	MAClo (register11)	Lowest bytes of primary MAC Address
0xC	RO	CR4 (register12)	reserved do not use
0xD	RW	MMD_CR (register13)	MMD Control Register
0xE	RW	MMD_AD (register14)	MMD Address/Data
0xF	-	--- (register15)	reserved do no use
other	-		reserved do not use

Register Overview

To adjust desired boot mode in linux console or in FSBL code are used registers CR3(register7), CR4 (register12) , CR5 and register4. These registers are used for communication between user, CPLD and FPGA. The format of these registers is shown in the following tables:

Register	Bit 15...8	Bit 7...0	Description
CR3 (register7)	Software WDT and Hardware WDT activation /External reset enable 0xA5 Software WDT active 0xB6 Hardware WDT active 0xE5 Extra reset enable	connected to some signals /ports that is shown in the related following table.	CR3 register is register7 in mdio slave interface. CR3 can be written by user: phytool write eth0 /0x1A/7 <desired valude>

Register	Bit 15...12	Bit 11...10	Bit 9...8	Bit 7...0	Description
CR4 (register12)	Control bits for boot modes 1001 Soft boot mode active	Reserved	boot mode 00 Undefined 01 JTAG Mode 10 QSPI Mode 11 SD Card	Software WDT time value	CR4[9:8] bits are written by user to define desired boot mode in linux console or in FSBL code. CR4[15:12] bits is used by user to reset FPGA after defining boot mode. CR4 register is register12 in mdio slave interface. CR4 can be written by user. For example: phytool write eth0 /0x1A/12 0x9300 To change boot mode in linux console

Register	Bit 15...14	Bit 13...12	Bit 11	Bit 10	Bit 9...8	Bit 7...0	Description
register4	Watchdog timer status 00 WDT deactivated 01 Hardware WDT active 10 Software WDT active 11 No WDT chip on the board, software WDT with PL clock	Boot mode generic parameter 00 QSPI/SD Card 01 QSPI /JTAG 10 default (QSPI/JTAG /SD Card) 11 JTAG/SD Card	PUDC generic parameter 0 Pull-up 1 Pull-down	Software boot mode adjustment active 0 CPLD boot mode deactivated 1 CPLD boot mode activated	Boot mode 00 Undefined 01 JTAG mode 10 QSPI mode 11 SD Card	CPLD_REVIS ION generic parameter	User does not have access to this register.

Register CR1

CR1	related function
15	Enable Extra_Enable
14	WD_HIT generation
13	Undefined
12	Undefined
11:8	NOSEQ Mux
7:4	LED1 Mux
3:0	LED2 Mux

Register CR2

CR2	related function
15:12	XCLK Mux
11:8	XIO6 Mux
7:4	XIO5 Mux
3:0	XIO4 Mux

Register CR3

CR3	related port/signal
0	INT1
1	INT2
2	RTC_INT
3	PHY_LED2
4	OTG_RST
5	ETH_RST
6	MMC_RST
7	EN_ETH_CLK
15:8	WDT enable/ Extra enable

Register CR4

CR4	related function
7:0	WDT time
9:8	Boot mode
11:10	Undefined
15:12	Control bit for boot mode

Register SR1

SR1	related function
0	INT1
1	INT2
2	RTC_INT
3	PHY_LED2
7	BOOTMODE_LATCHED
8	BOOTMODE_IN2
9	BOOTMODE_IN
10	NOSEQ
11	NOSEQ_LATCHED
12	WD_EVENT
13	PG_1V5
14	EXTRA_ENABLED or WDOG_ENABLED
15	mac_valid

Register Details

Register CR1

The mapping of LED1(Green) , LED2(Red) and NOSEQ pin depends on the value of CR1 register.

CR1[3:0]	LED1 (Green) D2	CPLD	Description
0001	PHY_LED0	Input/Output	LED output 0 of Ethernet transceiver chip
0010	PHY_LED1	Input/Output	LED output 1 of Ethernet transceiver chip
0011	PHY_LED2	Input/Output	LED output 2 or interrupt output pin (Active Low) of Ethernet transceiver chip
0100	MIO7	Input	GPIO
0101	RTC_INT	Input	Interrupt output or frequency output of RTC chip
0110	OFF		
0111	ON		
1000	XIO4	Input/Output	CPLD pin to the FPGA (M15). ETH PHY LED0
1001	Not MIO14	Input/Output	
1010	Not MIO14/Not MIO15	Input/Output	
others	MIO7	Input	Default value for CR1[3:0] is 0000. GPIO
CR1[7:4]	LED2 (Red) D5	CPLD	Description
0001	PHY_LED0	Input/Output	LED output 0 of Ethernet transceiver chip

0010	PHY_LED1	Input/Output	LED output 1 of Ethernet transceiver chip
0011	PHY_LED2	Input/Output	LED output 2 or interrupt output pin (Active Low) of Ethernet transceiver chip
0100	MIO7	Input	GPIO
0101	RTC_INT	Input	Interrupt output or frequency output of RTC chip
0110	OFF		
0111	ON		
1000	XIO5	Input/Output	CPLD pin to the FPGA (N15). ETH PHY LED1
1001	Not MIO15	Input/Output	
1010	Not MIO14/Not MIO15	Input/Output	
others	modeblink	Signal	If SD card boot mode is selected on the carrier board (for example for TE0703 S2-4 DIP switch ON) , LED2 flashes slow otherwise LED2 flashes fast. Default value for CR1[7:4] is 0000.
CR1[11:8]	NOSEQ	CPLD	Description
0001	PHY_LED0	Input/Output	LED output 0 of Ethernet transceiver chip
0010	PHY_LED1	Input/Output	LED output 1 of Ethernet transceiver chip
0011	PHY_LED2	Input/Output	LED output 2 or interrupt output pin (Active Low) of Ethernet transceiver chip
0100	MIO7	Input	GPIO
0101	RTC_INT	Input	Interrupt output or frequency output of RTC chip
0110	OFF		
0111	ON		
1000	XIO6	Input/Output	CPLD pin to the FPGA (P16). ETH PHY LED2
1001	uio_unidir	Signal	
1010	Undefined		
others	PHY_LED0	Input/Output	Default value for CR1[11:8] is 0000. LED output 0 of Ethernet transceiver chip
CR1(12)	---	---	---
---	Undefined	---	---
CR1(13)	---	---	---
---	Undefined	---	---

CR1(14)	WDT Counter	CPLD	Description
0	counts	Register	CR1(14) = WD_HIT If WD_HIT = '0' --> If WD_counter /= WD_time --> WD_RST = '0' --> The WD_counter counts. If WD_HIT = '0' --> If WD_counter = WD_time -- > WD_RST = '1' --> WD happens
1	reset	Register	If WD_HIT = '1' --> WD_RST = '0' --> WD will not happen and the WD_counter will be reset.
CR1(15)	Extra Reset	CPLD	Description
0	Disable	Register	
1	Enable	Register	

Register CR2

The mapping of CPLD IOs (XIO4,XIO5,XIO6 and XCLK) that are connected directly with FPGA, can be changed using CR2 register.

CR2[3:0]	XIO4	CPLD	Description
0001	MIO7	Input	GPIO
0010	SHA_IO	Input/Output	SDA for CryptoAuthentication Chip
0011	MAC_IO	Input/Output	Serial Clock/Data input /Output of Serial EEPROM
1000	uio_unidir	Signal	
0110	'Z'		
0111	Undefined		
others	PHY_LED0	Input/Output	Default value for CR2[3:0] is 0000.
CR2[7:4]	XIO5	CPLD	Description
0001	MIO14	Input/Output	RX pin of UART0 (FPGA Zynq PS)
0010	Undefined		
0011	RTC_INT	Input	Interrupt output or frequency output of RTC chip
1000	uio_unidir	Signal	
0110	'Z'		
0111	Undefined		
others	PHY_LED1	Input/Output	Default value for CR2[7:4] is 0000.
CR2[11:8]	XIO6	CPLD	Description
0001	MIO15	Input/Output	TX pin of UART0 (FPGA Zynq PS)

0010	Undefined		
0011	osc_clk	Signal	This pin is directly connected to on-chip oscillator signal. (24.18 MHZ)
1000	uio_unidir	Signal	
0110	'Z'		
0111	INTR	Signal	INTR signal can be depending on CR3 register value connected to one of the following interrupt signals: INT1, INT2, RTC_INT, PHY_LED2
others	PHY_LED2	Input/Output	Default value for CR2[11:8] is 0000.
CR2[15:12]	XCLK	CPLD	Description
0001	RTC_INT	Input	Interrupt output or frequency output of RTC chip
0010	osc_clk	Signal	This pin is directly connected to on-chip oscillator signal. (24.18 MHZ)
0011	Undefined		
1000	Undefined		
0110	Undefined		
0111	Undefined		
others	CLK_125MHZ	Input	Default value for CR2[15:12] is 0000. This pin is connected to output clock pin of ethernet transceiver chip.

Register CR3

CR3 bit	Name	CPLD	Description
0	INT1	Input	MEMS interrupt 1
1	INT2	Input	MEMS interrupt 2
2	RTC_INT	Input	Real time clock interrupt
3	PHY_LED2	Input/Output	Interrupt output pin of ethernet transceiver
4	OTG_RST	Output	Reset for high speed USB transceiver
5	ETH_RST	Output	Reset for ethernet transceiver / Reset for serial for unio mac read core
6	MMC_RST	Output	Reset for MMC
7	EN_ETH_CLK	Output	Enable for ETH clock
15:8	WDT enable/ Extra enable	Register	Enable watchdog timer (0xA5) / Enable Extra enable (0xE5)

Register CR4

CR4 bits	related function	CPLD	Description
7:0	WDT time	Register	if CR4[7:0]=0x00 WDT_time=0x07 else WDT_time = CR4[7:0]
9:8	Boot mode	Register	boot mode 00 Undefined 01 JTAG Mode 10 QSPI Mode 11 SD Card
11:10	Undefined	----	----
15:12	Control bits for boot modes	Register	1001 Soft boot mode active

Note that the time of WDT depends on WTD_time register and the CPLD internal oscillator clock frequency. Default value for CR4 is 0x0000.

Register SR1

SR1	Description
0	INT1
1	INT2
2	RTC_INT
3	PHY_LED2
7	BOOTMODE_LATCHED
8	BOOTMODE_IN2
9	BOOTMODE_IN
10	NOSEQ
11	NOSEQ_LATCHED
12	WD_EVENT
13	PG_1V5
14	EXTRA_ENABLED or WDOG_ENABLED
15	mac_valid

On-board LEDs

There are 3 on-board LEDs, with two of them connected to the System Management Controller and one to the Zynq PL (Done pin).

Name	Color	Connected to:	Default mapping:
LED1	Green	SC	PL MIO[7]
LED2	Red	SC	Boot Mode Blink (Fast SPI, Slow SD Card)

LED3	Green	Zynq PL	FPGA Done - Active Low
------	-------	---------	------------------------

LED Status Codes

#	LED1 Green (PCB LED D2)	LED2 Red (PCB LED D5)	LED3 Green (PCB LED D4)	Status	Description
1	OFF	OFF	ON	Fatal power error	This combination after power up is only possible in no sequencing compatibility mode were 3.3 Vout is supplied externally. The 1.0V and 1.8V DC-DC supplies are forced on (NOSEQ=1), and the SC is not able to start (3.3Vin below 2.1V). This should never happen if the external power supplies are OK.
2	OFF	ON	OFF	VIN missing (or EN1 low)	3.3Vin is present, but the DC-DC supplies are not powered or 3.3Vin is below 3.05V. If the LEDs stay on in this state then 3.3Vout is not turned on, and the Zynq is kept in the POR state.
3	OFF	1/2 Blink Fast 4 Hz	ON	OK	Boot mode selected is SPI Flash. This status remains after boot also if the LED settings are not changed and user is not controlling MIO7 and FPGA is not loaded.
4	OFF	1/2 Blink Slow 1 Hz	ON	OK	Boot mode selected is SD Card. This status remains after boot also if the LED settings are not changed and user is not controlling MIO7 and FPGA is not loaded.

5	MIO7 or user function	Blink or user function	OFF	OK	LED3 goes off when the FPGA is configured. NOTE: The FPGA design can control this LED too using STARTUPE2, so it may remain ON or be flashing when the FPGA is configured.
6	ON	Slow blink 0.5 Hz, 1/8 on, 7/8 off	OFF	Powerdown	EN1 input to the module is low. If sequencing is enabled in this mode, then all power supplies on the module are OFF.
7	ON	Slow blink 0.5 Hz, 1/8 on, 7/8 off	ON		EN1 input to the module is low. Sequencing is disabled module is in reset state.
8	ON	ON	ON	Reset	Powered, RESIN input is active low or Bank B34 Supply Voltage is missing.

LED1 Green

This LED is mapped to MIO7 after power up. After the Zynq PS has booted it can change the mapping of this LED. If SC can not enable power to the Zynq then this LED will remain under SC control. It is available to the user only after the power supplies have stabilized and the POR reset to the Zynq is released. If software watch dog timer is activated this LED will be assigned to the 7th bit of the counter of watch dog timer. By activating hardware WDT this LED will assign input clock of FPGA (Pin K20-CPLD pin X6).

LED1(Green)	Condition	Description
WD_counter(7)	Software WDT activated / Hardware WDT on a board without WDT chip activated	If software WDT is activated, green LED will blink with frequency about 1 HZ.
ON	POR_B_i = '0'	POR_B_i is '0' if one of the following signals is '0' ---> EN1 or RESIN or PG_ALL or PORDONE
X6	Hardware WDT is activated and WDT chip exists on the board.	X6 is forwarded clock that is generated by FPGA. This signal can be monitored with oscilloscope. The frequency of this signal can be at least 32 HZ.
Variable	else	Mapping depends on the CR1[3:0] value

LED2 Red

This LED is used to show various signal or port states. The function of this LED can be changed by CR1 register.

LED2(Red)	Condition	Description
powerblink	EN1_g = '0'	EN1_g is delayed EN1.
ON	POR_B_i = '0'	
Variable	else	Mapping depending on the CR1 [7:4] value

LED3 Green (FPGA Done)

This green LED is connected to the FPGA Done pin which has an active low state. As soon as the Zynq is powered and the 3.3V I/O voltage is enabled, this LED will illuminate. This indicates that the Zynq PL is not configured. Once the Zynq PL has been configured the LED will go off.


During normal operation when the Zynq PL has been configured, the LED can be controlled from the FPGA fabric. Control of the LED in a user design requires the use of Xilinx startup primitive rather than a normal I/O primitive. If the startup primitive is not used then the LED will go off after configuration and remain off irrespectively of the user design.

This LED can not be controlled by the SC. If green LED3 does not light up at least for short time at power then there is major problem with power supplies, FPGA core and aux voltages may be missing.

CR registers access methods

System Controller can be accessed as PHY with address 0x1A on the ETH0 Management bus (MIO pins 52, 53). PHY at address 0x00 is the ETH0 onboard ethernet PHY Marvell 88E1512. PHY at address 0x1A is the System Controller. OUI 0x7201 should be decoded as Model TE0720-01. Model 0x01 is Assembly option. Rev 0x00 is the firmware major revision for the System Controller (Rev 0 is the initial version). The CR registers have individual number to be accessed in FSBL code or Linux console. These numbers are defined in mdio_slave_interface subsystem in CPLD VHDL code. Refer to [SC registers](#) to see the table of CR registers.

The CR registers can be accessed in three methods. It can be used u-boot functions , FSBL code or phytool command in linux console to access these registers.

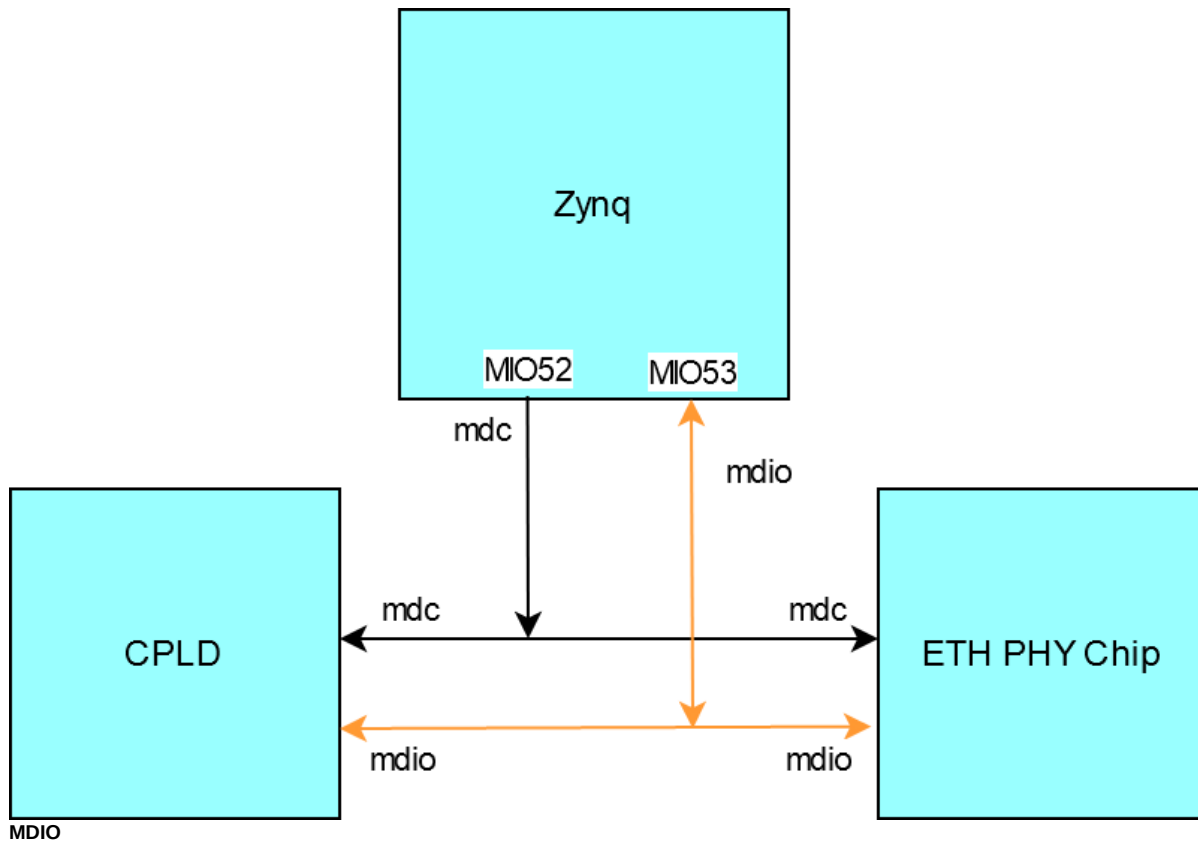

FSBL code

It is possible to access the CR registers in FSBL code. The following functions are used to write or read these registers.

- `LONG XEmacPs_PhyWrite(XEmacPs *InstancePtr, u32 PhyAddress, u32 RegisterNum, u16 PhyData)` To write in CR registers
- `LONG XEmacPs_PhyRead(XEmacPs *InstancePtr, u32 PhyAddress, u32 RegisterNum, u16 *PhyDataPtr)` To read CR registers

Note that to access these registers in FSBL code it must be written the following instruction before above commands:

- `Mac_Config = XEmacPs_LookupConfig(XPAR_PS7_ETHERNET_0_DEVICE_ID); if (Mac_Config == NULL) { return XST_FAILURE; }`
- `Status = XEmacPs_CfgInitialize(&Emac, Mac_Config, Mac_Config->BaseAddress); if (Status != XST_SUCCESS){ return XST_FAILURE; }`

For example to write 0x0077 in CR1 register the following instruction is used:

- `XEmacPs_PhyWrite(&Emac, 0x1A, 5, 0x0077);`

Note that the CR register names are CR1, CR2, CR3 and CR4. But these registers are named in FSBL code register5, register6, register7 and register12 subsequently. CPLD revision, Boot mode, watchdog timer status and other features of the board will be shown by FSBL code while booting. The format of these information are shown in the following:

WDT STATUS	Software Adjusted Boot Mode	Hardware Adjusted BOOT MODE	PUDC Mode	Current Boot Mode	CPLD REVISION	Description
Deactive	Deactive	QSPI/SD	Pull down	JTAG		
Hardware_WDT	Active	QSPI/JTAG	Pull up	QSPI		
Software_WDT	----	JTAG/SD	----	SD Card		
No WDT on the board. Software_WDT with PL clock	----	default QSPI /JTAG/SD	----	----		

U-boot

Communication between Zynq and CPLD chip in mdio bus can be established anytime when ETH0 and management interface are enabled also before FPGA PL Fabric is configured too.

To write a value into CR registers or to read one of them the following instructions can be used:

- `mii read <addr> <reg>`
- `mii write <addr> <reg> <data>`

Module identification code can be read with the following u-boot command in u-boot :

- `zynq-uboot> mii read 0x1a 0x02` For TE0720 = 0x01C8

For example to read CR4 register the following instruction can be written in U-Boot command console:

- `zynq-uboot> mii read 0x1A 0x0C`

For example to write 0x0077 in CR1 can be written:

- `zynq-uboot> mii write 0x1A 5 0x0077`

LED1 and LED2 will be switched on.

Linux

It is possible to write into CR registers and to read these registers in Linux console directly. To access the CR registers it must be added ethtool package , while linux image file is generated. To activate this option in petalinux this package must be chosen in configuration of rootfs in petalinux. The path for this package is: **Filesystem packages/console/network/ethtool**
If this package is installed , phytool command can be used to access the CR registers. Phytool command format is:

- `phytool read device/addr/register`
- `phytool write device/addr/register <value>`

For example to switch on LED1 and LED2 it must be written 0x0077 value in the register CR1:

- `phytool eth0/0x1A/5 0x0077`

To switch off these LEDs execute this instruction:

- `phytool eth0/0x1A/5 0x0066`

Reading MAC address

It can be read MAC-address automatically. Customized u-boot reads MAC address and stores it in environment variables as required. Setting up MAC Address for Linux involves dynamic rewrite of FDT, this is done with u-boot script that starts Linux.

To read MAC address automatically, the following steps must be implemented:

In the FSBL code it must be written the following code additionally. This c file can be found in the following path: `test_board\sw_lib\sw_apps\zynq_fsbl\src\te_fsbl_hooks_te0720.c`

For more information refer to [TE0720 test board](#)

te_fsbl_hooks_te0720.c

```
u32 TE_FsblHookBeforeHandoff_Custom(void)
{
    ...
    Mac_Config = XEmacPs_LookupConfig(XPAR_PS7_ETHERNET_0_DEVICE_ID); if
    (Mac_Config == NULL) { return XST_FAILURE; }
    Status = XEmacPs_CfgInitialize(&Emac, Mac_Config, Mac_Config->
    BaseAddress); if(Status != XST_SUCCESS){ return XST_FAILURE; }
    /*
    * Read out MAC Address bytes
    */
    Status = XEmacPs_PhyRead(&Emac, 0x1A, 9, &rval16); if(Status !=
    XST_SUCCESS){ return XST_FAILURE; }
    mac_addr[0] = (unsigned char)(rval16 >> 8);
    mac_addr[1] = (unsigned char)(rval16 & 0xFF);
    Status = XEmacPs_PhyRead(&Emac, 0x1A, 10, &rval16); if(Status !=
    XST_SUCCESS){ return XST_FAILURE; }
    mac_addr[2] = (unsigned char)(rval16 >> 8);
    mac_addr[3] = (unsigned char)(rval16 & 0xFF);
    Status = XEmacPs_PhyRead(&Emac, 0x1A, 11, &rval16); if(Status !=
    XST_SUCCESS){ return XST_FAILURE; }
    mac_addr[4] = (unsigned char)(rval16 >> 8);
    mac_addr[5] = (unsigned char)(rval16 & 0xFF);
    ...

    /*
    * Write MAC Address to OCM memory for u-boot to import!
    */
    /*
    //strcpy(0xFFFFFC04, "ethaddr=00:0a:35:00:00:05\n" );
    #ifdef UBOOT_ENV_MAGIC
    Xil_Out32(UBOOT_ENV_MAGIC_ADDR, UBOOT_ENV_MAGIC); // Magic!
    MacToUbootEnvironment((char*)UBOOT_ENV_ADDR, mac_addr);

    /*
    * Set MAC Address in PS7 IP Core registers
    */
    Status = XEmacPs_SetMacAddress(&Emac, mac_addr, 1); if(Status !=
    XST_SUCCESS){ return XST_FAILURE; }
    ...
}
```

Add the following definition in petalinux-configuration platform-top header file:

platform-top.h code example

```
#define CONFIG_PREBOOT    "echo U-BOOT for petalinux;echo importing env
from FSBL shared area at 0xFFFFFC00; if itest *0xFFFFFC00 == 0xCAFEBAE;
then echo Found valid magic; env import -t 0xFFFFFC04; fi;setenv preboot;
echo; dhcp"
```

- The platform-top.h file can be found in the following path: **lpetalinux\project-spec\meta-user\recipes-bsp\uboot\files**
- The Zynq SoC reads the MAC address from EEPROM by CPLD during power-on and copies this data in OCM (On-chip Memory). After that either in Linux or Uboot console MAC address can be accessed.

Appx. A: Change History and Legal Notices

Revision Changes

- changes REV06 to REV07
 - Added matched functions for WDT Chip BD39040MUF-CE2
 - PG_ALL pin pulled up.
 - User can activate WDT as before.
 - If no WDT chip on the board, hardware WDT will be switched automatically on software WDT with PL clock input (X6 pin of CPLD and K20 of FPGA).
 - If no WDT chip on the board, software WDT will work with CR1(14) clock input as before.
 - If WDT chip on the board, hardware and software WDT work separately with PL input clock (X6 pin) for hardware WDT and CR1(14) as input clock for software WDT.
 - For software WDT : phytool write eth0/0x1A/7 0xA500
 - For hardware WDT : phytool write eth0/0x1A/7 0xB600
 - Using CR5[15:14] to save the WDT status ("00" WDT deactive, "01" Hardware WDT, "10" Software WDT, "11" No WDT chip on the board, software WDT with PL clock input)
 - Using Register4 of mdio_slave_interface to see WDT status via FSBL code (first test in vivado 20.2 and vivado 21.2) or following instruction in linux: phytool read eth0/0x1A/4
 - Boot mode configuration via MDIO interface (phytool)
 - PGOOD pin is used as boot mode selector pin.
 - NOSEQ pin is used as tristate via i2c interface.
 - Resetting the FPGA after boot mode configuration
 - Matched to FSBL code to show all informations while booting in linux console. For example Boot mode, pudc state ...
 - Monitoring CR4[15:8] and CR5[10] continuously, to implement a state machine for boot mode configuration correctly.
 - Using CR4[15:12] as control bit to reset FPGA
 - Using CR4[9:8] as boot mode configuration , if the FPGA is not restarted still via soft reset.
 - Defining a new input register for mdio_slave_interface (CR5)
 - Using CR5[9:8] as boot mode configuration, if the FPGA is restarted already via soft reset.
 - Using CR5[10] to monitor , if the FPGA is restarted already via soft reset.
 - Using Register4 to read the generic parameters and other parameters via FSBL code or phytool command in linux : Phytool read eth0/0x1A/4
 - Using i2c_slave.vhd instead of I2C_to_GPIO.v
 - Changing Firmware Register MDIO_SL_REGISTER_4_CONTENT to CPLD_REVISION register.
- changes REV05 to REV06
 - Generic options: PUDC and Boot Mode
 - MIO7 Pullnone
 - Adding internal en_3v3_int

- JTAG C_* high impedance until 3.3VOUT can be high
 - Boot mode pins are GND or high impedance until en_3v3_int are high
 - MIO14,15 high impedance until en_3v3_int are high
 - JTAG time constraint correction
 - JTAG drive line adjustment
 - Bugfix I2C to GPIO module (I2C_to_GPIO.v)
 - Changed Firmware Identifier to REV06
- changes REV04 to REV05:
 - 0.05 watchdog
 - changes REV03 to REV04:
 - NA
 - changes REV02 to REV03:
 - NA
 - changes REV01 to REV02:
 - added deglight for EN1 and RESIN inputs
 - added VCORE ON when 3.3 OK signalled

```

TE0720_TF_FabHookBeforeRandoFF_Custom
CPLD_REV=07
WDT_STATUS=Deactive(0)
CPLD_BH=Deactive(0)
BOOTMOD_GEN=3 (QSPI/JTAG/SD)
FUDC_MODE=Pullup(0)
BOOT_MODE=SD Card(3)
MAC: 54 10 EC 95 3B 8F

```

Identify CPLD Firmware with Trenz FSBL for TE0720

Document Change History

To get content of older revision got to "Change History" of this page and select older document revision number.

Date	Document Revision	CPLD Firmware Revision	Supported PCB Revision	Authors	Description
		REV07	REV04, REV03, REV02		I2C to GPIO Block chapter updated
Error rendering macro 'page-info' Ambiguous content detected	Error rendering macro 'page-info' Ambiguous content detected	Error rendering macro 'page-info' Ambiguous content detected	Error rendering macro 'page-info' Ambiguous content detected	Error rendering macro 'page-info' Ambiguous content detected	Error rendering macro 'page-info' Ambiguous content detected
2022-09-21	v.138	REV07	REV04,REV03, REV02	Mohsen Chamanbaz	Reading CPLD firmware revision and PCB evision in uboot is not valid more. In new versions the data like CPLD firmware

					revision can be read automatically when FPGA boots.
2022-06-29	v.137	REV07	REV04,REV03, REV02	Mohsen Chamanbaz	• REV07 release • Firmware release (SC-PGM-TE0720-0304_XO2E-07_20220628.zip) • Access to boot mode and watchdog timer in linux console • Indicating CPLD revision, boot mode, PUDC mode, WDT status and CPLD revision while booting
2021-08-28	v136	REV06	REV03, REV02	John Hartfiel	• LED Note
2021-02-16	v134	REV06	REV03, REV02	Mohsen Chamanbaz	• Typo
2021-02-03	v.132	REV06	REV03, REV02	Mohsen Chamanbaz	• REV06 release • Firmware release (SC-PGM-TE0720-03_XO2E-06_20210202.zip)
2021-01-29	v.130	REV05	REV03, REV02	John Hartfiel	• modify key features section
2021-01-14	v.127	REV05	REV03, REV02	Mohsen Chamanbaz	• Rework CPLD REV05 documentation, which was release 2016-01-14 (PCN-20160114 TE0720-02 to TE0720-03, CPLD upgrade to REV05)
	All				

Error rendering macro 'page-info'

Ambiguous method overloading for method jdk.proxy244.\$Proxy3589#hasContentLevel

--	--	--	--	--	--

Legal Notices

Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

Document Warranty

The material contained in this document is provided “as is” and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

REACH, RoHS and WEEE

REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#). The products we supply to you are solely non-chemical

products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#) are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#).

RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Error rendering macro 'page-info'

Ambiguous method overloading for method jdk.

proxy244.\$Proxy3589#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]