

# TE0820 CPLD

## Table of contents

### Overview

- 1 Overview
  - 1.1 Feature Summary
  - 1.2 Firmware Revision and supported PCB Revision

### Product Specification

- 2 Product Specification
  - 2.1 Port Description
  - 2.2 Functional Description
    - 2.2.1 JTAG
    - 2.2.2 Boot Mode
    - 2.2.3 Power
    - 2.2.4 LED
    - 2.2.5 I2C interface
    - 2.2.6 NOSEQ pin
  - 2.3 Accessible CPLD Registers

### Firmware Revision and supported PCB Revision

- 3 Appx. A: Change History
  - 3.1 Revision Changes
  - 3.2 Document Change History

### Legal Notices

- 4 Appx. B: Legal Notices
  - 4.1 Data Privacy
  - 4.2 Document Warranty
  - 4.3 Limitation of Liability
  - 4.4 Copyright Notice
  - 4.5 Technology Licenses
  - 4.6 Environmental Protection
  - 4.7 REACH, RoHS and WEEE

### Port Description

Name / opt. VHD Name	Direction	Pin	Pullup /Down	Bank Power	Description	Note:  PCB REV04 REV05 Connection	Note: PCB REV01 REV02 Connection
C_TCK	in	30	DOWN	3.3VIN	JTAG B2B		
C_TDI	in	32	DOWN	3.3VIN	JTAG B2B		
C_TDO	out	1	DOWN	3.3VIN	JTAG B2B		
C_TMS	in	29	DOWN	3.3VIN	JTAG B2B		

RST_EN	inout	27	NONE	3.3VIN	Reset pin output to reset FPGA via CPLD chip	For PCB REV04 EN1 (input) (pulled up in CPLD) / For PCB REV05 REST_EN (output) (Floating in CPLD)  Power Enable from B2B Connector (Positive Enable) (input pin) for PCB revision 04 in this case used only for PGOOD feedback / Reset pin (output pin) for PCB revision 5 in this case this pin is reset pin that is activated by firmware and not by hardware after changing the boot mode via software.	
User_LED	out	4	NONE	3.3VIN	user defined or status, see LED description	For PCB REV04 shows the state of X1 and X0. / For PCB REV05 shows the boot mode state for selection via hardware (Dip switch in carrier board) or via software (related command in linux console or FSBL code)	1.8V input ERR_OUT(P S_ERROR_OUT)
PG_ALL	in	5	NONE	3.3VIN	This pin is used as power good (input)	Unused in CPLD firmware for PCB REV04( In hardware is pulled up) / Used in PCB REV05 as power good input pin	1.8V input ERR_STATU S as input
JTAGEN	in	26	---	3.3VIN	Enable JTAG access to CPLD for Firmware update (zero: JTAG routed to module, one: CPLD access)		

MODE	in	25	UP	3.3VIN	Boot Mode for Zynq /ZynqMP Devices (Flash or SD)		
MODE0	out	12	DOWN	1.8V	ZynqMP Boot Mode Pin 0		
MODE1	out	13	DOWN	1.8V	ZynqMP Boot Mode Pin 1		
MODE2	out	14	DOWN	1.8V	ZynqMP Boot Mode Pin 2		
MODE3	out	16	DOWN	1.8V	ZynqMP Boot Mode Pin 3		
NOSEQ	inout	23	UP	3.3VIN	Usage CPLD Variant depends	Used as GPIO pin by user. This pin can be written or read via i2cset command in linux console or FSBi code functions.	Used as boot mode selection pin, if CPLD is programmed using SC0820_qspi_sd_jtag.jed jed-file.
PGOOD	inout	28	UP	3.3VIN	Module Power Good (only Feedback from EN1 for PCB revision 4 or older). / For PCB revision 5 is used as boot mode selection pin or power good pin (feedback from PG_ALL pin)	Module Power Good (only Feedback from EN1 for PCB revision 4 or older). / Boot mode selection pin for PCB REV05	
PHY_LED1	in	17	---	1.8V	ETH PHY LED1 / <span style="color: red;">currently_not_used</span>		
TCK	out	9	DOWN	1.8V	JTAG ZynqMP		
TDI	out	8	DOWN	1.8V	JTAG ZynqMP		
TDO	in	10	DOWN	1.8V	JTAG ZynqMP		
TMS	out	11	DOWN	1.8V	JTAG ZynqMP		
X0	in	20	UP	VCCO_65	I2C SCL pin	Used as tri-state enable-input for User_LED pin for PCB REV04 / Used as i2c SCL pin for PCB REV05	
X1	inout	21	UP	VCCO_65	I2C SDA pin	Used as tri-state input for User_LED pin for PCB REV04 / Used as i2c SDA pin for PCB REV05	

## Functional Description

## JTAG

JTAG signals routed directly through the CPLD to FPGA. Access between CPLD and FPGA can be multiplexed via JTAGEN (logical one for CPLD, logical zero for FPGA) on JM1-89.

## Boot Mode

Boot mode can be set either by hardware (dip-switch) on the carrier board or by firmware in linux console or FSBL code. Even after booting boot mode can be changed . After changing the boot mode FPGA is restarted automatically by CPLD, if PCB revision is REV05, otherwise for PCB revision 4 user must reset manually to execute boot mode changing correctly.To change boot mode a state machine continuously monitors the corresponding register that can be change via I2C interface between CPLD and FPGA.

Change method	Boot Mode	CPLD PGOOD Pin (B2B Pin JM1-30)	CPLD MODE Pin (B2B Pin JM1-32)	Description
Hardware	JTAG	0	0	
Hardware	eMMC	0	1	
Hardware	SD Card	1	0	
Hardware	QSPI	1	1	

Change method	Boot Mode	Command in linux console	Command in FSBL	Description
Software	JTAG	i2cset -y 1 0x20 0x01 0x91	iic_write8 (0x20,0x01, 0x91)	0x20 is device address. 0x01 is register address.
Software	SD Card	i2cset -y 1 0x20 0x01 0x93	iic_write8 (0x20,0x01, 0x93)	0x20 is device address. 0x01 is register address.
Software	QSPI	i2cset -y 1 0x20 0x01 0x92	iic_write8 (0x20,0x01, 0x92)	0x20 is device address. 0x01 is register address.
Software	eMMC	i2cset -y 1 0x20 0x01 0x90	iic_write8 (0x20,0x01, 0x90)	0x20 is device address. 0x01 is register address.

If PCB revision is REV04, then user must reset manually the carrier board after changing the boot mode using i2cset command in linux console. If PCB revision is REV05, it is not necessary to reset the FPGA by user, because FPGA will be reset automatically via CPLD after changing the boot mode via i2cset command in linux console.

For other UltraScale+ Boot Modes options custom firmware is needed, see also Table 11.1 Boot Modes from Xilinx UG1085.

## Power

For PCB revision 4 or older PGOOD depends on EN1. There is no additional power management controlled by CPLD. For PCB revision 5 PGOOD depends on PG\_ALL signal.

## LED


Green LED D2 glows depending on boot mode and whether boot mode is selected by hardware or firmware.

LED state	Condition	Related command	Description
OFF	JTAG boot mode and software boot mode selection not active	Boot mode is adjusted by dip switch on the carrier board.	CPLD_BM = '0'
Blink sequence *oooooooo	QSPI boot mode and software boot mode selection not active	Boot mode is adjusted by dip switch on the carrier board.	CPLD_BM = '0'
Blink sequence **oooooooo	eMMC boot mode and software boot mode selection not active	Boot mode is adjusted by dip switch on the carrier board.	CPLD_BM = '0'
Blink sequence ***ooooo	SD card boot mode and software boot mode selection not active	Boot mode is adjusted by dip switch on the carrier board.	CPLD_BM = '0'
Blink sequence ****oooo	JTAG boot mode and software boot mode selection active	i2cset -y 1 0x20 0x01 0x91 in linux console	CPLD_BM = '1'
Blink sequence *****ooo	QSPI boot mode and software boot mode selection active	i2cset -y 1 0x20 0x01 0x92 in linux console	CPLD_BM = '1'
Blink sequence *****	eMMC boot mode and software boot mode selection active	i2cset -y 1 0x20 0x01 0x93 in linux console	CPLD_BM = '1'
ON	SD card boot mode and software boot mode selection active	i2cset -y 1 0x20 0x01 0x90 in linux console	CPLD_BM = '1'

Note: asterisk mean one blink. So for example \*\*oooooooo mean 2 time blink with a longer break(with the time of 6 blinks)

## I2C interface

CPLD firmware consists of a i2c t GPIO block. This subsystem provides i2c protocol interface to 32-bit (4 x 8-bit) (GPIO\_input[31:0]) registers for reading from CPLD and (4 x 8-bit) (GPIO\_output[31:0]) registers for writing in CPLD as general purpose parallel input and output (I/Os). The written and read data is communicated from/to FPGA via i2c bus interface protocol. The address of this block in the firmware is 0x20. In this case related i2c bus is bus 1.

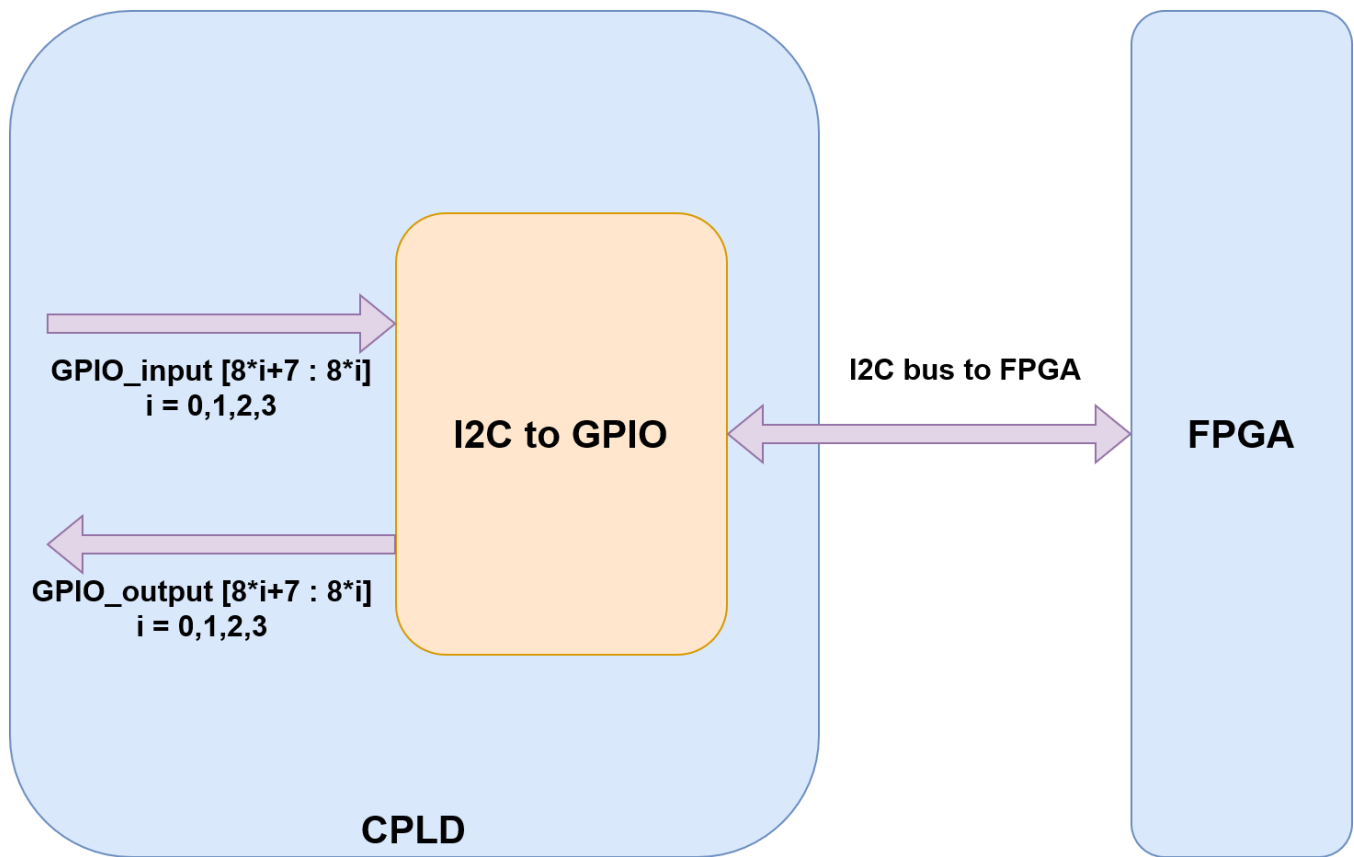

Register	Direction in CPLD	Address
GPIO_input[7:0]	Output (reading from CPLD)	0x00
GPIO_input[15:8]	Output (reading from CPLD)	0x01
GPIO_input[23:16]	Output (reading from CPLD)	0x02
GPIO_input[31:24]	Output (reading from CPLD)	0x03
GPIO_output[7:0]	Input (writing to CPLD)	0x00
GPIO_output[15:8]	Input (writing to CPLD)	0x01
GPIO_output[23:16]	Input (writing to CPLD)	0x02
GPIO_output[31:24]	Input (writing to CPLD)	0x03

## NOSEQ pin

This pin in PCB REV04 with old CPLD firmware version (REV04) is used as boot mode pin select. If CPLD is programmed with SC0820\_qspl\_sd\_jtag.jed as jed file and NOSEQ is high, JTAG boot mode will be selected. For PCB REV05 or PCB REV04 with new CPLD firmware (CPLD firmware REV05) NOSEQ pin can be used by user as GPIO pin and accessed via i2c interface. In this case the following table can be used:

NOSEQ pin as output	Condition	Command in linux console
'1'	GPIO_output(16) = '1'	i2cset -y 1 0x20 0x02 0x01
'0'	GPIO_output(16) = '0'	i2cset -y 1 0x20 0x02 0x00
NOSEQ pin as input	Description	Command in linux console
Reading state of NOSEQ pin	GPIO_input(16) = NOSEQ	i2cget -y 1 0x20 0x02

## Access to CPLD Registers

CPLD registers can be accessed via i2c interface. In the following table is shown how these registers can be read or written:

Register	Direction in CPLD	Address	Related instruction in linux console to access the register
GPIO_input[7:0]	Output (reading from CPLD)	0x00	i2cget -y 1 0x20 0x00
GPIO_input[15:8]	Output (reading from CPLD)	0x01	i2cget -y 1 0x20 0x01
GPIO_input[23:16]	Output (reading from CPLD)	0x02	i2cget -y 1 0x20 0x02
GPIO_input[31:24]	Output (reading from CPLD)	0x03	i2cget -y 1 0x20 0x03
GPIO_output[7:0]	Input (writing to CPLD)	0x00	i2cset -y 1 0x20 0x00 <data>
GPIO_output[15:8]	Input (writing to CPLD)	0x01	i2cset -y 1 0x20 0x01 <data>
GPIO_output[23:16]	Input (writing to CPLD)	0x02	i2cset -y 1 0x20 0x02 <data>
GPIO_output[31:24]	Input (writing to CPLD)	0x03	i2cset -y 1 0x20 0x03 <data>

Some of these registers are using to show some information same as CPLD revision and boot mode while booting.

Register	Address	related data	Read/write by user	Description
GPIO_input[7:0]	0x00	CPLD REVISION (8 bits)	No	

GPIO_input[15:8]	0x01	"00" & BOOTMODE_GEN (2 bits) & PUDC (1 bit) & CPLD_BM (1 bit) & BOOT_MODE (2 bits)	No	<p>BOOTMODE_GEN is a generic parameter in firmware code to select type of jed-file. For example if this parameter is 3 , then by programming the related jed-file the user can have all boot mode options. (QSPI/JTAG/SD Card/eMMC).</p> <p>PUDC is the state of PUDC pin of FPGA.</p> <p>CPLD_BM is a parameter to show if boot mode selection is executed via hardware ( if low) or software (if high)</p> <p>BOOT_MODE shows selected boot mode.</p>
GPIO_input8[16]	0x02	NOSEQ pin	Yes	
<b>Register</b>	<b>Address</b>	<b>related data</b>		<b>Description</b>
GPIO_output[16]	0x02	NOSEQ pin	Yes	

If CPLD firmware version is REV05, then boot mode, CPLD revision and some features of the board will be displayed in the linux console via FSBL code while booting. The format of these informations are shown in the following:

Information	Displayed in Linux console	Description
CPLD Revision	CPLD_REV = <cpld revision>	
Boot mode selection procedure	CPLD_BM = < bm selection procedure>	<ul style="list-style-type: none"> <li>If boot mode via hardware is selected Deactive(0)</li> <li>If boot mode via software (in linux console or via FSBL code) is selected Active(1)</li> </ul>
Jed file that on CPLD is programmed	BOOTMODE_GEN = < jed file type>	<ul style="list-style-type: none"> <li>Jed file type can be one of the following types : <ul style="list-style-type: none"> <li>(0) QSPI/SD</li> <li>(1) QSPI/JTAG</li> <li>(2) JTAG/SD</li> <li>(3) default QSPI/JTAG /SD/eMMC</li> </ul> </li> </ul>
PUDC pin state	PUDC_MODE = <pudc state>	<ul style="list-style-type: none"> <li>PUDC can have one of the following state: <ul style="list-style-type: none"> <li>Pull-up activated (0)</li> <li>Pull-up deactivated (1)</li> </ul> </li> </ul>



Boot mode	BOOT_MODE = <boot mode>	<ul style="list-style-type: none"> <li>The following boot modes can displayed: <ul style="list-style-type: none"> <li>◦ eMMC (0)</li> <li>◦ JTAG (1)</li> <li>◦ QSPI (2)</li> <li>◦ SD Card (3)</li> </ul> </li> </ul>
-----------	-------------------------	--

The CPLD revision, boot mode and other informations will be displayed while booting as shown:

```
TE0820 TE_XFabi_BoardInit_Custom
=====
Initializing I2C Bus ...
Reading CPLD register
CPLD_REV=05
CPLD_BM=Deactive(0)
BOOTMOD_GEN=3 (default QSPI/JTAG/SD/eMMC)
RDC_MODE=Pull-up activated(0)
BOOT_MODE=SD Card(3)
=====
TE0820 TE_XFabi_HookAfterBISDownload_Custom
=====
```

**All information while booting**

If PCB revision is REV04 and CPLD firmware version is older than REV05 (for example REV04) , then it will not be displayed these informations same as boot mode while booting and the following message will be displayed:

```
TE0820 TE_XFabi_HookAfterBISDownload_Custom
=====
Initializing I2C Bus ...
=====
Please check the firmware version, CPLD firmware version is older than REV05, please update then CPLD firmware!
=====
NOTICE: BL31: v2.4(release):main_release_v2.4_2021.1_update1-23-g910849d9
NOTICE: BL31: Build : 074d124, Oct 23 2021
```

**Message while booting if CPLD firmware version is old for PCB REV04**

## Appx. A: Change History

For PCB REV01 and REV02 Documentation available on: [TE0820-REV01\\_REV02 CPLD](#)

## Revision Changes

- REV04 to REV05
  - Adding configuration of boot mode in linux console and via generic parameters
  - PGOOD pin used as boot mode selector pin.
  - Adding boot mode configuration via hardware
  - JTAG time constraint correction
  - Adding i2c to gpio ip (i2c\_slave.vhd)
  - LED function is changed.
  - New generic parameter defined : PCB\_REV
  - EN1 pin
    - is renamed to RST\_EN.
    - pin is input for PCB\_REV=4 and it is enable pin same as before.
    - is reset output for PCB\_REV=5 or newer.
- REV03 to REV04
  - PCB REV03 support only
  - X1 is input for USER LED
  - X0 select X0 or Firmware Blink status to User LE
  - blink modes for QSPI/SD firmware
- REV02 to REV03
  - new Boot Mode variants

- new X0 status blink sequencing
- REV01 to REV02
  - Boot Mode variants
  - X1
  - Remove ERR\_STATUS

## Document Change History

To get content of older revision got to "Change History" of this page and select older document revision number.

Date	Document Revision	CPLD Firmware Revision	Supported PCB Revision	Authors	Description
		REV05	REV04,REV05		<ul style="list-style-type: none"> <li>add LED Designator</li> </ul> <p>Error rendering macro 'page-info'</p> <p>Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevel</p>
2022-10-05	v.3	REV05	REV04,REV05	Mohsen Chamanbaz	<ul style="list-style-type: none"> <li>REV05 release</li> <li>Firmware release for PCB REV04 (SC-PGM-TE0820-04_SC820-05_20221005.zip)</li> <li>Firmware release for PCB REV05 (SC-PGM-TE0820-05_SC820-05_20221005.zip)</li> <li>Firmware release ()</li> <li>Access to boot mode in linux console or FSBI code</li> <li>Indicating CPLD revision , boot mode and PUDC state while booting</li> </ul>
2018-08-29	v.2	REV04	REV03	John Hartfiel	<ul style="list-style-type: none"> <li>typo correction</li> </ul>
06 Jul 2018	v.1	REV04	REV03	John Hartfiel	<ul style="list-style-type: none"> <li>Revision 04 finished</li> <li>separate page for PCB REV01 and REV02</li> </ul>

06 Jul 2018	v.1	REV04	REV03	<div> <div></div> <div> Error rendering macro 'page-info'  Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevel </div> </div>	<ul style="list-style-type: none"> <li>Initial release</li> </ul>
	All			<div> <div></div> <div> Error rendering macro 'page-info'  Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevel </div> </div>	

## Appx. B: Legal Notices

### Data Privacy

Please also note our data protection declaration at <https://www.trenz-electronic.de/en/Data-protection-Privacy>

### Document Warranty

The material contained in this document is provided “as is” and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

### Limitation of Liability

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

### Copyright Notice

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

### Technology Licenses

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

## Environmental Protection

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

## REACH, RoHS and WEEE

### REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of [REACH](#). The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no [SVHC \(Substances of Very High Concern\) on the Candidate List](#) are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the [European Chemicals Agency \(ECHA\)](#).

### RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

### WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Error rendering macro 'page-info'

Ambiguous method overloading for method jdk.

proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]