Si5395

Software

Silicon Labs ClockBuilder Pro software should be used to prepare the register file. Projects are included on the most reference designs.

Download: ClockBuilder Pro

Procedure:

- 1. Install and start ClockBuilder
- 2. Open "/misc/SI5395/Si5395-RevA-0_DSPLL0.slabtimeproj"
- 3. Modify settings
- 4. Export Register File select C code header save to file

I2C Configuration

Volatile memory

For Zynq based system SI5395can be initialized during FSBL execution. For FPGA based modules init can be done by the application MicroBlaze.

Examples are included in the reference designs.

Procedure with FSBL or MicroBlaze c code:

1. Replace Header files from modified FSBL template or SCU FPGA projects with exported header file and regenerate software.

Procedure with Clock Builder Pro:

1. Open/Create Project with CLK Builder Pro



2. Set correct Host Interface (I2C address and IO Voltage)

3. Program Design to SI5395 - 🗆 × ClockBuilder Pro v2.27 & SILICON LABS Loaded Si5345 design from S:\tmp\Si5345-RevB-0808-02A-Project.slabtimeproj. Edit Configuration with Wizard
Design ID & Notes - Revision - Host Interface - XA/XB Free Run - ZDM - Inputs - Input Select - Outputs - DCO Planner - I/O Skew - Output Drivers - DSPLL - IOS - OOF -Field Programmer Detected Target: Wired to PCB (serial) Write Design to DUT Open EVB GUI Save Design to Project File
Your configuration is stored to a project file, which can be opened in ClockBuilder Pro at a later time. You can export your configuration to a format suitable for in-system programming. Design Report & Datasheet Addendum Documentation You can view a <u>design report (text)</u> or create a <u>draft datasheet addendum (PDF)</u> for your design. Si5345/44/42 Datasheet Si5345 EVB User's Guide ? Ask for Help Have a question about your design? Click here to get assistance Silicon Labs Cloud Services
You can create a custom part number for your design, which can be used to order factory pre-programmed devices. Or request a phase noise report for this design. ☐ Frequency Plan Valid ☐ 5 Warnings ☐ Pd: 928 mW, Tj: 89 °C Home Close

Non-volatile memory (NVM)

NVM can be programmed on the module. NVM is only two time programmable! NVM is normaly not preprogrammed an can be done by costumer.

Therefore SI Clock Builder Pro Software and Clock Builder Pro Field Programmer are necessary.


Procedure:

- 1. Connect GND, I2C-SCL and I2-SDA_SDIO with SI5395 I2C bus of the board.
- 2. Connect USB to PC and Power on the module
- 3. Open Clock Builder Pro and select NVM Program Tool



4. Select SI5395 project and set correct Host Interface (I2C address and IO Voltage)

5. Scan device

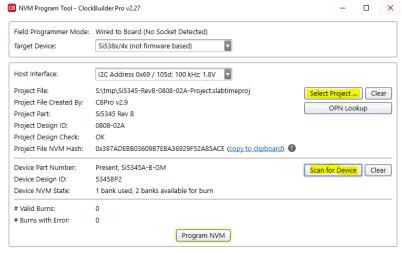

6. Program NVM

Links

- Silicon Labs UG286: ClockBuilderPro™Field Programmer Kit
- si5395-94-92-a-datasheet.pdf Data sheet
 si5395-94-92-family.pdf- Register description