# **TEI0023 TRM**

#### Download PDF version of this document.

#### **Table of Contents**

- Overview
  - Key Features
  - Block Diagram
  - Main Components
  - Initial Delivery State
  - Configuration Signals
- Signals, Interfaces and Pins
  - I/Os on Pin Headers and Connectors
  - FPGA I/O Banks
  - Micro-USB Connector
  - JTAG Interface
  - Test Points
- On-board Peripherals
  - SDRAM
    - FTDI FT2232H
    - SPI Flash
    - EEPROM
    - ADC • LEDs

    - Push Bottuns
  - Clock Sources
- Power and Power-On Sequence
  - Power Supply
  - Power Consumption
  - Power Distribution Dependencies
  - Power-On Sequence
  - Power Rails
  - Bank Voltages
- Technical Specifications
  - Absolute Maximum Ratings
  - Recommended Operating Conditions
- Physical Dimensions
   Currently Offered Variants
- Revision History
  - Hardware Revision History
    - Document Change History
- Disclaimer
  - Data Privacy
    - Document Warranty
    - Limitation of Liability
    - Copyright Notice

    - Technology Licenses
    - Environmental Protection
    - REACH, RoHS and WEEE

#### Overview


The Trenz Electronic TEI0023 is a commercial-grade, low cost and small size module integrated with Intel® MAX 10. Intel MAX 10 devices are the ideal solution for system management, I/O expansion, communication control planes, industrial, automotive, and consumer applications.

Refer to http://trenz.org/tei0023-info for the current online version of this manual and other available documentation.

#### **Key Features**

Intel® MAX 10 FPGA [10M08SAU169C8G]


- Package: UBGA-169
- Speed Grade: C8 (Slowest)
- Temperature: 0°C to 85°C (Commercial)
- Package compatible device 10M08..10M16 as assembly variant on request possible
- SDRAM Memory up to 32 Mbyte (8Mbyte default)
- USB 2.0 Multipurpose UART/FIFO IC (FT2232H)
  - ° 4 Kbit EEPROM Memory for FTDI configuration data
  - Micro USB Receptacle (communication and power)
- SPI Flash NOT INSTALLED (only special option)
- 8x User LED's
- 18 Bit 2 MSPS Analog to Digital Converter
- 2x SMA Female Connector
- I/O interface: 23x GPIO Arduino MKR compatible
- Power Supply: 5V
- Dimension: 86.5mm x 25mm
- Fully-Differential Programmable-Gain Instrumentation Amplifier

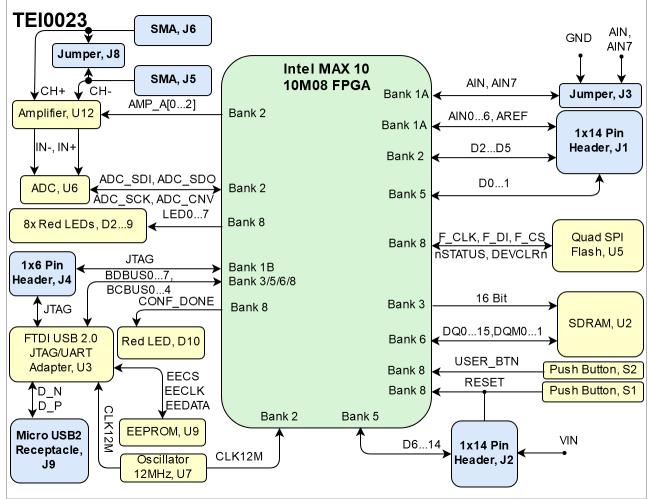

#### Block Diagram

TEI0023 block diagram

#### **Main Components**

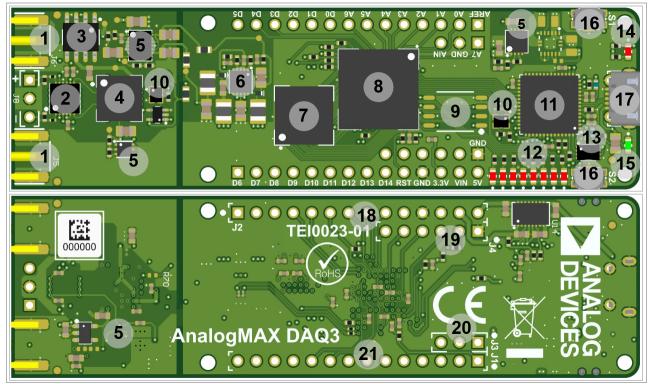

#### **TE0023** main components

- 1. SMA Connector, J5...6
- 2. Amplifier, U12
- 3. Voltage Reference, U8
- 4. Analog to Digital Converter, U6
   5. Voltage Regulator, U4 U10 U13 U16
- 6. Switching Voltage Regulator, U11
- 7. SDRAM Memory, U2 8. Intel® MAX 10 FPGA, U1
- 9. SPI Flash Memory, U5 (not populated)
- 10. Oscillator, U7 U19
- 11. FTDI USB to JTAG/FIFO Adapter, U3
- 12. User LEDs, D2...9
- FTDI Configuration EEPROM, U9
   Configuration/Status LED (Red) , D10
   Power-On LED (Green), D1
- 16. Push Button, S1...2
- 17. Micro USB Connector, J9
- 18. 1x14 Pin Header, J2 (Not assembled)
- 19. 1x6 Pin Header, J4 (Not assembled) 20. 1x4 Pin Header, J3 (Not assembled)
- 21. 1x14 Pin Header, J1 (Not assembled)

## **Initial Delivery State**

Storage device name Content Notes	Storage device name	Content	Notes
-----------------------------------	---------------------	---------	-------

Quad SPI Flash	N/A	Not populated
EEPROM	Programmed	FTDI configuration

Initial delivery state of programmable devices on the module

## **Configuration Signals**

The FPGA configuration for Intel MAX 10 FPGAs can be stored through JTAG interface (using a \*.POF file) on the FPGA itself since the Intel MAX 10 FPGA offers non-volatile configuration memory on chip. The FPGA configuration is loaded from the non-volatile memory when the board is powered up. To configure the FPGA directly, the JTAG interface can be used to configure the FPGA volatile (using a \*.SOF file), means the configuration is lost after power off.

FPGA Reconfigration can be triggered by pressing push button S1.

Signal	Push Button	Pin Header	Note
RESET	S1	J2	Connected to nCONFIG

Boot process.

# Signals, Interfaces and Pins

### I/Os on Pin Headers and Connectors

FPGA Bank	Connector Designator	I/O Signal Count	Voltage Level	Notes
Bank 1A	J1	7	3.3V	AIN06
Bank 1B	J4	5	3.3V	JTAG interface
Bank 2	J1	4	3.3V	DIO25
Bank 5	J2	9	3.3V	DIO614
	J1	2	3.3V	DIO01
Bank 8	J2	1	3.3V	RESET

General I/Os to Pin Headers and connectors information

#### **FPGA I/O Banks**

FPGA Bank	I/O Signal Count	Connected to	Notes
Bank 1A	7	1x14 Pin header, J1	AIN06
	1	Jumper, J3	AIN7
Bank 1B	5	1x6 Pin header, J4	JTAG_EN, TDI, TDO, TMS, TCK
Bank 2	1	12MHz Oscillator, U7	CLK12M
	4	1x14 Pin header, J1	D25
	4	A2D, U6	ADC_SDI, ADC_SDO, ADC_SCK, ADC_CNV
	3	Amplifier, U12	AMP_A0, AMP_A1, AMP_A2
	1	A2D, U6	ADC_PWR_EN1
	1	100MHz Oscillator, U19	CLK_EN

22	SDRAM, U2	RAM_ADDR_CMD
1	A2D, U6	PDB_AMP
9	1x14 Pin header, J2	DIO614
2	1x14 Pin header, J1	DIO01
1	D12_R	DIO12
16	SDRAM, U2	DQ015
2	SDRAM, U2	DQM01
1	D11_R	DIO11
1	A2D, U6	PDB_REF
8	User Red LEDs, D29	LED18
6	SPI Flash, U5	F_CS, F_CKL, F_DI, F_DO, nSTATUS, DEVCLRn
1	Red LED, D10	CONF_DONE
6	FTDI JTAG/UART Adapter, U3	BDBUS05
1	Push Button, S2	USER_BTN
	1         9         2         1         16         2         1         8         6         1         6	A2D, U6           9         1x14 Pin header, J2           2         1x14 Pin header, J1           1         D12_R           16         SDRAM, U2           2         SDRAM, U2           1         D11_R           1         A2D, U6           8         User Red LEDs, D29           6         SPI Flash, U5           1         Red LED, D10           6         FTDI JTAG/UART Adapter, U3

FPGA I/O Banks

## **Micro-USB Connector**

The Micro-USB connector J9 provides an interface to access the FIFO/UART and JTAG functions via FTDI FT2232H chip. The use of this feature requires that FTDI USB drivers are installed on your host PC.

Pins	Connected to	Note
VBUS	USB_VBUS	
D+	FTDI FT2232H U3, DP pin	
D-	FTDI FT2232H U3, DM pin	

Micro USB-2 connector pins

### **JTAG Interface**

JTAG access to the TEI0023 FPGA through pin header connector J4. This is normally not needed as there is on-board USB JTAG functionality.

JTAG Signal	Pin Header Connector	Note
TMS	J4-6	
TDI	J4-5	
TDO	J4-4	
тск	J4-3	
JTAG_EN	J4-2	Pulled-up to 3.3V

JTAG pins connection

#### **Test Points**

Test Point	Signal	Connected to	Notes
TP1	+1.8 V	V_Lin, U13 A2D, U12	
TP2	VREF_OUT	V_Lin, U8 A2D, U6	
TP6	+14V_A	Lin, U10 Amplifier, U12	
TP7	-14V_A	V_Lin, U10 Amplifier, U12	
TP8	+14.5V	V_Switch, U11 / D11 L6 / V_Lin u10	
TP9	-14.5V	V_Switch, U11 / L12 L7 / V_Lin u10	
TP10	+5V5_A	u16 V_Lin, U8 / A2D, U12	

**Test Points Information** 

# **On-board Peripherals**

Chip/Interface	Designator	Notes
SDRAM	U2	
FTDI FT2232H	U3	JTAG/UART/FIFO Adapter
SPI Flash	U5	
EEPROM	U9	
Oscillator	U7	12 MHz clock source
ADC	U12	Analog to Digital Converter
Push Buttons	S12	
8x User LEDs	D29	Red LEDs

On board peripherals

#### **SDRAM**

TEI0023 is equipped with a Winbond 64 MBit (8 MByte) SDRAM chip in standard configuration, variants with 256 Mbit (32 MByte) memory density are also available. The SDRAM chip is connected to the FPGA bank 3 and 6 via 16-bit memory interface.

SDRAM I/O Signals	Signal Schematic Name	Connected to	Notes
Address inputs	A0 A13	bank 3	-
Bank address inputs	BA0 / BA1	bank 3	-
Data input/output	DQ0 DQ15	bank 6	-
Data mask	DQM0 DQM1	bank 6	-
Clock	CLK	bank 3	-
Control Signals	CS	bank 3	Chip select
	СКЕ	bank 3	Clock enable
	RAS	bank 3	Row Address Strobe
	CAS	bank 3	Column Address Strobe
	WE	bank 3	Write Enable

#### SDRAM interface IOs and pins

### FTDI FT2232H

The FTDI chip U3 converts signals from USB2 to a variety of standard serial and parallel interfaces. Refer to the FTDI data sheet to get information about the features of the FT2232H chip. FTDI FT2232H chip channel A is used in MPPSE mode for JTAG. Channel B is configured to be used as in async FIFO mode, this is default mode when using preprogrammed FTDI configuration. In this mode the communication from host PC looks like normal UART but from the FTDI side it is 8 bit FIFO style interface.

The configuration of FTDI FT2232H chip is pre-programmed on the EEPROM U9.

FTDI Chip U3 Pin	Signal Schematic Name	Connected to	Notes
ADBUS0	тск	FPGA bank 1B, pin G2	JTAG interface
ADBUS1	TDI	FPGA bank 1B, pin F5	
ADBUS2	TDO	FPGA bank 1B, pin F6	
ADBUS3	TMS	FPGA bank 1B, pin G1	
BDBUS0	BDBUS0	FPGA bank 8, pin A4	User configurable
BDBUS1	BDBUS1	FPGA bank 8, pin B4	User configurable
BDBUS2	BDBUS2	FPGA bank 8, pin B5	User configurable
BDBUS3	BDBUS3	FPGA bank 8, pin A6	User configurable
BDBUS4	BDBUS4	FPGA bank 8, pin B6	User configurable
BDBUS5	BDBUS5	FPGA bank 8, pin A7	User configurable
BDBUS6	BDBUS6	FPGA bank 6, pin C11	User configurable
BDBUS7	BDBUS7	FPGA bank 3, pin J7	User configurable
BCBUS0	BCBUS0	FPGA bank 5, pin J9	User configurable
BCBUS1	BCBUS1	FPGA bank 3, pin K5	User configurable
BCBUS2	BCBUS2	FPGA bank 3, pin L4	User configurable
BCBUS3	BCBUS3	FPGA bank 3, pin L5	User configurable
BCBUS4	BCBUS4	FPGA bank 3, pin N12	User configurable

FTDI chip interfaces and pins

#### **SPI Flash**

Optional SPI flash device maybe assembled in custom variants, normally it is not populated.

Signal Schematic Name	Connected to	Notes
F_CS	FPGA bank 8, pin B3	Chip select
F_CLK	FPGA bank 8, pin A3	Clock
F_DI	FPGA bank 8, pin A2	Data in / out
nSTATUS	FPGA bank 8, pin C4	Data in / out, configuration dual-purpose pin of FPGA
DEVCLRN	FPGA bank 8, pin B9	Data in / out, configuration dual-purpose pin of FPGA
F_DO	FPGA bank 8, pin B2	Data in / out

Quad SPI Flash memory interface

#### **EEPROM**

The configuration of FTDI FT2232H chip is pre-programmed in the EEPROM U9.

Schematic	Connected to	Notes	
EECS	FTDI U3, Pin EECS		
EECLK	FTDI U3, Pin EECLK		
EEDATA	FTDI U3, Pin EEDATA		
I2C EEPROM interface MIOs and pins			

#### ADC

The TEI0023-XX-XXA board is equipped with the Analog Devices ADAQ4003BBCZ 18-bit 2MSPS ADC.

Pins	Connected to	Notes
IN+	Instrumentation Amplifier U14, VOUT-	
IN-	Instrumentation Amplifier U14, VOUT+	
SDI	FPGA, Bank 2, pin M2, ADC_SDI	
SDO	FPGA, Bank 2, pin M1, ADC_SDO	
SCK	FPGA, Bank 2, pin N3, ADC_SCK	
CNV	FPGA, Bank 2, pin N2, ADC_CNV	

A2D converter interface and pins

## LEDs

Designator	Color	Connected to	Active Level	Note
D29	Red	LED18	Active High	User LEDs
D10	Red	CONF_DONE	Active Low	Configuration DONE LED
D1	Green	3.3V	Active High	After power on it will be on.

On-board LEDs

#### **Push Bottuns**

Designator	Connected to	Functionality	Note	
S1	RESET	General reset		
S2	USER_BTN	User push button	Connected to FPGA Bank 8.	
On board Duck Duttons				

**On-board Push Buttons** 

## **Clock Sources**

Clock Source	Schematic Name	Frequency	Note
Microchip MEMS Oscillator, U7	CLK12M	12.00 MHz	Connected to FTDI FT2232 U3, pin 3.
			Connected to FPGA Bank 2, pin H6.

Osillators

# Power and Power-On Sequence

## **Power Supply**

Power supply with minimum current capability of 1A for system startup is recommended.


## **Power Consumption**

FPGA	Typical Current		
Intel MAX 10 10M08 FPGA SoC	TBD*		
Power Consumption			

\* TBD - To Be Determined

Actual power consumption depends on the FPGA design and ambient temperature.

## **Power Distribution Dependencies**

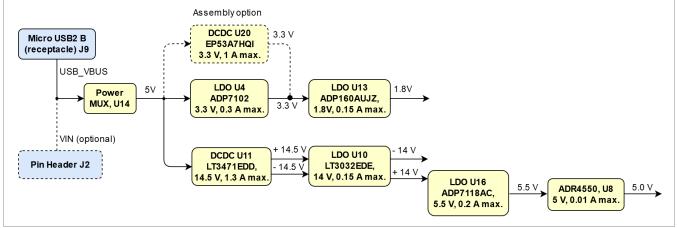

**Power Distribution** 

## **Power-On Sequence**

There is no specific or special power-on sequence, just one single power source is needed. After power on the green LED (D1) will be on.

#### **Power Rails**

Power Rail Name	Connector J2 Pin	Connector J9 Pin	Direction	Notes
VIN	J2-13	-	Input	5 V - Pin Header
3.3V	J2-12	-	Output	
5V	J2-14	-	Output	
USB_VBUS	-	J9-1	Input	5 V - USB Connector

Module power rails.

### **Bank Voltages**

Bank	Schematic Name	Voltage	Notes
Bank 1A	VCCI01A	3.3V	
Bank 1B	VCCI01B	3.3V	
Bank 2	VCCIO2	3.3V	
Bank 3	VCCIO3	3.3V	
Bank 5	VCCIO5	3.3V	
Bank 6	VCCIO6	3.3V	
Bank 8	VCCIO8	3.3V	

Intel MAX 10 SoC bank voltages.

# **Technical Specifications**

### **Absolute Maximum Ratings**

Symbols	Description	Min	Max	Unit	Reference Document
VIN	Supply voltage	4.75	5.25	V	
CH1-, CH1+	Analog input voltage on amplifier U12 pin 1, 10	-20	20	V	LTC6373 datasheet
T_STG	Storage Temperature	-65	+125	°C	

**Absolute Maximum Ratings** 

## **Recommended Operating Conditions**

Operating temperature range depends also on customer design and cooling solution. Please contact us for options.


Symbols	Min	Max	Unit	Reference Document
VIN supply voltage (5.0V nominal)	4.75	5.25	V	
Analog input voltage on amplifier U12 pin 1 (CH1-), 10 (CH1+)	-10	10	V	LTC6373 datasheet
T_OP	0	+85	°C	10M08SAU169C8G datasheet

Recommended operating conditions.

## **Physical Dimensions**

Module size: 25 mm  $\times$  86.5 mm. Please download the assembly diagram for exact numbers.

PCB thickness: 1.598 mm.

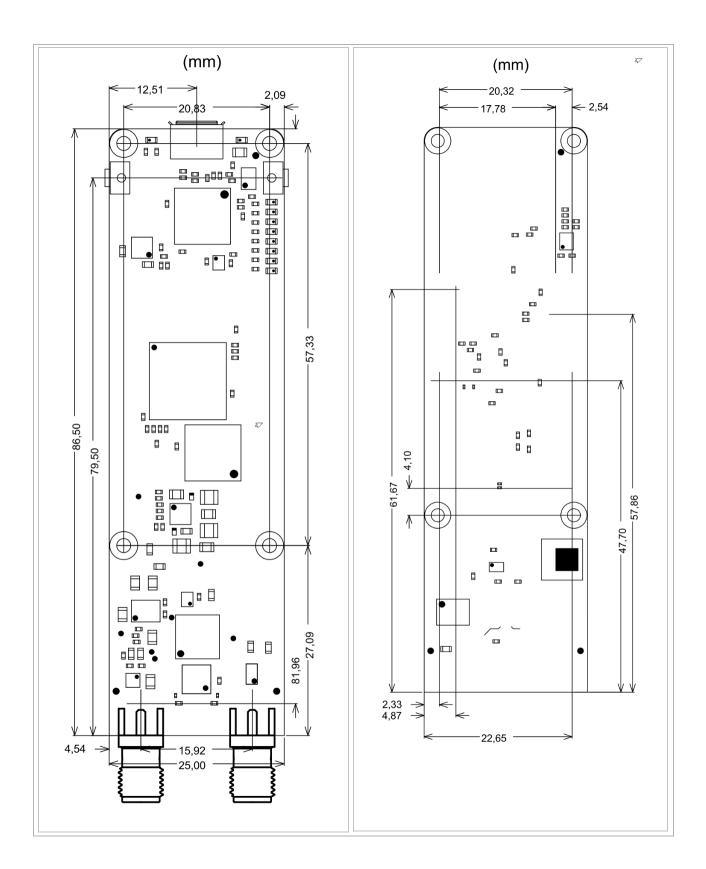

**Physical Dimension** 

# **Currently Offered Variants**

Trenz shop TE0728 overview page		
English page	German page	
Trenz Electronic Shop Overview		

# **Revision History**

# Hardware Revision History

Date	Revision	Changes	Documentation Link
2020-02-03	01	Fill in TRM template	REV01

#### Hardware Revision History

Hardware revision number can be found on the PCB board together with the module model number separated by the dash.



Board hardware revision number.

## **Document Change History**

Date Revision Contributor Description	
---------------------------------------	--

#### Error rendering macro 'pageinfo'

Ambiguous method overloading for method jdk. proxy279.\$Proxy4022#hasCon tentLevelPermission. Cannot resolve which method to invoke for [null, class java. lang.String, class com. atlassian.confluence.pages. Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user. ConfluenceUser, class java. lang.String, class com. atlassian.confluence.core. ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core. ContentEntityObject]


#### Error rendering macro 'pageinfo'

Ambiguous method overloading for method jdk. proxy279.\$Proxy4022#hasCon tentLevelPermission. Cannot resolve which method to invoke for [null, class java. lang.String, class com. atlassian.confluence.pages. Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user. ConfluenceUser, class java. lang.String, class com. atlassian.confluence.core. ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core. ContentEntityObject]

Error rendering macro 'pageinfo' corrected link to Downloa d area

Ambiguous method overloading for method jdk. proxy279.\$Proxy4022#hasCon tentLevelPermission. Cannot resolve which method to invoke for [null, class java. lang.String, class com. atlassian.confluence.pages. Page] due to overlapping prototypes between: [interface com.atlassian.confluence.user. ConfluenceUser, class java. lang.String, class com. atlassian.confluence.core. ContentEntityObject] [interface com.atlassian.user.User, class java.lang.String, class com. atlassian.confluence.core. ContentEntityObject]

2021-02-23	v.41	Antti Lukats	<ul> <li>bugfix change history</li> </ul>
2020-08-20	v.36	Antti Lukats	<ul> <li>correctio n: Key features, overview, USB, SDRAM, SPI section</li> </ul>
2020-02-04	v.33	ED, Kilian Jan	<ul> <li>initial release</li> </ul>

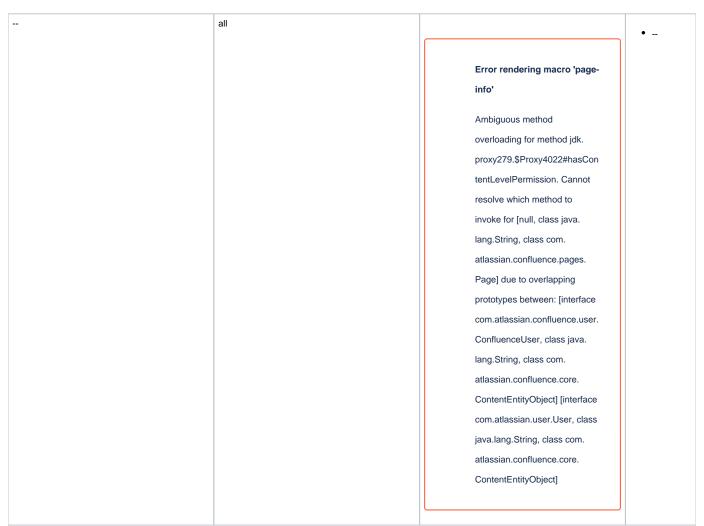

Document change history.

# Disclaimer

## **Data Privacy**

Please also note our data protection declaration at https://www.trenz-electronic.de/en/Data-protection-Privacy

## **Document Warranty**

The material contained in this document is provided "as is" and is subject to being changed at any time without notice. Trenz Electronic does not warrant the accuracy and completeness of the materials in this document. Further, to the maximum extent permitted by applicable law, Trenz Electronic disclaims all warranties, either express or implied, with regard to this document and any information contained herein, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non infringement of intellectual property. Trenz Electronic shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein.

## **Limitation of Liability**

In no event will Trenz Electronic, its suppliers, or other third parties mentioned in this document be liable for any damages whatsoever (including, without limitation, those resulting from lost profits, lost data or business interruption) arising out of the use, inability to use, or the results of use of this document, any documents linked to this document, or the materials or information contained at any or all such documents. If your use of the materials or information from this document results in the need for servicing, repair or correction of equipment or data, you assume all costs thereof.

#### **Copyright Notice**

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Trenz Electronic.

#### **Technology Licenses**

The hardware / firmware / software described in this document are furnished under a license and may be used /modified / copied only in accordance with the terms of such license.

#### **Environmental Protection**

To confront directly with the responsibility toward the environment, the global community and eventually also oneself. Such a resolution should be integral part not only of everybody's life. Also enterprises shall be conscious of their social responsibility and contribute to the preservation of our common living space. That is why Trenz Electronic invests in the protection of our Environment.

#### **REACH, RoHS and WEEE**

#### REACH

Trenz Electronic is a manufacturer and a distributor of electronic products. It is therefore a so called downstream user in the sense of REACH. The products we supply to you are solely non-chemical products (goods). Moreover and under normal and reasonably foreseeable circumstances of application, the goods supplied to you shall not release any substance. For that, Trenz Electronic is obliged to neither register nor to provide safety data sheet. According to present knowledge and to best of our knowledge, no SVHC (Substances of Very High Concern) on the Candidate List are contained in our products. Furthermore, we will immediately and unsolicited inform our customers in compliance with REACH - Article 33 if any substance present in our goods (above a concentration of 0,1 % weight by weight) will be classified as SVHC by the European Chemicals Agency (ECHA).

#### RoHS

Trenz Electronic GmbH herewith declares that all its products are developed, manufactured and distributed RoHS compliant.

#### WEEE

Information for users within the European Union in accordance with Directive 2002/96/EC of the European Parliament and of the Council of 27 January 2003 on waste electrical and electronic equipment (WEEE).

Users of electrical and electronic equipment in private households are required not to dispose of waste electrical and electronic equipment as unsorted municipal waste and to collect such waste electrical and electronic equipment separately. By the 13 August 2005, Member States shall have ensured that systems are set up allowing final holders and distributors to return waste electrical and electronic equipment at least free of charge. Member States shall ensure the availability and accessibility of the necessary collection facilities. Separate collection is the precondition to ensure specific treatment and recycling of waste electrical and electronic equipment and is necessary to achieve the chosen level of protection of human health and the environment in the European Union. Consumers have to actively contribute to the success of such collection and the return of waste electrical and electronic equipment. Presence of hazardous substances in electrical and electronic equipment results in potential effects on the environment and human health. The symbol consisting of the crossed-out wheeled bin indicates separate collection for waste electrical and electronic equipment.

Trenz Electronic is registered under WEEE-Reg.-Nr. DE97922676.

Error rendering macro 'page-info'

Ambiguous method overloading for method jdk.proxy279.\$Proxy4022#hasContentLevelPermission. Cannot resolve which method to invoke for [null, class java.lang.String, class com.atlassian.confluence.pages.Page] due to overlapping prototypes between: [interface com. atlassian.confluence.user.ConfluenceUser, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject] [interface com. atlassian.user.User, class java.lang.String, class com.atlassian.confluence.core.ContentEntityObject]